SDP Security Door Controls


801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS SERIES 1510, 1570, 1580 EMLOCK $^{\ensuremath{\mathbb{R}}}$

The 1500 Series Emlock is mounted to the underside of the header, on the stop side of the door. A TJ mounting kit (optional) can be used when mounting on the hinge side of the door. (Fig. 1D)

The armature is mounted to the door. A hardware kit is provided to compensate for misalignment and wear of the door, by allowing the armature to pivot on it's center point.

1. Inspect the frame header to determine if an angle bracket or filler plate is required. See Figure 1A, 1B, 1C.

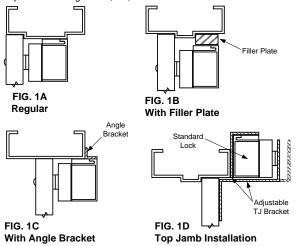

- Fold template as indicated by dotted line. For single doors, locate template against the door and header on the lock jamb side of the frame.
- 3. Mark and drill holes as indicated bt template. For armature plate hole preparation, see Figure 2A, 2B, 2C.
- 4. Mount armature to door. To determine proper hardware (provided), see Figure 2A, 2B, 2C.
- 5. Install mounting plate to header with the interlock detail away from the door side of the stop, with #10 Flt Hd. Screws provided.

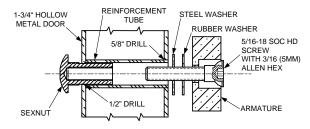


FIG. 2A HOLLOW METAL DOOR From Sexnut side of door, drill exactly 1/2" hole thru one metal thickness only. From Armature side of door, drill 5/8" hole to insert reinforcement tube. Press in sexnut and reinforcement tube all the way and mount armature to door using hardware provided per Figure 2B.

 Holding the magnet housing at each end, engage the entire length of the interlock detail, by pushing towards the door. (If necessary, tap with a soft hammer to ensure proper alignment and engagement).

Caution: The lock body must be held in place until secured with mounting screws. Screws provided inside the housing at each end. Tighten the screws and check alignment.

 Test operation. When all is operating properly, tighten all screws. Install anti-tamper plugs over socket head screw using a soft hammer to avoid damage to the housing.

Electromagnet and armature should be handled carefully. Any damage to the surface such as paint, burrs, dirt and rust may hinder bonding of surface and reduce holding power.

SHOULD THE SURFACE PLATING BE DAMAGED:

Do not touch the lock face with your hands.

Using a soft, clean, dry cloth or abrasive cloth (i.e., Scotch-Brite), clean lock face. Do not use sand paper.

A rust inhibitor such as M1, manufactured by Starret, or LPS3, manufactured by LPS Laboratories (available at most hardware stores) can then be applied.

Apply a coat of inhibitor to armature face also.

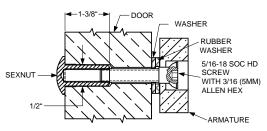


FIG. 2B SOLID DOOR

Drill 3/8" hole thru door. From sexnut side of door, drill <u>exactly</u> 1/2" hole, 1-3/8" deep. Mount armature to door with hardware provided per Figure 2A.

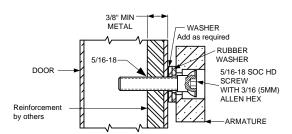


FIG. 2C REINFORCED DOOR Drill and tap for 5/16-18 machine screw. Mount armature to door with hardware provided per Figure 2C.

P:\INSTALLATION INST\Electromagnetic Locks\INST-1500-10-70-80.vsd REV G 02-19 Page 1

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com

OPTIONAL: 1511-DF DRILL FIXTURE

Drill many doors and frames in a fraction of the time.


1511-DF

ELECTRICAL SPECIFICATIONS

Voltage kickback protection standard

SERIES	1510	1570	1580
INPUT VOLTAGE (VDC)	12/24	12/24	12/24
POWER CONSUMPTION (mA)	700/350	250/125	500/250
COIL RESISTANCE (OHMS)	35* (PER COIL)	100* (PER COIL)	60* (PER COIL)
HOLDING FORCE (LBS)	1650	1200	650

***NOTE:** For a proper coil resistance reading, turn off the DC voltage. Use an ohmmeter and measure the resistance between the pins of the plug connector positions E1-E2 and E3-E4

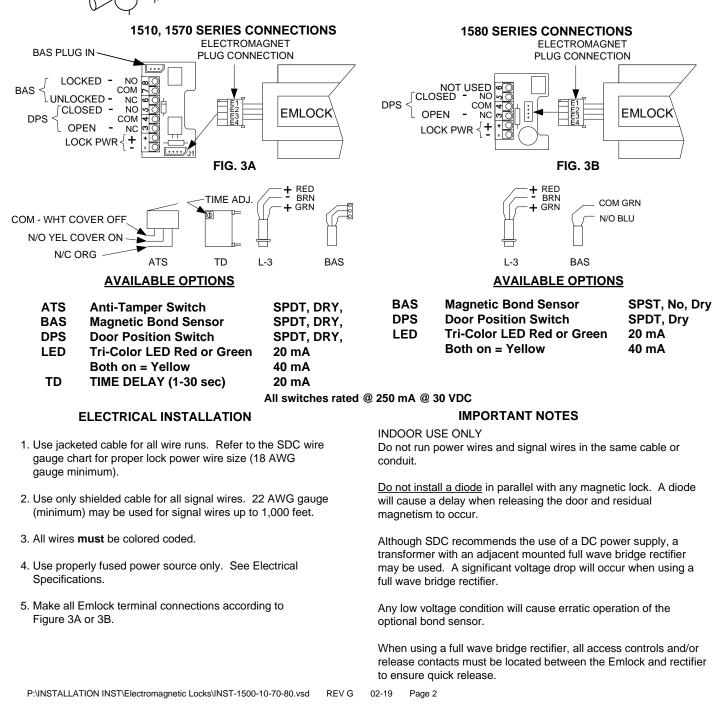

AWG WIRE CHART

To determine the correct wire gauge to use on "one circuit" the following information is required:

- 1. The quantity, voltage, and current draw of all lock(s) to be used.
 - 2. The distance in feet from the power supply to the furthest lock.

Add together the current draw (amps) of all locks on the same circuit. Cross reference the total amps with the distance between the power source and the furthest lock to determine the wire gauge required. All wiring must be installed in accordance with all state and local codes.


DISTANCE IN FEET FROM POWER SOURCE TO FARTHEST LOCKING DEVICE

	AMPS	25	50	75	100	150	200	250	300	400	500	1000
	0.25	18	18	18	18	18	16	16	14	14	12	
Minimum	0.50	18	18	18	16	16	14	12				
Wire	0.75	18	18	16	14	12	12					
	1.00	18	16	14	14	12						
Gauge for	1.50	18	14	12	12							
12 Volts	2.00	16	14	12								
AC or DC	2.50	16	12									

DISTANCE IN FEET FROM POWER SOURCE TO FARTHEST LOCKING DEVICE

	AMPS	25	50	75	100	150	200	250	300	400	500	1000
		18	18	18	18	18	18	18	18	16	16	16
Minimum	0.25	18	18	18	18	18	16	16	14	14	12	
Wire	0.50	18	18	18	18	16	14	14	12	12		
Gauge for	0.75	18	18	16	16	14	14	12	12			
24 Volts	1.00	18	18	16	14	14	12					
AC or DC	1.50	18	16	14	14	12						
	2.00	18	16	14	12							
	2.50											

	TROUBLE SHOOTING	<u> </u>
PROBLEM Emlock releases slowly. (residual magnetism)	CAUSE Control switch wired on AC side of power source.	SOLUTION Control switch must be wired on DC side of power supply.
		When an AC transformer and rectifier are used, the control switch must be wired between the rectifier and the Emlock.
	Field installed diode in parallel with power input.	Remove diode.
Poor holding force.	Armature installed rigidly.	Armature must pivot loosely from its center mounting point to permit full armature contact.
	Low voltage.	Check for proper voltage at the Emlock input. If low, determine if the correct wire gauge is being used to prevent excessive voltage drop.
	Low voltage.	Check power supply load capacity. It must meet or exceed the combined current rating of all locks on the circuit.
	AC voltage input. (Emlock will make a humming noise)	Emlocks require DC input voltage. When AC voltage from a transformer is used, a full wave bridge rectifier must be installed to convert the AC voltage to DC voltage.
No holding force. Door does not lock.	No power.	Check the voltage at the Emlock. If the voltage is low or zero, double check all wire connections and the power supply.
	Input polarity reversed.	Check voltage polarity. Terminal (-) is: Negative. Terminal (+) is: Positive.
	Open circuit in Emlock coil.	Check coil continuity with OHM meter. If reading is high or open, replace the magnet coil. See Fig. 3A and the Resistance Specifications.
	Magnet coil short.	Coil shorts or incorrect wiring will blow fuses. Measure the coil for correct resistance. See Fig. 3A and the Resistance specifications.

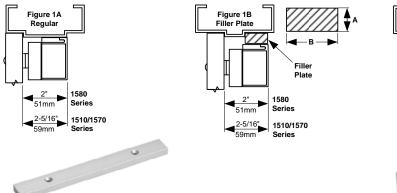

٦

FILLER PLATES: For extension of the stop to provide a proper mounting surface on the underside of the header. See Figure 1B.

FOR 1581 SINGLE EMLOCK MODELS **PART # SIZE A B EP01** 1/8" x 1-1/4" (3 x 32mm)

FP01 FP02	1/6 x 1-1/4 (5 x 321111) 1/4" x 1-1/4" (6 x 32mm)	8-3/4"
FP03	3/8" x 1-1/4" (10 x 32mm)	(222mm)
FP04	1/2" x 1-1/4" (13 x 32mm)	(22211111)
FP05	5/8" x 1-1/4" (16 x 32mm)	

FOR 1511, 1571 SINGLE EMLOCK MODELS

PART #	SIZE	Α	в		
FP11		1/8" x ′	1-1/4" (3	x 32mm)	
FP12		1/4" x ′	1-1/4" (6	x 32mm)	11"
FP13		3/8" x ′	1-1/4" (1	0 x 32mm)	(279mm)
FP14		1/2" x ′	1-1/4" (1	3 x 32mm)	(2751111)
FP15		5/8" x ′	1-1/4" (1	6 x 32mm)	


FOR 1582 DOUBLE EMLOCK MODEL PART # SIZE Δ R

FARI#	SIZE	A	D			
FP30		1/8" x	1-1/4" (3 x 32mm)		
FP31		1/4" x	1-1/4" ((6 x 32mm)		17-1/2"
FP32		3/8" x	1-1/4" (10 x 32mm)	ŀ	(445mm)
FP33		1/2" x	1-1/4" (13 x 32mm)		(44511111)
FP34		5/8" x	1-1/4" (16 x 32mm)		

FOR 1512, 1572 DOUBLE EMLOCK MODELS

PART $\#$ SIZE A B	
FP21 1/8" x 1-1/4" (3 x 32mm)	
FP22 1/4" x 1-1/4" (6 x 32mm)	22"
FP23 3/8" x 1-1/4" (10 x 32mm)	(559mm)
FP24 1/2" x 1-1/4" (13 x 32mm)	(5551111)
FP25 5/8" x 1-1/4" (16 x 32mm)	

• Multiple predrilled and tapped mounting holes to accommodate the use of several different locks on either 4" or 4.5" aluminum frames.

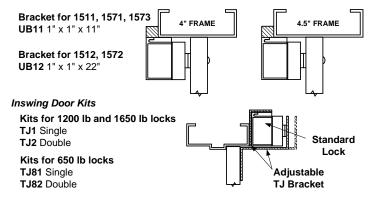



2"

4 ∠ 51mm ►

Angle

1580

Series

Bracket

ANGLE BRACKETS: Used as extension on shallow door frames to provide adequate mounting surface. See Figure 1C.

FOR 1581 SINGLE EMLOCK MODELS

Figure 1C

Angle Bracket

PART #	SIZE	Α	В	
AB01		1"	x 1" (25 x 25mm)	
AB02		1"	x 1-1/2" (25 x 38mm)	8-3/4"
AB03		1-1/2"	x 1-1/2" (38 x 38mm)	(222mm)
AB04		2"	x 1-1/2" (51 x 38mm)	

FOR 1511, 1571 SINGLE EMLOCK MODELS

PART #	SIZE	Α	В	_
AB11		1"	x 1" (25 x 25mm)	
AB12		1"	x 1-1/2" (25 x 38mm)	11"
AB13		1-1/2"	x 1-1/2" (38 x 38mm)	(279mm)
AB14		2"	x 1-1/2" (51 x 38mm)	
			· · · · · · · · · · · · · · · · · · ·	3

FOR 1582 DOUBLE EMLOCK MODEL

PART #	SIZE	Α	В		
AB31		1"	x 1"	(25 x 25mm)	
AB32		1"	x 1-1	/2" (25 x 38mm)	17-1/2"
AB33		1-1/2"	x 1-1	/2" (38 x 38mm)	(445mm)
AB34		2"	x 1-1	/2" (51 x 38mm)	

FOR 1512, 1572 DOUBLE EMLOCK MODELS

PART #	SIZE	Α	в		
AB21		1"	x 1"	(25 x 25mm)	
AB22		1"	x 1-1/2"	(25 x 38mm)	22"
AB23		1-1/2"	x 1-1/2"	' (38 x 38mm)	(559mm)
AB24		2"	x 1-1/2"	(51 x 38mm)	
				· · · · · · · · · · · · · · · · · · ·	

• Field adjustable for 1/2", 5/8" and 3/4" all glass Herculite doors.

Kits for 1511, 1571, 1581 HDB1 Single Kits for 1512, 1572, 1582 HDB2 Double

