


IP Intercom

IPW-1A

Network Intercom Adaptor

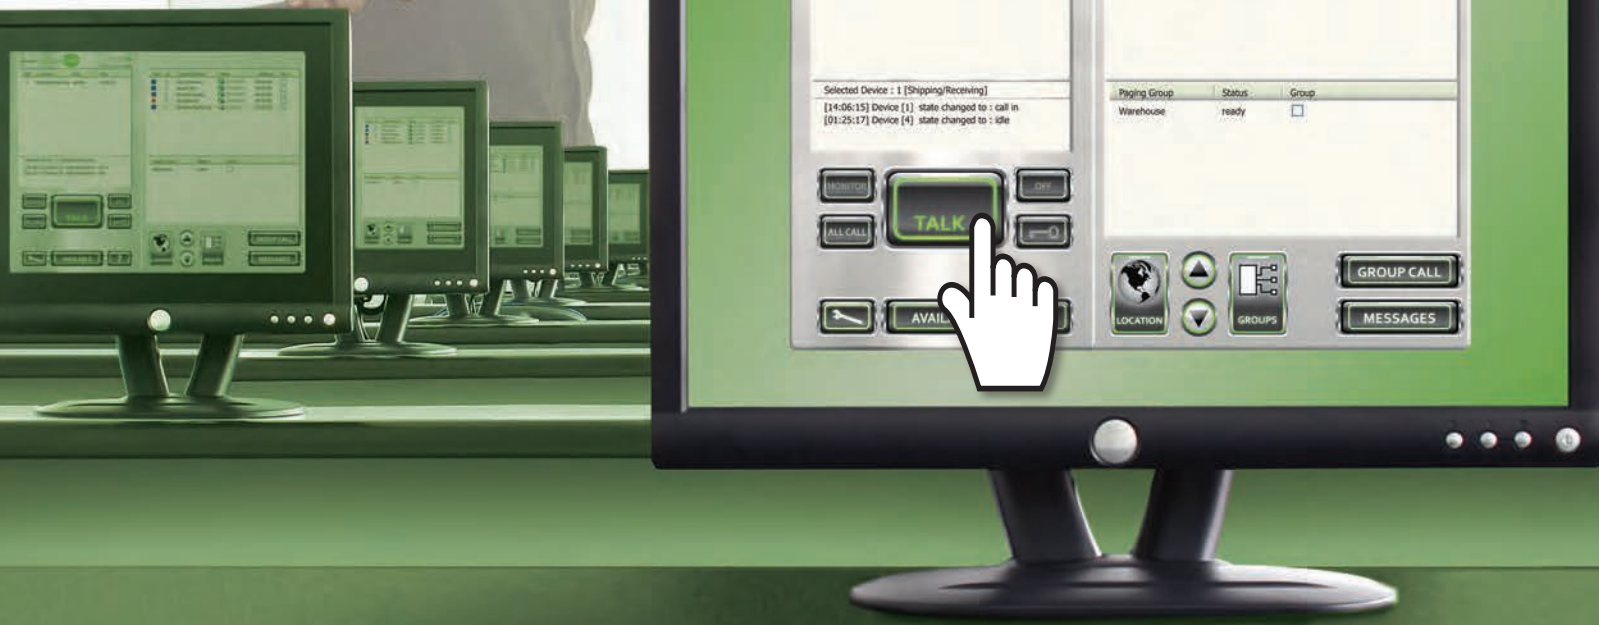

Turn your **PCs** into **intercoms!**

Communicate between an *infinite*



Step 1: Install intercoms *anywhere* communication is needed



Step 2: Wire each intercom to adaptor and connect to nearest network drop

An EASY & affordable IP Solution

- Unlock doors from inside or off site
- Keep track of history with event logging
- Automatically record audio to PC
- Send out public announcements



CENTRAL MONITORING

Communicate to intercoms from a central location or off site facility



SERVICE ENTRANCES

Unlock doors at auxiliary entrances from reception or security offices



amount of stations and computers!



Step 3: Communicate with intercoms using PC software (included)



PARKING & GARAGES

Control unmanned booth stations to increase staff efficiency



AFTER HOURS & HOLIDAYS

Assist employees or visitors remotely when reception or security is closed



IPW-1A Network Intercom Adaptor



* One IPW-1A per station. Intercom Station, door strike & PC sold separately.
Diagram is for illustrative purposes only. Refer to instructions for installation directions.

CommuniCenter Software (included)



- Quick door release from safely inside building
- Switch between "AVAILABLE" & "UNAVAILABLE" when away
- Control any intercom station on the system network
- Broadcast announcements to stations within the system
- Simply mouse click on "TALK" to communicate with connected station
- Listen to activity at selected station for secure, discreet monitoring

Compatible intercom stations (sold separately)



IF-DA
Plastic cover
Surface mount



IE-DC
Plastic and
aluminum cover
Surface mount



 
IE-JA
Stainless Steel
faceplate
Flush mount



IE-SS
Stainless Steel
Flush mount



IE-SSR
Stainless Steel with
red mushroom call button
Flush mount



AX-DM
Plastic cover
Mullion mount

Specifications (one IPW-1A per intercom station)

Case	Aluminum, 1-1/2" x 4-1/4" x 4-15/16"
Door Release	Form C dry contact, 30V AC / DC 1.0A (resistive)
Software	Processor 1GHz or faster 256MB of RAM Windows® XP (SP2) or Windows® Vista
Power Source	15V AC
Connections	RJ45 (10/100 Mbit Ethernet), RS-232C

IPW-1A Contents



IP adaptor,
PT-1211C - 15V AC power supply,
CommuniCenter software CD,
mounting bracket + hardware,
connectors & instructions
(intercom stations sold separately)

Distributed by:

