

[ATX, AEX & ASX Series Lamp / Ballast] INSTALLATION SHEET



LAMP AND BALLAST REPLACEMENT

CAUTION NOTICE: Before replacing lamp, make sure the light is “OFF” for a minimum of 10 minutes or longer to ensure any stored power has dissipated, to avoid electric shock from stored energy in the ballast, and temperature of lens has cooled enough to avoid being burned from high temperature.

The lens cap has a “fine thread”. Grasp the lamp-head-housing (serrated edge behind lens protector), with one and while grasping the lens cap in the other, rotate the lens cap counter clockwise to access the lamp. While removing the lens cap, be careful not to drop lens, spacer and lamp to avoid damage.

While installing the lamp module, inspect the rubber O-rings for chaffing or breakage, Replace if signs of wear. There is a plastic spacer between the lens and the outer reflector. The flat side faces the lens and the slotted side faces the reflector. Check the rubber seal under the clear lens for wear or breakage, replace if signs of wear. A dab of silicon lubricant or low mineral petroleum jelly should be used on the threads of the light head before replacing the lens cap. Be careful not to cross thread and **DO NOT FORCE**, or you will void your warranty and your light will be rendered inoperative.