

Installation Manual: AE-2 Accessory Enclosure

NOTICE TO THE INSTALLER

This manual provides an overview and the installation instructions for the AE-2 Accessory Enclosure.

1. Description

The AE-2 accommodates up to 2 standard size stacker bracket cards. The enclosure size is (WxHxD) 9 3/4" x 8" x 2 1/2".


2. Technical Specifications

Total Expansion Card Capacity	2
Size	9 3/4" L x 8" W x 2 1/2" D

3. Installation

Secure the AE-2 enclosure to a suitable surface using #8 sized screws located in four of the five mounting holes provided. One expansion device can be installed in the location shown using the #6-32 sized hex nuts. An additional expander can be stacked on top of the one that is directly attached to the back box.

Figure 1. Example of Installing an AE-2

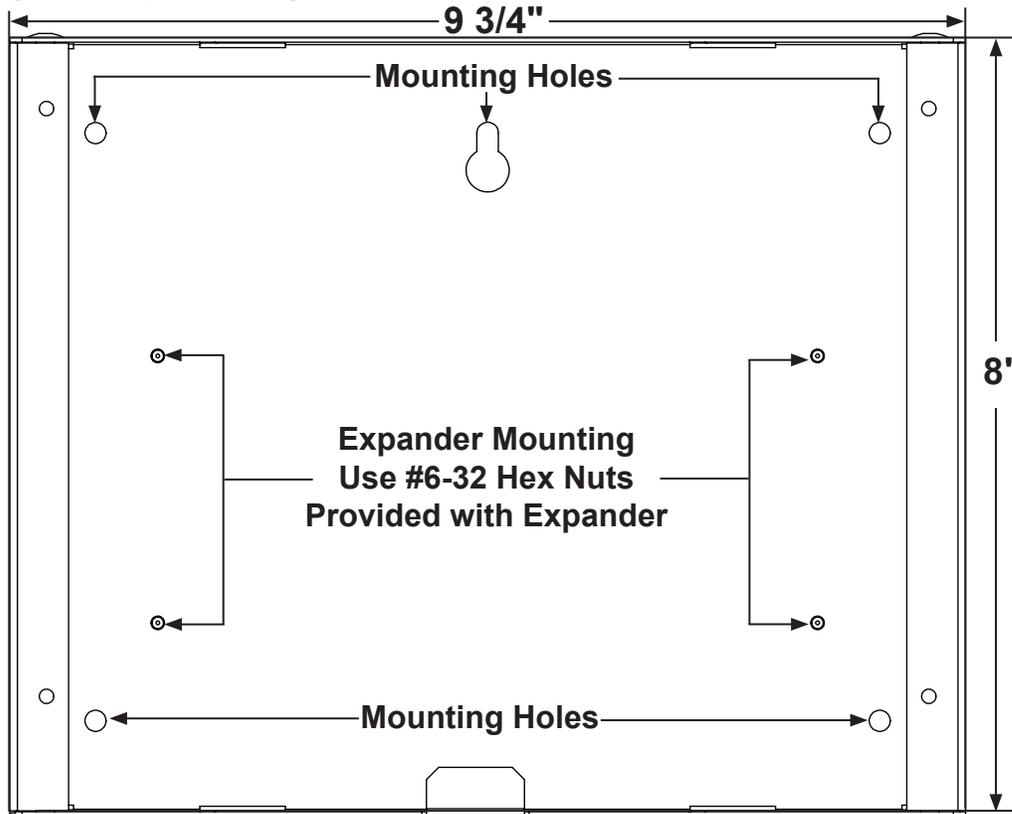

These instructions do not purport to cover all the details or variations in the equipment described, nor provide for every possible contingency to be met in connection with installation, operation and maintenance.

Specifications subject to change without prior notification.

For Technical Assistance contact Potter Electric Signal Company at 866-956-1211.

Actual performance is based on proper application of the product by a qualified professional.

Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purpose, the matter should be referred to a distributor in your region.