

GV-PoE Switch

GV-POE2411 User's Manual



Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.

POE2411-B



© 2016 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and GV series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

July 2016

Contents

1.	Safety Precautions	1
2.	Introduction.....	2
2.1	Product Overview	2
2.2	Key Features	2
2.3	Package Contents.....	4
3.	Hardware Description	5
4.	Preparation for Web Configuration.....	8
5.	User Login.....	10
6.	Configuration	11
6.1	System.....	11
6.2	Ports	13
6.3	VLANs.....	15
6.4	Aggregation.....	16
6.5	LACP.....	17
6.6	RSTP.....	18
6.7	IGMP Snooping	20
6.8	Mirroring.....	21
6.9	Quality of Service	22
6.10	Filter.....	24
6.11	Power over Ethernet	25
6.12	Rate Limit	26
6.13	Storm Control.....	27
7.	Monitoring.....	28
7.1	Statistics Overview	28
7.2	Detailed Statistics	28
7.3	LACP Status	29
7.4	RSTP Status	31
7.5	IGMP Status.....	33
7.6	VeriPHY.....	34
7.7	Ping.....	35
8.	Maintenance.....	36
8.1	Warm Restart.....	36
8.2	Factory Default.....	36
8.3	Software Upload.....	37
8.4	Configuration File Transfer	37
9.	Logout	38
10.	Restoring Default Settings.....	39

11. Specifications	40
--------------------------	----

1. Safety Precautions

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the users are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the users may be required to take adequate measures.

2. Introduction

2.1 Product Overview

The GV-POE2411 is a 24-port 10/100/1000BaseT(X) PoE+ with 4 Combo SFP Rack-mount Web Smart PoE Switch. The switch supports IEEE 802.3at Power over Ethernet standard, maximum 400 W power consumption, and no special network cable is required for connecting your powered devices (PD), such as IP cameras. The switch also provides exceptionally smart Web management features, such as VLAN, QoS, RSTP, IGMP Snooping, LACP, Port Security, etc. The switch is designed for medium or large network environment to strengthen its network connection and efficiency. It also gives you the option of installing it in a 19" cabinet with a rack-mount kit or underneath a desk.

2.2 Key Features

Interface

- Number of Ports: 24
 - 24-port 10/100/1000BaseT(X) with RJ-45 Connectors, PoE+
 - 4-port Gigabit SFP Combo Uplink Port

Performance

- MAC Address: 8 K
- Buffer Memory: 4 M bits
- Jumbo Frames: 9.6 KB
- Transmission Method: Store and Forward Mechanism

Software Feature Description

- Port Management
 - Port Configuration: Enable / Disable such as Port State, Speed / Duplex, Flow Control
 - Port Mirroring: One to one, one to many, many to one mirroring

- Bandwidth Control: Up to 256 levels Bandwidth Control for TX and RX Rate
- Broadcast Storm Control: Broadcast Storm Control and Threshold Setting
- PoE Control: PoE Enable / Disable, PoE Status
- VLAN Setting
 - VLAN Mode: Port-based and Tag-based VLAN
 - Port Based VLAN: 24 ports
 - Tag Based VLAN: Up to 16 VLANs, Available VID from 1~4094
- QoS Setting
 - Supports up to 4 queues
 - Class of Service schemes: 802.1p
 - DSCP
- Security Setting
 - Port Security - IEEE 802.1X
 - TCP / UDP Filtering: Source IP Filter
- Spanning Tree Protocol
 - Version: Support Legacy Spanning Tree Protocol & Rapid Spanning Tree Protocol
- IGMP Snooping V1&V2
- Basic Features
 - Embedded HTTP Web Management
 - User name / Password Authentication Configuration
 - Configuration Backup / Recovery
 - Secure Management

2.3 Package Contents

Before you start to install this switch, verify your package that contains the following items:

1. GV-POE2411 x 1




2. AC Power Cord x 1



3. Screw x 8



4. Rack Mount Kit x 1

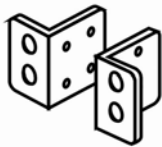

5. User's Manual CD x 1




6. GV-POE2411 Quick Start Guide x 1

3. Hardware Description


This section gives a physical and functional overview on the 24-Port Gigabit Ethernet with 4-Port Combo Gigabit SFP Web Management Switch.

Product Overview

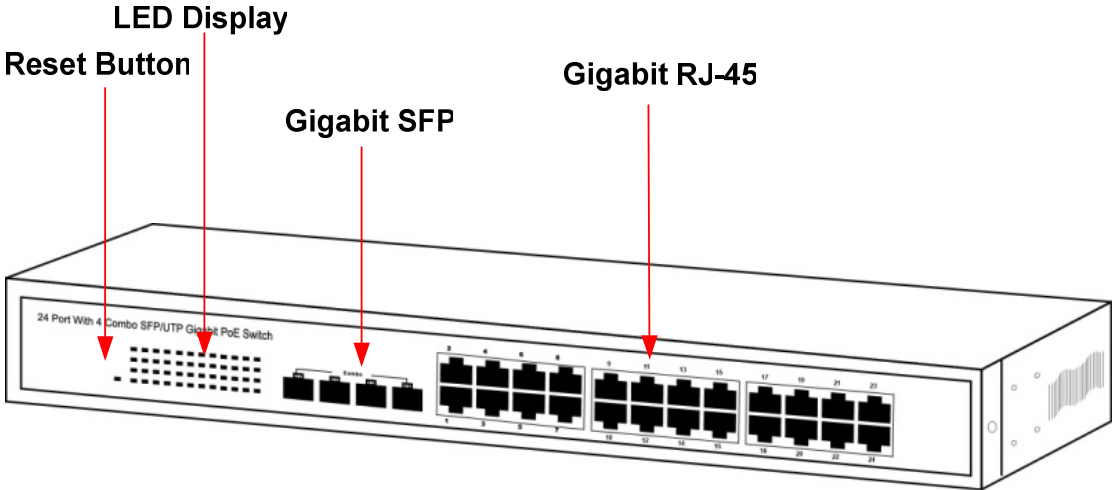

Front Ethernet Ports

The front panel of the Web smart switch consists of 24 10/100/1000BaseT(X) RJ-45 ports and 4 SFP Combo Uplink ports. The LED Indicators are also located on the front panel.

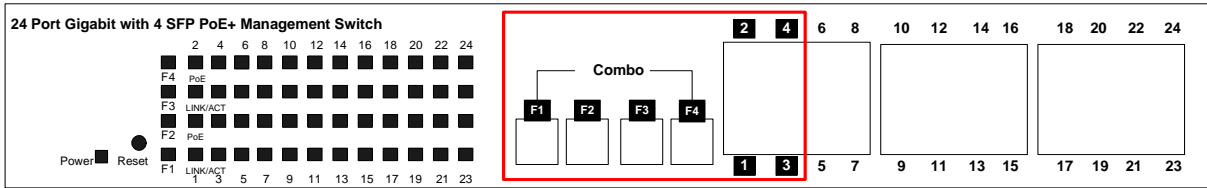

IMPORTANT: The 4 SFP ports labeled F1 ~ F4 are associated with the 4 RJ-45 ports labeled 1 ~ 4 respectively. When one of the two associated ports is used, the other port will not work. For example, if the Gigabit SFP port labeled F1 is used, the Gigabit RJ-45 port labeled 1 will not function.

LED Indicators

The LED Indicators present real-time information of systematic operation status. The following table provides description of LED status and their meaning.

LED	Color/Status	Description	No. of LED
Power	Amber On	Power on	Power
	Off	Power off	
Link / ACT	Green On	Link Up	Port 1~24 (10/100M/1000M)
	Green Blinking	Data activating	
	Off	No connection	
PoE	Amber On	Port is linked to Power Device	
	Off	No Power Device is connected	
SFP	Green On	Link Up	Port F1~F4
	Green Blinking	Data activating	

Reset Button

The button allows you to restore the configuration to default. For details see *10. Restoring Default Settings*.

Rear Panel

The 3-pronged power plug is placed at the rear panel of the switch right side shown as below.



Hardware Installation

Set the switch on a large flat space with a power socket close by. The flat space should be clean, smooth, level and sturdy. Make sure there is enough clearance around the switch to allow attachment of cables, power cord and allow air circulation. The last, use twisted pair cable to connect this switch to your PC and then users could start to operate the switch.

AC Power Input

Connect the attached power cord to the AC power input connector; the available AC power input is range from 100-240 V/AC.

Ethernet Cable Request

The wiring cable types are as below.

10BaseT: 2-pair UTP/STP Cat. 5 cable, EIA / TIA-568 100-ohm (Max. 100 m)

100BaseTX: 2-pair UTP/STP Cat. 5 cable, EIA / TIA-568 100-ohm (Max. 100 m)

1000BaseT: 4-pair UTP/STP Cat. 5e 6 cable, EIA / TIA-568 100-ohm (Max. 100 m)

PoE: To deliver power without problem, the Cat 5 / 5e and Cat 6 cable is suggested. The high quality Ethernet cable reduces the lost while power transmission.

SFP Installation

While installing the SFP transceiver, make sure the SFP type of the 2 ends is the same and the transmission distance, wavelength, fiber cable can meet your request. The way to connect the SFP transceiver is to plug in SFP fiber transceiver first. The SFP transceiver has 2 plugs for fiber cable, one is TX (transmit), the other is RX (receive). Cross-connect the transmit channel at each end to the receive channel at the opposite end.

IMPORTANT: The maximum cable length for Gigabit RJ-45 is 100 meters. For connection that exceeds 100 meters, you can use the Gigabit SFP ports.

4. Preparation for Web Configuration

The web management page allows you to use a standard web-browser such as Microsoft Internet Explorer, Google Chrome or Mozilla Firefox, to configure and interrogate the switch from anywhere on the network.

Before you attempt to use the web user interface to manage switch operation, verify that your switch is properly installed on your network and that every PC on this network can access the switch via the web browser.

Verify that your network interface card (NIC) is operational, and that your operating system supports TCP/IP protocol.

Wire the switch power and connect your computer to the switch. The switch default IP address is **192.168.0.250**. The switch and the connected PC should locate within the same IP Subnet.

Change your computer's IP address to 192.168.0.xxx or other IP address which is located in the 192.168.0.xxx (For example: IP Address: 192.168.0.2; Subnet Mask: 255.255.255.0) subnet.

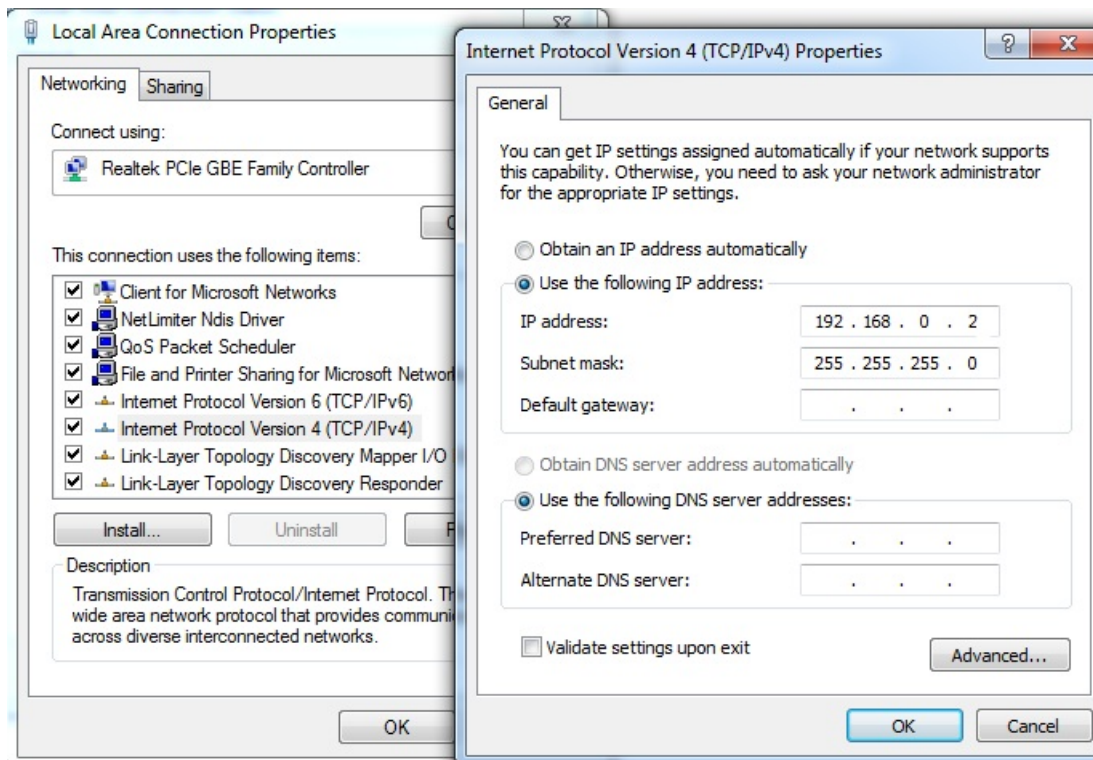


Figure 4-1

4 Preparation for Web Configuration

Launch the web browser and Login.

1. Launch the web browser (Internet Explorer or Mozilla Firefox) on the PC.
2. Type **http://192.168.0.250** (or the IP address of the switch). And then press **Enter**.
3. The login screen will appear.
4. Type the default user name and password: **admin**.

If you can't login the switch, the following steps can help you to identify the problem.

1. Switch to DOS command mode and type the "**ipconfig**" to check the NIC's setting. Type the "**ping 192.168.0.250**" to verify a normal response time.
2. Check the security or Firewall settings, high security level may limit the web access.
3. Try a different web browser, like the Mozilla or Google Chrome.

5. User Login

This part instructs users how to set up and manage the switch through the web user interface. Follow the description to understand the procedure.


At first, open the web browser, type **http://192.168.0.250** and then the users will see the login page. Type the default password **admin** and click **Apply** to pass the authentication. Once you are logged in, the main page will appear.

Login page



Figure 5-1

Main Page

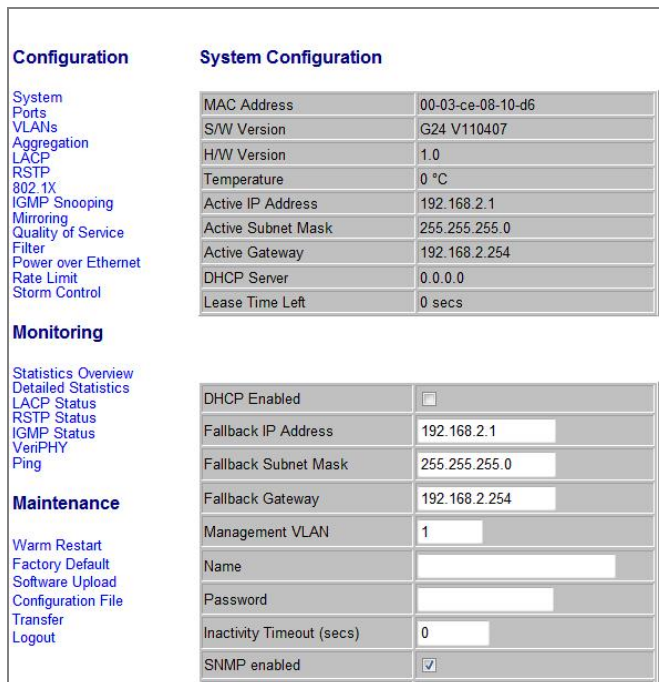

System Configuration	
MAC Address	00-03-ce-08-10-d6
SW Version	G24 V110407
H/W Version	1.0
Temperature	0 °C
Active IP Address	192.168.2.1
Active Subnet Mask	255.255.255.0
Active Gateway	192.168.2.254
DHCP Server	0.0.0.0
Lease Time Left	0 secs

DHCP Enabled	<input type="checkbox"/>
Fallback IP Address	192.168.2.1
Fallback Subnet Mask	255.255.255.0
Fallback Gateway	192.168.2.254
Management VLAN	1
Name	
Password	
Inactivity Timeout (secs)	0
SNMP enabled	<input checked="" type="checkbox"/>

Figure 5-2

6. Configuration

6.1 System

System Configuration	
MAC Address	00-03-ce-13-53-7e
S/W Version	G24 V130925
H/W Version	1.0
Active IP Address	192.168.0.250
Active Subnet Mask	255.255.255.0
Active Gateway	192.168.0.254
DHCP Server	0.0.0.0
Lease Time Left	0 secs
DHCP Enabled	<input type="checkbox"/>
Fallback IP Address	192.168.0.250
Fallback Subnet Mask	255.255.255.0
Fallback Gateway	192.168.0.254
Management VLAN	1
Name	
Password	•••••
Inactivity Timeout (secs)	0
<input type="button" value="Apply"/> <input type="button" value="Refresh"/>	

Figure 6-1

The System Configuration page displays the following information:

- **MAC Address:** Displays the unique hardware address assigned by manufacturer (default).
- **S/W Version:** Displays the switch's firmware version.
- **H/W Version:** Displays the switch's Hardware version.
- **Active IP Address:** The current active IP address of the switch.
- **Active Subnet mask:** The current active subnet mask of the IP Address.
- **Active Gateway:** The current active Gateway of the switch.
- **DHCP Server:** The IP of the DHCP Server. Display after DHCP Client enabled.

- **Lease Time Left:** The least received from the DHCP server. Display after the DHCP Client enabled.
- **DHCP Enabled:** Click the box to enable DHCP Client mode.
- **Fallback IP address:** Manually assign the IP address that the network is using. The default IP is **192.168.0.250**
- **Fallback Subnet Mask:** Assign the subnet mask to the IP address
- **Fallback Gateway:** Assign the network gateway for industrial switch. The default gateway is **192.168.0.254**.
- **Management VLAN:** ID of a configured VLAN (1-4094) through which you can manage the switch. By default, all ports on the switch are members of VLAN 1. However, if the management VLAN is changed, the management station must be attached to a port belonging to this VLAN.
- **Name:** Type in the new user name information.
- **Password:** Type in the new password (The default value is **admin**).
- **Inactivity Timeout (secs):** Specify the period for the system to time out and display the login page when there is no activity.

Click **Apply** to configure the switch settings. Click **Refresh** to reset the details displayed.

Note: After changed to DHCP mode, the switch must be restarted to get a new IP address. However, since the switch only provides Web management, it is hard for users to find its new IP. Do not try this mode without pre-configured DHCP setting in DHCP Server.

6.2 Ports

In Port Configuration, you can set and view the operation mode for each port.

Port Configuration

Enable Jumbo Frames

PERFECT_REACH/Power Saving Mode:

Port	Link	Mode	Flow Control
1	Down	Auto Speed ▾	<input type="checkbox"/>
2	Down	Auto Speed ▾	<input type="checkbox"/>
3	Down	Auto Speed ▾	<input type="checkbox"/>
4	Down	Auto Speed ▾	<input type="checkbox"/>
5	Down	Auto Speed ▾	<input type="checkbox"/>
6	Down	Auto Speed ▾	<input type="checkbox"/>
7	Down	Auto Speed ▾	<input type="checkbox"/>
8	Down	Auto Speed ▾	<input type="checkbox"/>
9	Down	Auto Speed ▾	<input type="checkbox"/>
10	Down	Auto Speed ▾	<input type="checkbox"/>
11	Down	Auto Speed ▾	<input type="checkbox"/>
12	Down	Auto Speed ▾	<input type="checkbox"/>
13	Down	Auto Speed ▾	<input type="checkbox"/>
14	Down	Auto Speed ▾	<input type="checkbox"/>
15	Down	Auto Speed ▾	<input type="checkbox"/>
16	Down	Auto Speed ▾	<input type="checkbox"/>
17	Down	Auto Speed ▾	<input type="checkbox"/>
18	Down	Auto Speed ▾	<input type="checkbox"/>
19	Down	Auto Speed ▾	<input type="checkbox"/>
20	Down	Auto Speed ▾	<input type="checkbox"/>
21	Down	Auto Speed ▾	<input type="checkbox"/>
22	Down	Auto Speed ▾	<input type="checkbox"/>
23	Down	Auto Speed ▾	<input type="checkbox"/>
24	1000FDX	Auto Speed ▾	<input type="checkbox"/>

Drop frames after excessive collisions

Apply Refresh

Figure 6-2

- **Enable Jumbo Frames:** This switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames on Gigabit Ethernet ports up to 9216 bytes. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.
- **Power Saving Mode:** Select **Full**, **Link-up**, **Link-down** or **Disable** to adjust the power provided to ports based on the length of the cable used to connect to other devices. Only sufficient power is used to maintain connection requirements.
- **Port Configuration**
 - ⊙ **Mode:** Set the port speed as **Auto**, **10 half**, **10 Full**, **100 Half**, **100 Full**, **1000 Full** or **Disabled**.

- ⊙ **Flow Control:** Enable the automatic management of transmission speed.
- **Drop frames after excessive collisions:** Enable the switch to drop frames when excessive collisions occur in half-duplex mode.

IMPORTANT: It is recommended when enabling the Jumbo Frame function, the network card of the PC used for accessing the switch supports Gigabit Ethernet. Otherwise, the presence of jumbo frames may slow down the speed of data transmission.

6.3 VLANs

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which would allow you to isolate network traffic, so only the members of the same VLAN will receive traffic from the ones of the same VLAN. Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

Figure 6-3

[Add a VLAN]

- VLAN ID:** ID of configured VLAN (1-4094, no leading zeroes). Type the new ID and click **Add**. The Web UI is directed to the VLAN Setup screen.

VLAN ID: 2			
Port	Member	Port	Member
Port 1	<input checked="" type="checkbox"/>	Port 13	<input checked="" type="checkbox"/>
Port 2	<input checked="" type="checkbox"/>	Port 14	<input checked="" type="checkbox"/>
Port 3	<input checked="" type="checkbox"/>	Port 15	<input checked="" type="checkbox"/>
Port 4	<input checked="" type="checkbox"/>	Port 16	<input checked="" type="checkbox"/>
Port 5	<input type="checkbox"/>	Port 17	<input type="checkbox"/>
Port 6	<input type="checkbox"/>	Port 18	<input type="checkbox"/>
Port 7	<input type="checkbox"/>	Port 19	<input type="checkbox"/>
Port 8	<input type="checkbox"/>	Port 20	<input type="checkbox"/>
Port 9	<input type="checkbox"/>	Port 21	<input type="checkbox"/>
Port 10	<input type="checkbox"/>	Port 22	<input type="checkbox"/>
Port 11	<input type="checkbox"/>	Port 23	<input type="checkbox"/>
Port 12	<input type="checkbox"/>	Port 24	<input type="checkbox"/>

Figure 6-4

[VLAN Configuration List]

Lists all the current VLAN groups created for this system. Up to 16 VLAN groups can be defined. VLAN 1 is the default untagged VLAN.

6.4 Aggregation

Port trunk allows multiple links to be bundled together and act as a single physical link for increased throughput. It provides load balancing, and redundancy of links in a switched inter-network. Actually, the link does not have an inherent total bandwidth equal to the sum of its component physical links. Traffic in a trunk is distributed across an individual link within the trunk in a deterministic method that called a hash algorithm. The hash algorithm automatically applies load balancing to the ports in the trunk. A port failure within the trunk group causes the network traffic to be directed to the remaining ports. Load balancing is maintained whenever a link in a trunk is lost or returned to service.

To assign a port to a trunk, click the required trunk number and click **Apply**.

Aggregation/Trunking Configuration																								
Group\Port	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Normal	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Group 1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 5	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 6	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 7	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 8	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Figure 6-5

6.5 LACP

IEEE 802.3ad Link Aggregation Control Protocol (LACP) increases bandwidth by automatically aggregating several physical links together as a logical trunk and providing load balancing and fault tolerance for uplink connections. Once the port is configured as Static Aggregation port, the area will become gray. It means a port can only be the member of the Aggregation or LACP.

LACP Port Configuration

Port	Protocol Enabled	Key Value
1	<input type="checkbox"/>	auto
2	<input type="checkbox"/>	auto
3	<input type="checkbox"/>	auto
4	<input type="checkbox"/>	auto
5	<input type="checkbox"/>	auto
6	<input type="checkbox"/>	auto
7	<input type="checkbox"/>	auto
8	<input type="checkbox"/>	auto
9	<input type="checkbox"/>	auto
10	<input type="checkbox"/>	auto
11	<input type="checkbox"/>	auto
12	<input type="checkbox"/>	auto
13	<input type="checkbox"/>	auto
14	<input type="checkbox"/>	auto
15	<input type="checkbox"/>	auto
16	<input type="checkbox"/>	auto
17	<input type="checkbox"/>	auto
18	<input type="checkbox"/>	auto
19	<input type="checkbox"/>	auto
20	<input type="checkbox"/>	auto
21	<input type="checkbox"/>	auto
22	<input type="checkbox"/>	auto
23	<input type="checkbox"/>	auto
24	<input type="checkbox"/>	auto


Apply Refresh

Figure 6-6

- **Protocol Enabled:** Enables LACP Protocol on the associated port.
- **Key Value:** Configures a port's LACP administration key. The port administrative key must be set to the same value for ports that belong to the same link aggregation group (LAG). If this administrative key is not set when an LAG is formed (i.e., it has the null value of 0), this key will automatically be set to the same value as that used by the LAG.

6.6 RSTP

IEEE 802.1w Rapid Spanning tree protocol (LACP) provides a loop-free network and redundant links to the core network with rapid convergence to ensure faster recovery from failed links, enhancing overall network stability and reliability.

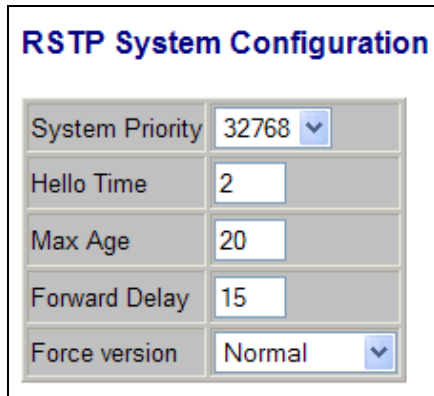

The screenshot shows a configuration window titled "RSTP System Configuration". It contains five rows of settings:

Parameter	Value
System Priority	32768 (dropdown)
Hello Time	2 (text input)
Max Age	20 (text input)
Forward Delay	15 (text input)
Force version	Normal (dropdown)

Figure 6-7

[RSTP System Configuration]

- **System Priority:** This parameter configures the spanning tree priority globally for this switch. The device with the highest priority becomes the STP root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device. Number between 0 and 61440 in increments of 4096. Therefore, there are 16 distinct values.
- **Hello Time:** Interval (in seconds) at which the root device transmits a configuration message (BPDU frame). Number between 1 and 10 (default is 2).
- **Max Age:** The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. That also means the maximum life time for a BPDU frame. Number between 6 and 40 (default is 20).
- **Forward Delay:** The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). Number between 4 and 30 (default is 15).
- **Force Version:** Set and show the RSTP protocol to use. Normal - use RSTP, Compatible - compatible with STP.

RSTP Port Configuration

Port	Protocol Enabled	Edge	Path Cost
Aggregations	<input type="checkbox"/>		
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
5	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
6	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
8	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
9	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
10	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
11	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
12	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
13	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
14	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
15	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
16	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
17	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
18	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
19	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
20	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
21	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
22	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
23	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
24	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto

Apply Refresh

Figure 6-8

[RSTP Port Configuration]


- **Port:** The port ID. Aggregations mean any configured trunk group.
- **Protocol Enabled:** Click on the tick-box to enable/disable the RSTP protocol for the port.
- **Edge:** Expect the port to be an edge port (linking to an end station) or a link to another STP device.
- **Path Cost:** This parameter is used by the STP to determine the best path between devices. Therefore, lower values should be assigned to the ports attached to faster media, and higher values assigned to the ports with slower media. Set the RSTP path cost on the port. Number between 0 and 200000000. When 0 is configured, the system will automatically generate path cost. The default value **auto** also has the same function.

6.7 IGMP Snooping

IGMP Snooping is the process of listening to IGMP network traffic. IGMP Snooping, as implied by the name, is a feature that allows a layer 2 switch to “listen in” on the IGMP conversation between hosts and routers by processing the layer3 IGMP packets sent in a multicast network.

When IGMP Snooping is enabled in a switch it analyzes all IGMP packets between hosts connected to the switch and multicast routers in the network. When a switch hears an IGMP report from a host for a given multicast group, the switch adds the host’s port number to the multicast list for that group. And, when the switch hears an IGMP Leave, it removes the host’s port from the table entry.

Prevents flooding of IP multicast traffic, and limits bandwidth intensive video traffic to only the subscribers.

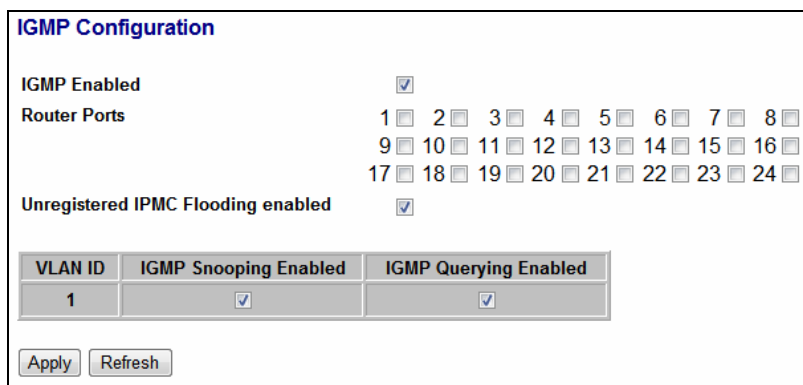

IGMP Configuration

IGMP Enabled

Router Ports 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Unregistered IPMC Flooding enabled

VLAN ID	IGMP Snooping Enabled	IGMP Querying Enabled
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Apply Refresh

Figure 6-9

- **IGMP Enabled:** When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic.
- **Router Ports:** Set if ports are connecting to the IGMP administrative routers.
- **Unregistered IPMC Flooding enabled:** Set the forwarding mode for unregistered (not-joined) IP multicast traffic. The traffic will flood when enabled, and forward to router-ports only when disabled.
- **IGMP Snooping Enabled:** When enabled, the port will monitor network traffic to determine which hosts want to receive the multicast traffic.
- **IGMP Querying Enabled:** When enabled, the port can serve as the Querier, which is responsible for asking hosts if they want to receive multicast traffic.

6.8 Mirroring

Port Mirroring is used on a network switch to send a copy of network packets seen on one switch port (or an entire VLAN) to a network monitoring connection on another switch port. This is commonly used for network appliances that require monitoring of network traffic, such as an intrusion-detection system.

The screenshot shows a web interface titled "Mirroring Configuration". It features a table with two columns: "Port" and "Mirror Source". The "Port" column lists ports from 1 to 24. The "Mirror Source" column contains checkboxes, all of which are currently unchecked. Below the table is a "Mirror Port" dropdown menu with a list of options: 1, 2, 3, and 4. The number 1 is selected. At the bottom left of the interface are two buttons: "Apply" and "Refresh".

Port	Mirror Source
1	<input type="checkbox"/>
2	<input type="checkbox"/>
3	<input type="checkbox"/>
4	<input type="checkbox"/>
5	<input type="checkbox"/>
6	<input type="checkbox"/>
7	<input type="checkbox"/>
8	<input type="checkbox"/>
9	<input type="checkbox"/>
10	<input type="checkbox"/>
11	<input type="checkbox"/>
12	<input type="checkbox"/>
13	<input type="checkbox"/>
14	<input type="checkbox"/>
15	<input type="checkbox"/>
16	<input type="checkbox"/>
17	<input type="checkbox"/>
18	<input type="checkbox"/>
19	<input type="checkbox"/>
20	<input type="checkbox"/>
21	<input type="checkbox"/>
22	<input type="checkbox"/>
23	<input type="checkbox"/>
24	<input type="checkbox"/>

Mirror Port: 1

Apply Refresh

Figure 6-10

- **Mirror Source:** The port that will “duplicate” or “mirror” the traffic on the source port. Only incoming packets can be mirrored. Packets will be dropped when the available egress bandwidth is less than ingress bandwidth.
- **Mirror Port:** Select the ports that you want to mirror from this section of the page. A port will be mirrored when the “Mirroring Enabled” check-box is checked.

6.9 Quality of Service

In QoS Mode, select **QoS Disabled**, **802.1p** or **DSCP**, and click **Apply** to configure the related parameters.

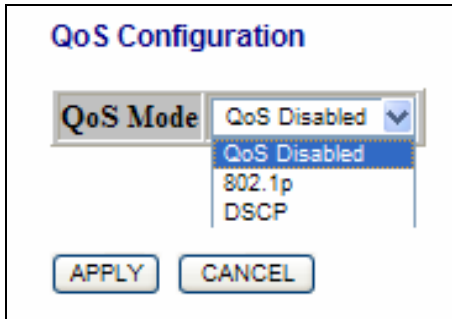


Figure 6-11

[802.1p Configuration]

Packets are prioritized using the 802.1p field in the VLAN tag.

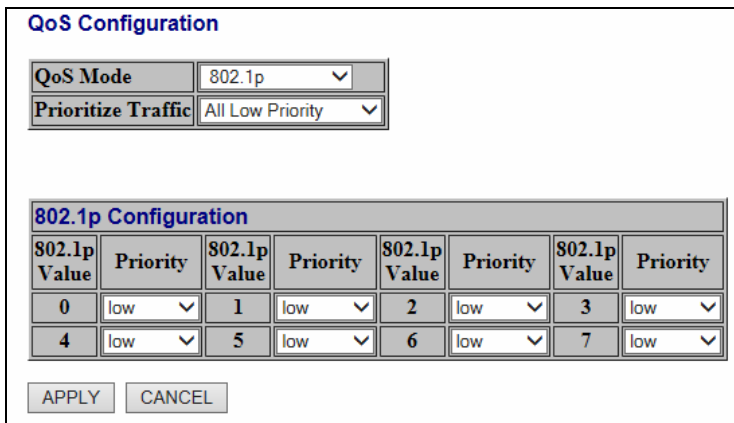


Figure 6-12

- **Prioritize Traffic:** Allows the customization of 802.1p to Traffic classifiers to quickly set the values in the DSCP Configuration table to a common priority queue. Select **Custom** if you want to set each value individually.
- **802.1p Value:** Represents the 802.1p value in the range 0 - 7.
- **Priority:** Allows you to map each of the eight 802.1p values to a local priority queue as **low**, **normal**, **medium** or **high**.

[DSCP Configuration]

Packets are prioritized using the DSCP (Differentiated Services Code Point) value.

QoS Configuration

QoS Mode	DSCP
Prioritize Traffic	All High Priority

DSCP Configuration

DSCP Value(0..63)	Priority
	high
	high
	high
	high
	high
	high
	high
	high
All others	high

Figure 6-13

- **Prioritize Traffic:** Allows the customization of 802.1p to Traffic classifiers to quickly set the values in the DSCP Configuration table to a common priority queue. Select **Custom** if you want to set each value individually.
- **DSCP Value (0..63):** The Differentiated Services Code Point (DSCP) is a six-bit field that is contained within an IP (TCP or UDP) header. The six bits allow the DSCP field to take any value in the range 0 - 63.
- **Priority:** Allows you to map each of the DSCP values to a hardware output queue as **low**, **normal**, **medium** or **high**. The default settings map all DSCP values to the high priority queue.

6.10 Filter

There are 3 modes that you can choose for filter configuration: **Disabled**, **Static**, and **DHCP**.

Filter Configuration				
Port	Source IP Filter			DHCP Server Allowed
	Mode	IP Address	IP Mask	
1	Static ▼	192.168.2.10	255.255.255.0	<input type="checkbox"/>
2	Disabled ▼			<input checked="" type="checkbox"/>

Figure 6-14

- **Source IP Filter:** There are 3 modes for filter configuration
 - ⊙ **Disabled:** this mode is disabled, no any protection here.
 - ⊙ **Static:** The IP address you typed here can not access the switch.
 - ⊙ **DHCP:** The IP address retrieved from the DHCP server can not access the switch.
- **DHCP Server Allowed:** Allows the IP address assigned by the DHCP Server to access the port.

6.11 Power over Ethernet

PoE technology is a system to pass electrical power safely, along with data, on Ethernet cabling. Power is supplied in common mode over two or more of the differential pairs of wires found in the Ethernet cables and comes from a power supply within a PoE enabled networking device such as Switch or can be injected into a cable run with a midspan power supply.

This screen shows all the PoE's status when connect or disconnect to the PD device.

PoE (Power over Ethernet) Configuration					
Port	PoE Enabled	PD Class	Delivering Power [W]	Current [mA]	Power Budget [%] (Per 8 port total power = 130W)
1	<input checked="" type="checkbox"/>	--	0	0	10.1
2	<input checked="" type="checkbox"/>	3	9.5003	188.124	
3	<input checked="" type="checkbox"/>	--	0	0	
4	<input checked="" type="checkbox"/>	--	0	0	
5	<input checked="" type="checkbox"/>	--	0	0	
6	<input checked="" type="checkbox"/>	0	3.6042	71.37	
7	<input checked="" type="checkbox"/>	--	0	0	
8	<input checked="" type="checkbox"/>	--	0	0	
9	<input checked="" type="checkbox"/>	--	0	0	0
10	<input checked="" type="checkbox"/>	--	0	0	
11	<input checked="" type="checkbox"/>	--	0	0	
12	<input checked="" type="checkbox"/>	--	0	0	
13	<input checked="" type="checkbox"/>	--	0	0	

Figure 6-15

- **PoE Enabled:** POE of the port is able to supply power to the attached PD (Powered Device)
- **PD Class:** Detects the class of PD.
- **Delivering Power (W):** Output power.
- **Current (mA):** The status of the port current.
- **Voltage:** Power output voltage per port.
- **Power Budget:** Percentage of PoE power that has been used.

Note: The green columns show the status of the connected PD. To protect the system and better product life, configure the Power Budget as lower than 80%.

6.12 Rate Limit

You can define the certain port as Policer and Shaper before you set up the rate limit.

Rate Limit Configuration

Port	Policer	Shaper
1	No Limit ▾	No Limit ▾
2	1664 kbps ▲	No Limit ▾
3	1792 kbps	No Limit ▾
4	1920 kbps	No Limit ▾
5	2048 kbps	No Limit ▾
6	2176 kbps	No Limit ▾
7	2304 kbps	No Limit ▾
8	2432 kbps	No Limit ▾
9	2560 kbps	No Limit ▾
10	2688 kbps	No Limit ▾
11	2816 kbps	No Limit ▾
12	2944 kbps	No Limit ▾
13	3072 kbps	No Limit ▾
	3200 kbps	No Limit ▾
	3328 kbps	No Limit ▾
	3456 kbps	No Limit ▾
	3584 kbps	No Limit ▾
	3712 kbps	No Limit ▾
	3840 kbps	No Limit ▾
	3968 kbps	No Limit ▾
	No Limit ▾	No Limit ▾
	No Limit ▾	No Limit ▾

Figure 6-16

- **No Limit:** Allows you to specify that the selected port will have no bandwidth limit.
- **Rate Limit:** Allows you to select the data rate in Kbits per second to limit for the selected port. The value is between 128kbps and 3968kbps.

6.13 Storm Control

Broadcast storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much broadcast traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from broadcast storms by setting a threshold for broadcast traffic for each port. Any broadcast packets exceeding the specified threshold will then be dropped.

Storm Control	
Number of frames per second	
ICMP Rate	No Limit ▼
Learn Frames Rate	No Limit ▼
Broadcast Rate	No Limit ▼
Multicast Rate	No Limit ▼
Flooded unicast Rate	No Limit ▼

Apply Refresh

Figure 6-17

There are five type of traffic which can be rate limited, including ICMP, Learn Frame, Broadcast, Multicast and Flooded Uncast Rate. The Rate field is set by a single drop-down list. The same threshold is applied to every port on the switch. When the threshold is exceeded, packets are dropped, irrespective of the flow-control settings.

- **ICMP Rate:** This can prevent user from continuing pinging the switch and waste the CPU resource.
- **Learn Frame Rate:** By default, the switch performs wire-speed learning on all ports. However, if some kind of unknown source MAC is classified as a “learn frame” and is redirect to CPU. These packets will be filtered after enabled this command.
- **Broadcast Rate:** Broadcast Traffic.
- **Multicast Rate:** Unknown Multicast Traffic. Before IGMP Snooping Enabled, all the Multicast are flooded and will be filtered by this command.
- **Flooded unicast Rate:** The source MAC are not yet leant by the switch are unknown Unicast. This command can help limit such traffic.

7. Monitoring

7.1 Statistics Overview

User can mirror traffic from any source port to a target port for real-time analysis the following figures shows clearly the statistics overview. Click **Clear** to renew the details collected and displayed. Click **Refresh** to reset the details displayed.

Statistics Overview for all ports

Clear Refresh

Port	Tx Bytes	Tx Frames	Rx Bytes	Rx Frames	Tx Errors	Rx Errors
1	0	0	0	0	0	0
2	61561	102	102884	303	0	0
3	0	0	0	0	0	0
4	0	0	0	0	0	0
5	0	0	0	0	0	0
6	0	0	0	0	0	0
7	0	0	0	0	0	0
8	0	0	0	0	0	0
9	0	0	0	0	0	0
10	0	0	0	0	0	0
11	0	0	0	0	0	0
12	0	0	0	0	0	0
13	0	0	0	0	0	0
14	0	0	0	0	0	0
15	0	0	0	0	0	0
16	0	0	0	0	0	0
17	0	0	0	0	0	0
18	0	0	0	0	0	0
19	0	0	0	0	0	0
20	0	0	0	0	0	0
21	0	0	0	0	0	0
22	0	0	0	0	0	0
23	0	0	0	0	0	0
24	0	0	0	0	0	0

Figure 7-1

7.2 Detailed Statistics

To view the statistics of individual ports, click one of the linked port numbers for details.

Statistics for Port 1

Clear Refresh

[Port 1](#) [Port 2](#) [Port 3](#) [Port 4](#) [Port 5](#) [Port 6](#) [Port 7](#) [Port 8](#)
[Port 9](#) [Port 10](#) [Port 11](#) [Port 12](#) [Port 13](#) [Port 14](#) [Port 15](#) [Port 16](#)
[Port 17](#) [Port 18](#) [Port 19](#) [Port 20](#) [Port 21](#) [Port 22](#) [Port 23](#) [Port 24](#)

Receive Total		Transmit Total	
Rx Packets	0	Tx Packets	0
Rx Octets	0	Tx Octets	0
Rx High Priority Packets	0	Tx High Priority Packets	0
Rx Low Priority Packets	0	Tx Low Priority Packets	0
Rx Broadcast	0	Tx Broadcast	0
Rx Multicast	0	Tx Multicast	0
Rx Broad- and Multicast	0	Tx Broad- and Multicast	0
Rx Error Packets	0	Tx Error Packets	0
Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	0	Tx 64 Bytes	0
Rx 65-127 Bytes	0	Tx 65-127 Bytes	0
Rx 128-255 Bytes	0	Tx 128-255 Bytes	0
Rx 256-511 Bytes	0	Tx 256-511 Bytes	0
Rx 512-1023 Bytes	0	Tx 512-1023 Bytes	0
Rx 1024+ Bytes	0	Tx 1024+ Bytes	0
Receive Error Counters		Transmit Error Counters	
Rx CRCAlignment	0	Tx Collisions	0
Rx Undersize	0	Tx Drops	0
Rx Oversize	0	Tx Overflow	0
Rx Fragments	0		
Rx Jabber	0		
Rx Drops	0		

Figure 7-2

7.3 LACP Status

LACP allows for the automatic detection of links in a Port Trunking Group

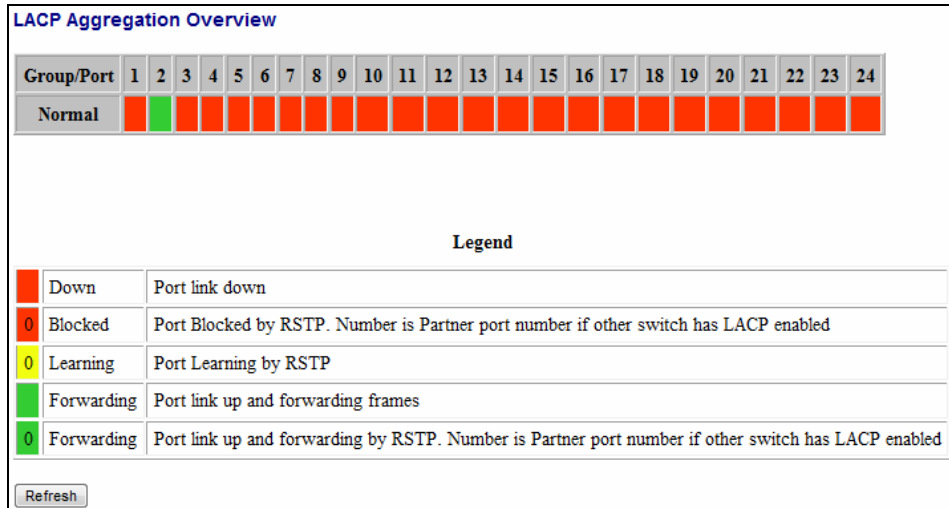


Figure 7-3

LACP Port Status

LACP Port Status

Port	Protocol Active	Partner Port Number	Operational Port Key
1	no		
2	no		
3	no		
4	no		
5	no		
6	no		
7	no		
8	no		
9	no		
10	no		
11	no		
12	no		
13	no		
14	no		
15	no		
16	no		
17	no		
18	no		
19	no		
20	no		
21	no		
22	no		
23	no		
24	yes	0	3

Figure 7-4

Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs requires.

- **Port:** The port number.
- **Protocol Active:** Shows if the port is a member of an active LACP group.
- **Partner Port Number:** A list of the ports attached at the remote end of this LAG link member.
- **Operational Port Key:** Current operational value of the key used by this LAG.

7.4 RSTP Status

VLAN Id	Bridge Id	Hello Time	Max Age	Fwd Delay	Topology	Root Id
1	32769:00-03-ce-0b-49-8a	2	20	15	Steady	This switch is Root!

Refresh

Figure 7-5

[RSTP VLAN Bridge Overview]

- **VLAN Id:** VLAN ID number.
- **Bridge Id:** Bridge ID number.
- **Hello Time:** Interval (in seconds) at which the root device transmits a configuration message.
- **Max Age:** The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that age out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network.
- **Fwd Delay:** The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.
- **Topology:** Indicates if spanning tree topology is steady or undergoing reconfiguration. (The time required for reconfiguration is extremely short, so no values other than “steady” state are likely to be seen in this field.)
- **Root Id:** The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device, and the port connected to the root device.

RSTP Port Status						
Port/Group	Vlan Id	Path Cost	Edge Port	P2p Port	Protocol	Port State
Port 1						Non-STP
Port 2						Non-STP
Port 3						Non-STP
Port 4						Non-STP
Port 5						Non-STP
Port 6						Non-STP
Port 7						Non-STP
Port 8						Non-STP
Port 9						Non-STP
Port 10						Non-STP
Port 11						Non-STP
Port 12						Non-STP
Port 13						Non-STP
Port 14						Non-STP
Port 15						Non-STP
Port 16						Non-STP
Port 17						Non-STP
Port 18						Non-STP
Port 19						Non-STP
Port 20						Non-STP
Port 21						Non-STP
Port 22						Non-STP
Port 23						Non-STP
Port 24						Non-STP

Figure 7-6

[RSTP Port Status]

- **Port/Group:** The number of a port or the ID of a static trunk.
- **VLAN Id:** VLAN ID number.
- **Path Cost:** The cost for a packet to travel from this port to the root in the current Spanning Tree configuration. The slower the media, the higher the cost.
- **Edge Port:** Shows if this port is functioning as an edge port, either through manual selection (see the RSTP Port Configuration table) or auto-detection. Note that if the switch detects another bridge connected to this port, the manual setting for Edge Port will be overridden, and the port will instead function as a point-to-point connection.
- **P2P Port:** Shows if this port is functioning as a Point-to-Point connection to exactly one other bridge. The switch can automatically determine if the interface is attached to a point-to-point link or to shared media. If shared media is detected, the switch will assume that it is connected to two or more bridges.
- **Protocol:** Shows the spanning tree protocol functioning on this port, either RSTP or STP (that is, STP-compatible mode).
- **Port State:** Shows the current port state includes designated port, root port or blocked port.

7.5 IGMP Status

IGMP Status shows the IGMP Snooping statistics for the whole switch.

IGMP Status							
VLAN ID	Querier	Queries transmitted	Queries received	v1 Reports	v2 Reports	v3 Reports	v2 Leaves
12	Active	1	0	0	0	0	0

Refresh

Figure 7-7

- **VLAN ID:** VLAN ID number.
- **Querier:** Shows whether Querying is enabled.
- **Queries transmitted:** Shows the number of transmitted Query packets.
- **Queries received:** Shows the number of received Query packets.
- **v1 Reports:** Shows the number of received v1 Report packets.
- **v2 Reports:** Shows the number of received v2 Report packets.
- **v3 Reports:** Shows the number of received v2 Report packets.
- **v3 Leave:** Shows the number of v3 leave packets received.

7.6 VeriPHY

VeriPHY Cable Diagnostics

Port	Port 24 ▾
Mode	Full ▾

Cable Status		
Pair	Length [m]	Status
A	3	Proper
B	3	Proper
C	3	Proper
D	3	Proper

Figure 7-8

[VeriPHY Cable Diagnostics]

User can perform cable diagnostics for all ports or selected ports to diagnose any cable faults and feedback a distance to the fault. Cable diagnostics is performed on a per-port basis.

- **Port:** Specify the port for which to run the cable diagnostics.
- **Mode:** Select **Full**, **Anomaly** or **Anomaly w/o X-pair** for diagnostics.

[Cable Status]

Shows the cable length, operating conditions and isolates a variety of common faults that can occur on Category 5 twisted pair cabling.

7.7 Ping

This command sends ICMP echo request packets to another node on the network.

Ping Parameters

Target IP address	192.168.2.10
Count	10 ▼
Time Out (in secs)	1 ▼

Ping Results

Target IP address	192.168.2.10
Status	Test complete
Received replies	10
Request timeouts	0
Average Response Time (in ms)	5

Figure 7-9

[Ping Parameters]

- **Target IP Address:** Type the IP address of the host.
- **Count:** Set the number of packets to send.
- **Time Out (in secs):** Set the timeout period to wait for reply.

[Ping Results]

Use the ping command to see if another site on the network can be reached. The following are some results of the **ping** command:

- **Normal response:** The normal response occurs in one to ten seconds, depending on network traffic.
- **Destination does not respond:** If the host does not respond, a “timeout” appears in ten seconds.
- **Destination unreachable:** The gateway for this destination indicates that the destination is unreachable.
- **Network or host unreachable:** The gateway finds no corresponding entry in the route table.

To get the latest Ping results, click **Refresh**. To stop pinging, press <Esc> on the keyboard

8. Maintenance

8.1 Warm Restart

Press the **Yes** button to restart the switch. The reset will be complete when the power lights stop blinking.

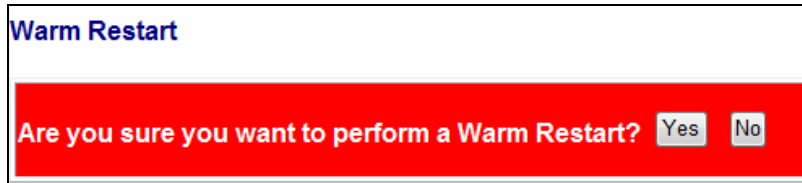


Figure 8-1

8.2 Factory Default

Factory Default forces the switch to restore the original factory settings. To reset the switch, select the **Yes** button.

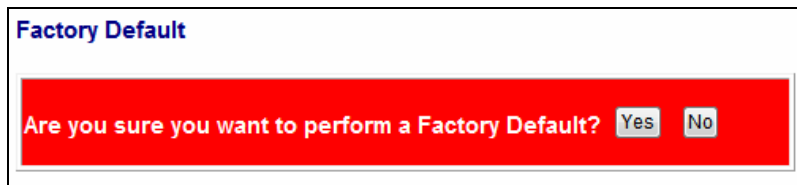


Figure 8-2


If you forgot the password, you can press the **Reset** button on the front panel for 5 seconds. Then the system will be reset to the default configuration.

Note: Load default from the Web interface will not change the user name, password and IP configuration. If you want to restore the default setting of IP address, user name and password, press the **Reset** button on the front panel of the switch.

8.3 Software Upload

To upgrade the firmware version of the switch, follow the steps below:


1. Click **Browse** to select the firmware file and click **Upload**.

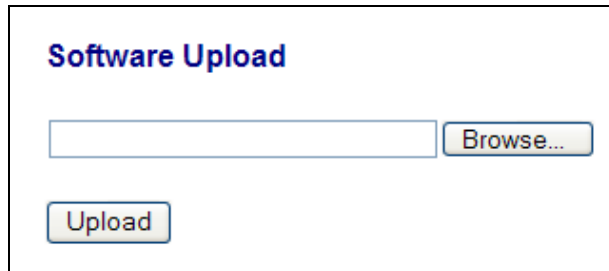

The image shows a web form titled "Software Upload". It contains a text input field, a "Browse..." button to its right, and an "Upload" button below the input field.

Figure 8-3

2. After the uploading process is completed, this message appears. Click **Yes** to activate the new software.

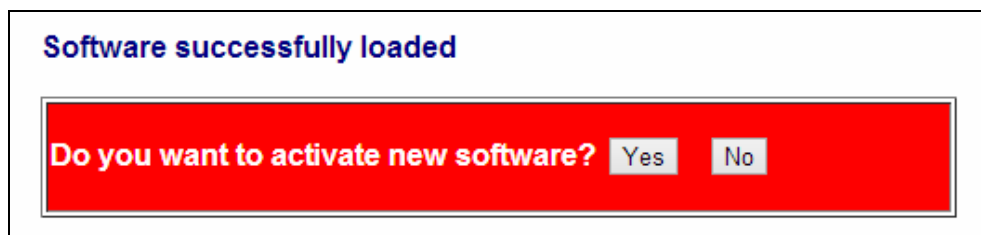


The image shows a message box titled "Software successfully loaded". Inside the box is a red banner with the text "Do you want to activate new software?" followed by "Yes" and "No" buttons.

Figure 8-4

8.4 Configuration File Transfer

Configuration file transfer allows you to save the current configuration or restore a previously saved configuration back to the switch. Configuration files can be saved to any location on the Web management station. In this page, you can upload or download the configuration file.

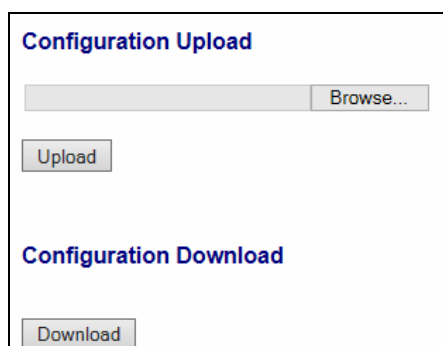


The image shows a web form with two sections. The first section is titled "Configuration Upload" and contains a text input field, a "Browse..." button to its right, and an "Upload" button below the input field. The second section is titled "Configuration Download" and contains a "Download" button.

Figure 8-5

9. Logout

The administrator has write access for all parameters governing the onboard agent. Users should therefore assign a new administrator password as soon as possible, and store it in a safe place.

After finishing configuring the switch, you can click **Logout** to leave the configuration page.

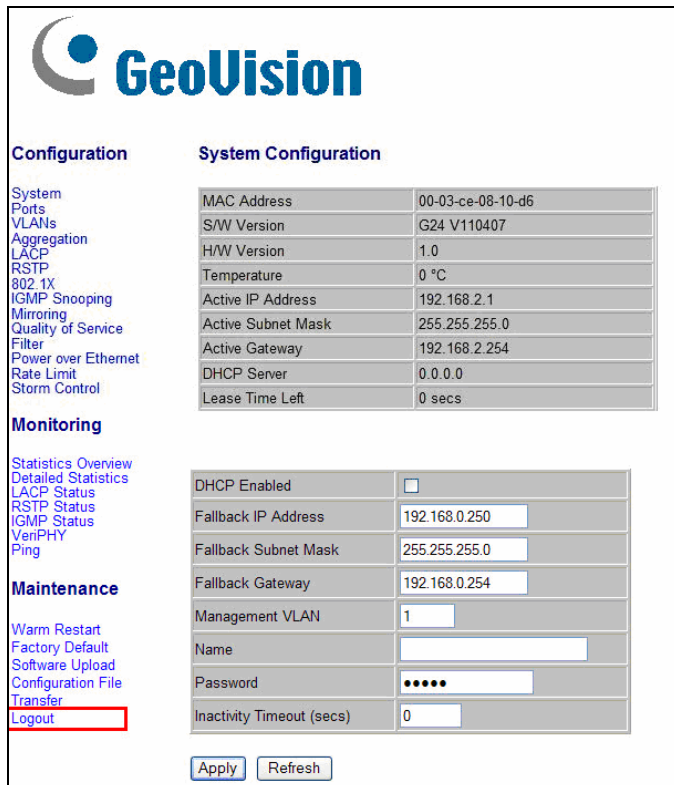

The screenshot shows the GeoVision web interface. On the left, there is a navigation menu with sections: Configuration, Monitoring, and Maintenance. Under Maintenance, the 'Logout' link is highlighted with a red box. The main content area is titled 'System Configuration' and contains two tables of configuration parameters.

System Configuration Table 1:

MAC Address	00-03-ce-08-10-d6
S/W Version	G24 V110407
H/W Version	1.0
Temperature	0 °C
Active IP Address	192.168.2.1
Active Subnet Mask	255.255.255.0
Active Gateway	192.168.2.254
DHCP Server	0.0.0.0
Lease Time Left	0 secs

System Configuration Table 2:

DHCP Enabled	<input type="checkbox"/>
Fallback IP Address	<input type="text" value="192.168.0.250"/>
Fallback Subnet Mask	<input type="text" value="255.255.255.0"/>
Fallback Gateway	<input type="text" value="192.168.0.254"/>
Management VLAN	<input type="text" value="1"/>
Name	<input type="text"/>
Password	<input type="password" value="••••"/>
Inactivity Timeout (secs)	<input type="text" value="0"/>

At the bottom of the page, there are 'Apply' and 'Refresh' buttons.

Figure 9-1

10. Restoring Default Settings

You can load the default value with the Reset button or with the Web interface.

Hardware

To restore the switch to its default settings using the **Reset** button, follow the steps below:

1. Turn on the switch.
2. Press and hold the **Reset** button for 5 seconds until all the LED start blinking.
3. Release the button. The switch is restored to its default settings.

Note: After restoring default settings, you will need to configure IP address and Password again.

Web Interface

1. On the Web interface, select **Factory Default**. This page appears.

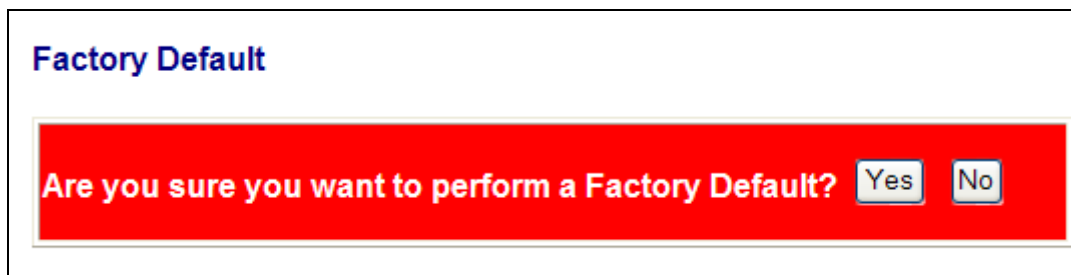


Figure 10-1

2. Click **Yes** to restore the switch to the original configuration.

Note: Load default from the Web interface will not change the user name, password and IP configuration. If you want to restore the default setting of IP address, user name and password, press the **Reset** button on the front panel of the switch.

11. Specifications

Ports		
Number of Ports	24 ports 24-port 10/100/1000BaseT(X) with RJ-45 Connectors, PoE+ 4-port SFP Combo uplink Port	
Performance		
MAC Address	8 K	
Buffer Memory	4 M bits	
Jumbo Frames	9.6 KB	
Transmission Method	Store and Forward	
Transmission Media	10/100BaseT(X) Cat. 5 UTP/STP 1000BaseT Cat. 5e, 6 UTP/STP	
Filtering/Forwarding Rates	10 Mbps port - 14,880 pps 100 Mbps port - 148,800 pps 1000 Mbps port - 1,488,000 pps	
Smart Features		
Port Based VLAN	24	
Tag Based VLAN	16, VID = 1~4094	
IGMP Snooping	V1 & V2	
Link Aggregation	Up to 8 groups	
Quality of Service (QoS)	Up to 4 queues, 802.1p, DSCP	
Security	IEEE 802.1X, Source IP Filter	
Port Management	Port State, Speed/Duplex, Flow Control Configuration, Port Mirroring, Bandwidth Control, Broadcast Storm Control, PoE	
Administrator Management	Web Management, Password Protection, Configuration Backup/Restore, Firmware Upgrade	
Mechanical Characteristics		
LED Indicators	Per Port: Link/Act PoE Act/Status Power	
Electrical Characteristics		
PoE Power	Input	100 ~ 240 V/AC, 50 ~ 60 Hz
	Output	IEEE 802.3at Compliant Voltage, Per Port Max. 30 watts (24 Ports at Full 15.4 W / 13 Ports at Full 30 W)
Max. Power Consumption	400 W	
General		
Dimensions (H x W x D)	44 x 440 x 331 mm (1.73" x 17.3" x 13.03")	
Weight	4.7 kg (10.36 lb)	
Operating Temperature	0°C ~ 40°C (32°F ~ 104°F)	
Storage Temperature	-20°C ~ 90°C (-4°F ~ 194°F)	
Humidity	10 to 90% RH (non-condensing)	
Standards and Regulatory		
Standards	IEEE 802.3 10BaseT, IEEE 802.3u 100BaseTX, IEEE 802.3ab 1000BaseT, IEEE 802.3z 1000BaseSX/LX IEEE 802.3x Full-duplex and Flow Control IEEE 802.3ad Link Aggregation Control Protocol IEEE 802.1Q VLAN IEEE 802.1p Class of Service IEEE 802.1D Spanning Tree Protocol IEEE 802.1w Rapid Spanning Tree Protocol IEEE 802.1X Port-based Network Access Control IEEE 802.3at Power Over Ethernet (PoE+)	
Regulatory	CE, FCC Class A	

Note: Specifications are subject to change without prior notice.