

## I. Installation & Operation - EXP-LED-PL3

### I. Operation

#### Momentary Mode:

Lightly press the tail switch for momentary operation. Release to turn the light off.

#### Constant-On Mode:

Press the tail switch until it clicks and then release for constant-on mode. Press and release the tail switch again to turn the light off.

### II. Battery Replacement

1. Loosen the locking screw located on the side of the lens bezel. **NOTE: Do NOT attempt to completely remove the locking screw. Doing so is not necessary and may damage the threads. The screw simply needs to be loosened enough to allow the lens bezel to unscrew.**


2. Unscrew the lens bezel from the housing in a counter-clockwise direction.

3. Using 3-AAAA batteries, install the batteries in the light paying close attention to make sure that the positive end of the batteries point toward the bezel end of the light.

4. Replace the lens bezel by screwing it onto the housing in a clockwise direction.

5. Tighten locking screw. **CAUTION: Do NOT over-tighten. Doing so may damage the threads and impact the light's intrinsic safety.**

### II. Features/Battery Orientation

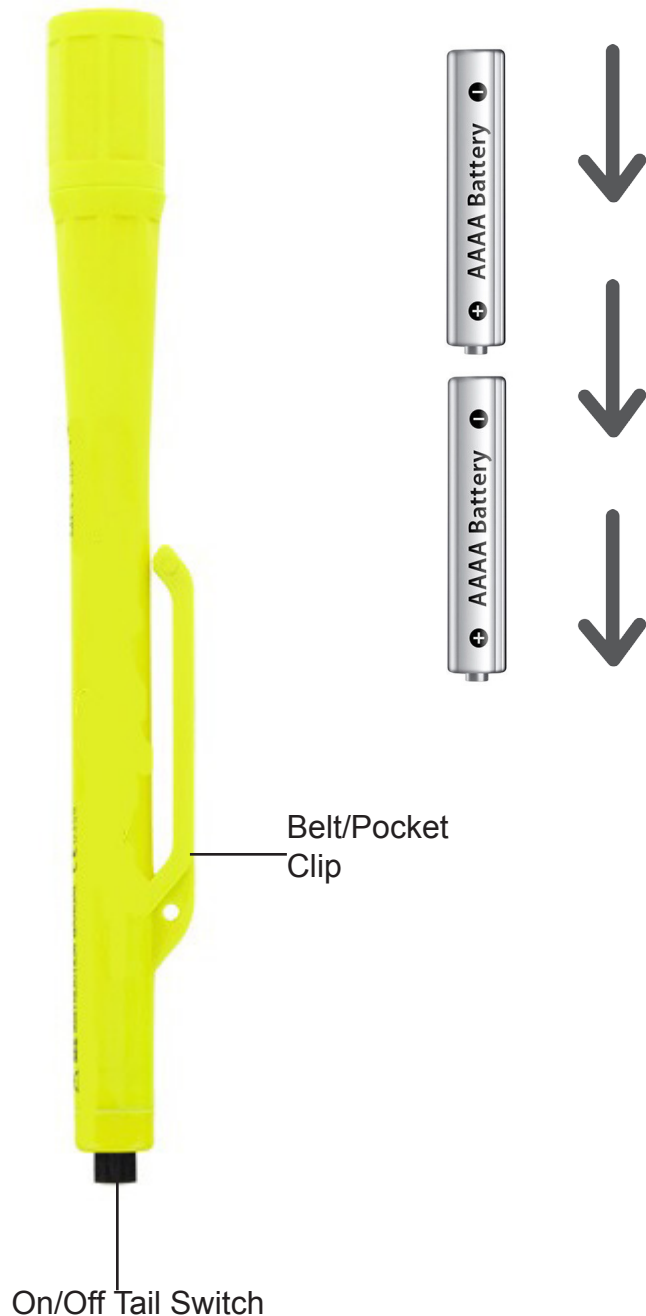



## II. Warnings and Safety Ratings

### I. Warnings

Use only the approved non-rechargeable batteries listed below.

Do **NOT** attempt to use rechargeable AAAA batteries with this light.

To prevent ignition of hazardous atmosphere, do not open the lens bezel in the hazardous environment. This task must **ONLY** be performed in an area known to be non-hazardous.

To prevent ignition of a hazardous atmosphere, the AAAA batteries must only be exchanged in an area known to be non-hazardous.

To reduce the risk of explosion, do not mix new non-rechargeable batteries with used non-rechargeable batteries, or mix non-rechargeable batteries from different manufacturers.

Substitution of components may impair intrinsic safety.

For personal safety, always confirm the rating of any known hazardous or potentially hazardous location where the light is to be used.

Do **NOT** attempt to use any type of rechargeable AAAA batteries with this light.

To prevent ignition of a hazardous atmosphere, do **NOT** remove the lens bezel in the hazardous environment. This task must **ONLY** be done in an area known to be non-hazardous.

### II. Ratings

Listed for United States, Canada, IECEx and ATEX

Class I, Division 1 Groups A, B, C and D

Class II, Division 1 Groups E, F and G

Class III, Division 1 Groups E, F and G

Class I, Zone 0, AEx ia IIC T3 Ga

Class I, Zone 0, Ex ia IIC T3 Ga

ATEX I M 1 Ex ia op is I Ma

ATEX II 1 G Ex ia op is IIC T3 Ga

IECEX Ex ia op is I MA

IECEX Es ia op is IIC T3 Ga

T3 Temperature Rating