



MODEL RT-1 RECEIVER/TRANSMITTER USER GUIDE

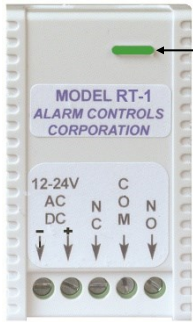

LED Indicator
Green = Power On
(Unit shown with cover removed)

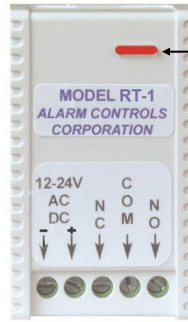

LED Indicator
Red = Relay Activated
(Unit shown with cover removed)

The RT-1 Receiver is packaged with a set of paired Transmitters.

To pair additional Transmitters with the Receiver -

1. Press the Learning Button on the Receiver. The LED on the Receiver will turn from green to red.
2. Press the button on the Transmitter two times. The LED on the Receiver will flash four times indicating that the Transmitter has been paired to the Receiver. If the LED on the Receiver flashes once and changes to green, pairing has failed. The Transmitter button must be pressed within 8 seconds or the Receiver will exit the learning mode.


Learning Button




To remove all learned Transmitters from the Receiver -

1. Press and hold the Learning Button on the Receiver. The LED on the Receiver will turn from green to red and then back to green.
2. Release the Learning Button and the LED will turn red.
3. Wait approximately 10 seconds and the LED will turn green again.

TYPICAL WIRING FOR
RELEASING A MAGNETIC LOCK

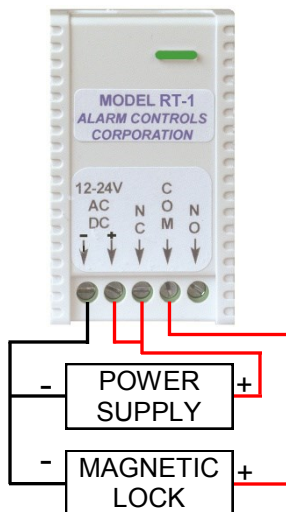


TYPICAL WIRING FOR
RELEASING AN ELECTRIC STRIKE

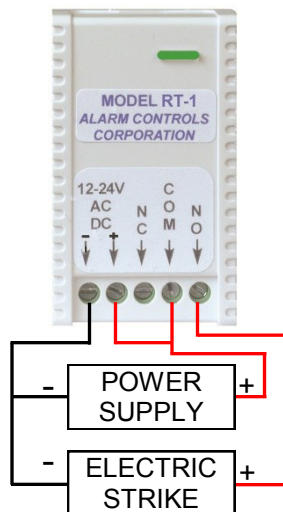

INSTRUCTIONS FOR CONVERTING MODEL RT-1 FROM MOMENTARY TO LATCHING OPERATION

Open Receiver case.
Pry open case where shown
Using a knife blade.

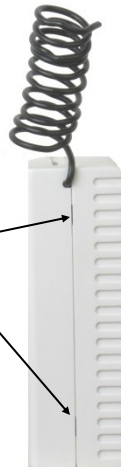

Locate the jumper which will allow Momentary or Latching function.



Jumper perpendicular
to JP1.
-Momentary Action



Jumper parallel to JP1.
-Alternating Action



Transmitter replacement battery type is CR2016. Each Transmitter requires 2 batteries.