



OPERATING MANUAL



PT380AU 200 Watts Digital AM/FM Stereo Receiver
PT390AU 300 Watts Digital AM/FM Stereo Receiver

www.pyleaudio.com


TABLE OF CONTENTS

Table of contents

Foreword	1
Features	1
Precautions	2
Technical specifications	3
Front panel function	4
Rear panel function	5
Remote device function	6
Connecting to amplifier	7
Safety instructions	8

What is Included:

 - Owner's manual 1
- Remote control 1
- One AC Power Cord 1
- FM Antenna 1Piece 1
- AM Antenna 1Piece 1
- One (1) MP3 input cable..... 1

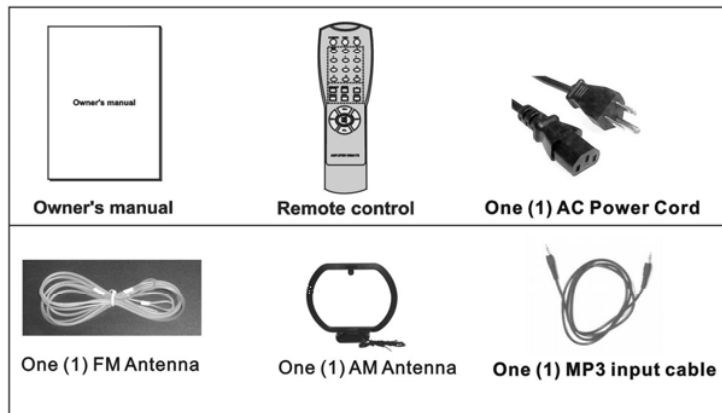

Foreword - Features

Foreword

Thank you for purchasing this fine amplifier.
Please read this operating instruction carefully before using. It will acquaint you fully with all its features and help you enjoy your time .
The product adopts the most advanced digital technique in the world. It is 4 channels with high power output, so to speak, the real acoustic centre of your family movie theatre.

Features

- ◆ Powers 4 loudspeakers
- ◆ AM/FM Radio With Digital Display Screen
- ◆ Auto Scan, Radio Station PREVIOUS/NEXT control
- ◆ Remote Control Included
- ◆ 50 Radio Station Pre-Set Memory
- ◆ Volume/Balance/TREBLE/BASS Gain Control For Main Channel
- ◆ VOLUME/BASS/TREBLE/ECHO Control For Microphone
- ◆ Two Microphone Input Jacks
- ◆ Two RCA Input Source
- ◆ 110/220V power switch
- ◆ AM/FM Antenna Included
- ◆ USB For Mp3 Player

Precautions

Precautions

1. Power source-The unit should be connected to a power supply AC~110V/60Hz or AC~220V/50Hz.
2. Ventilation-The unit should be situated so that its location or position does not interfere with its proper ventilation. Place the unit at least 10cm away from the walls.
3. Water and moisture-The unit should not be used near water-for example, near a swimming pool in a wet basement, etc.
4. Electric shock-if a metal object, such as hair pin or needle comes into contact inside this unit, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this unit.
5. Enclosure removal-Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.
6. Abnormal smell-if an abnormal smell or smoke is detected, immediately turn the power OFF and pull out the power cord. Contact your dealer or nearest service station.


Technical Specifications

Technical Specifications

Technical		PT380AU	PT390AU
Main Channel Power Output PMPO, 4 Ohms, 1KHz test THD(1KHz)		200WATTS <1%	300WATTS
Normal Load Impedance		8 Ohm	8 Ohm
Input Sensitivity Impedance	CD/DVD AUX/USB	300mV/33k Ohm	300mV/33k Ohm
	Microphone	6mV/600 Ohm	6mV/600 Ohm
Signal to Noise Ratio	Pure Amplifier	>76dB	>76dB
	KARAOKE	>71dB	>71dB
Frequency Range Frequency Response(40Hz-15KHz)		±2dB	±2dB
Tone Characteristic(100Hz-10KHz)		±12dB	±12dB
Power Fuse		T5A	T6A
Power Requirements		AC~110V/60Hz AC~220V50Hz	
Dimension		16.9" (W) x12.2" (D)x 4.7" (H) inch	
Weight		9.9 lbs	11.2 lbs


※ Specifications subject to change without prior notice

 Front panel

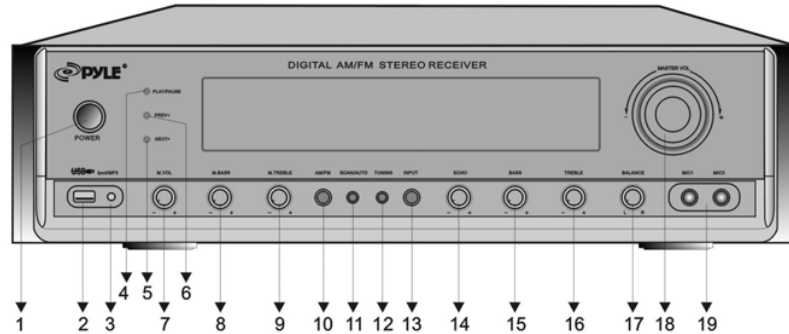


<p>1. POWER SWITCH Press to switch the power unit ON or OFF.</p> <p>2. USB JACK</p> <p>3. MP3/IOPD SIGNAL INPUT JACK</p> <p>4. PLAY/PAUSE USB play/pause</p> <p>5. NEXT> When it is TUNER, it means the next station; When it is USB, it means the next song.</p> <p>6. PREV< When it is TUNER, it means the preview station; When it is USB, it means the preview song.</p> <p>7. MIC VOLUME Adjusts the volume level. Turn the knob clockwise to increase the MIC volume.</p> <p>8. MIC BASS Adjusts the bass of MIC.</p> <p>9. MIC TREBLE Adjusts the treble of MIC.</p> <p>10. AM/FM SELECTOR</p>	<p>11. SCAN/AUTO Automatically search the signal of tuner.</p> <p>12. TUNING Press this key and turn the main volume control (18) to adjust the tuning.</p> <p>13. INPUT This is used to select the input sources: DVD/CD, AUX/USB, IPOD/MP3, TUNER,</p> <p>14. ECHO CONTROL Turn the knob to adjust the MIC echo level.</p> <p>15. BASS CONTROL Turn the knob to adjust the master bass level.</p> <p>16. TREBLE CONTROL Turn the knob to adjust the master treble level.</p> <p>17. BALANCE CONTROL Turn the knob to adjust the master balance level.</p> <p>18. MASTER VOLUME CONTROL Adjusts the volume level. Turn the knob clockwise to increase the volume.</p> <p>19. MIC INPUT JACK KARAOKE MIC connect to this jack.</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 Rear panel

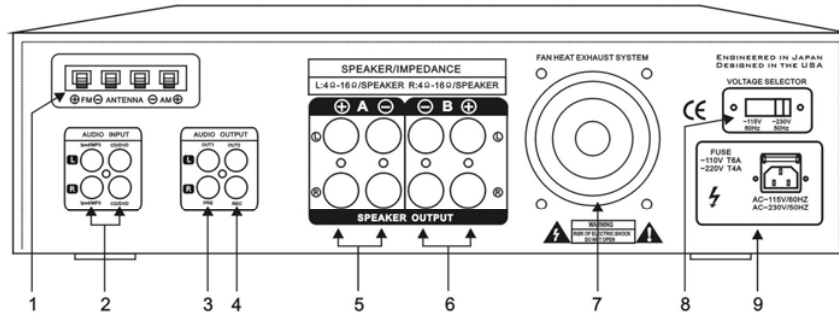

1. TUNER ANT
Connect for AM and FM antennas.
2. AUDIO INPUT JACKS
Connect the audio output jacks of IPOD/MP3 CD/DVD to these jacks.
3. PRE OUTPUT JACKS
Connect the professional input jacks to these jacks.
4. REC OUTPUT JACKS
Connect the RECORD input jacks to these jacks.
5. A SPEAKER OUTPUT TERMINALS
Connect your speaker system to these terminals.
6. B SPEAKER OUTPUT TERMINALS
Connect your the other speaker system(s) to these terminals.
7. Fan
Cooling Speed Fan
8. 110V/220V SWITCH
According to power voltage ,push this button to the station of the 110V or 220V.
9. POWER CORD
Connect to AC 110V/60Hz&220V/50Hz outlet.

 Remote

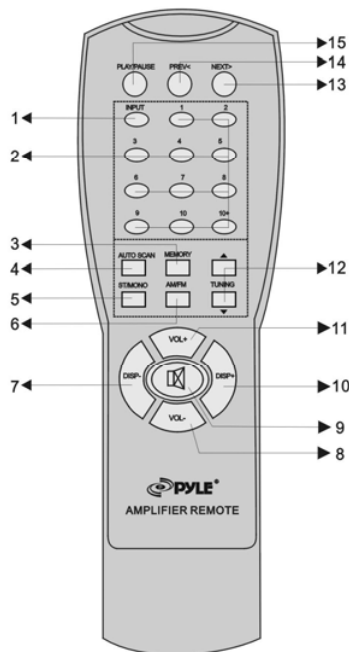


1. Signal input selector
DVD/CD,AUX/USB,IPOD/MP3,TUNER selector
2. Number buttons
Using for station SELECT & STORE
3. MEMORY
After a station has been found, you can store the station by pressing the MEMORY button.
4. AUTO SCAN
AM/FM auto scan selector, scan and store stations automatically. Can store 50 stations.
5. ST/MONO
Stereo and mono selector.
6. AM/FM
AM/FM selector.
- 7/10. DISP- / DISP+
Display Down And Up
- 8/11. VOL- / VOL+
Master Volume Down And Up
9. MUTE
Mute Selector
12. TUNING▲ TUNING▼
The two keys are used to adjust to the best signal of the stations.
13. USB Play Next
14. USB Play Prev
15. USB Play/Pause

Remote Control Operation

1. Remote control should be operated within 6 meters and the scope of 30° in front of receiver.
2. Make sure that there is no big obstacle between remote control and machine.
3. Remote sensor should be far away from the light, high amounts of light can affect its performance.

Rear Panel Connecting

 Connecting to amplifier

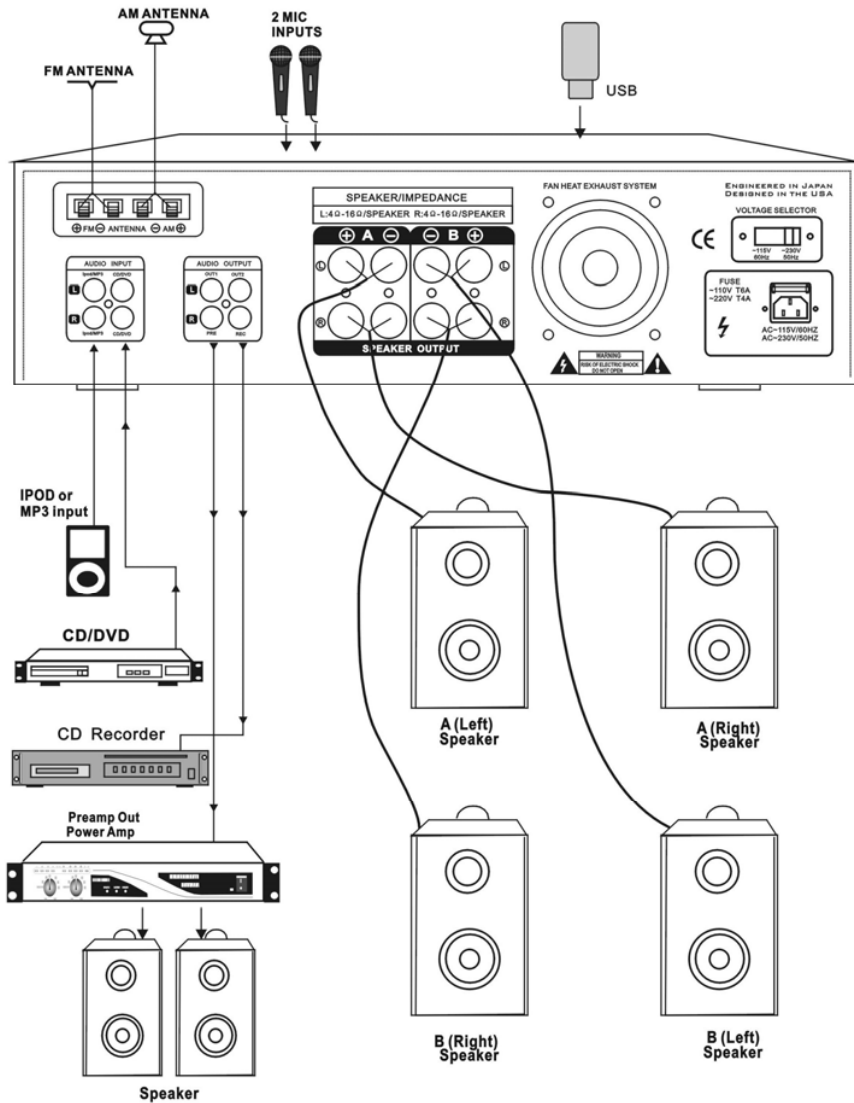

Safety Instructions

SAFETY INSTRUCTIONS

1. Make sure that all connections are properly connected and the main volume is set to minimum level before turning on the unit.
2. When more than one pair of speakers are used, (specially the main speaker output) make sure that the speakers used are of the same wattage and impedance, otherwise the unit maybe damaged under high power or long term operation.
3. To avoid humming sounds and unwanted noise, make sure that all the wires are properly inserted.
4. For speaker cords, strip off the vinyl coating and twist the wire tip. Push down the pink jack or loosen the screw terminal, before inserting the wire tip, then fasten it and tighten the screw. Be careful not to let the wires stick out of the terminal otherwise this may cause a short circuit when wires of different terminal contact each other.
5. After the unit is turned on, adjust the main volume to the desired level same is true with the bass and treble volume, etc.



PyleAudio.com

718.535.1800 718.236.2400 (fax)
1600 63rd Street, Brooklyn NY 11204