



User Manual

5MP IP Camera

O5B2/ O5B2M/ O5D2/ O5D2M/ O5T2/ O5T2M/ O5P2

Please read this manual carefully before operating the unit and keep it for further reference

Important Safeguards and Warnings

1. Electrical safety

All installation and operation here should conform to local electrical safety codes.

Use a certified/listed 12VDC Class2 power supply only.

Please note: Do not connect two power supplying sources to the device at the same time; it may result in device damage! The product must be grounded to reduce the risk of electric shock.

Improper handling and/or installation could run the risk of fire or electrical shock.

2. Environment

Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage, and installation.

This product should be installed in a cool, dry place away from direct sunlight and heat sources.

Do not install the product in extreme temperature conditions.

Do not expose the camera to electromagnetic radiation. Otherwise, it may result in CMOS sensor failure.

Do not block any ventilation openings.

Do not allow water and liquid intrusion into the camera.

3. Operation and Daily Maintenance

Please shut down the device and then unplug the power cable before you begin any maintenance work.

Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth dampened with a small quantity of neutral detergent. Finally use the dry cloth to clean the device.

Please use a professional optical cleaning method to clean the enclosure. Improper enclosure cleaning (such as using cloth) may result in poor IR functionality and/or IR reflection.

The grounding holes of the product are recommended to be grounded to further enhance the reliability of the camera.

Dome cover is an optical device, please do not touch or wipe cover surface directly during installation and use, please refer to the following methods if dirt is found.

Stained with dirt:

Use oil-free soft brush or hair dryer to remove it gently.

Stained with grease or fingerprint.

Use oil-free cotton cloth or paper soaked with alcohol or detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is not clean enough.

Warning

This camera should be installed by qualified personnel only.
All the examination and repair work should be done by qualified personnel.
Any unauthorized changes or modifications could void the warranty.

Statement

This guide is for reference only.
Product, manuals, and specifications may be modified without prior notice. Speco Technologies reserves the right to modify these without notice and without incurring any obligation.
Speco Technologies is not liable for any loss caused by improper operation.

Regulatory Information

FCC conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

FCC compliance:

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Note:

Before installation, check the package and make sure that all components are included.
Contact your rep or Speco customer service department immediately if something is broken or missing in the package.

Accessory name	Amount
Network Camera Unit	1
Junction box	1
Quick Start Guide	1
Installation Accessories Bag	1
CD	1

Table of Contents

1	Introduction	2
2	Web Access and Login	3
3	Live View.....	4
4	Camera Configuration	6
4.1	System Configuration.....	6
4.1.1	System Information	6
4.1.2	Date and Time.....	6
4.1.3	Local Recording.....	7
4.1.4	Storage.....	7
4.2	Video Configuration.....	9
4.2.1	Image Configuration	9
4.2.2	Video / Audio Configuration	11
4.2.3	OSD Configuration	12
4.2.4	Video Mask	12
4.2.5	ROI Configuration	13
4.2.6	Zoom/Focus	14
4.3	Event Setup.....	14
4.3.1	Motion Detection	14
4.3.2	Other Alarms.....	16
4.3.3	Alarm In (Sensor Input).....	17
4.3.4	Alarm Out	18
4.3.5	Alarm Server	19
4.4	Analytics Configuration.....	19
4.4.1	Exception	19
4.4.2	Line Crossing	20
4.4.3	Intrusion.....	22
4.4.4	Face Detection	24
4.4.5	Region Entrance.....	25
4.4.6	Region Exiting	26
4.4.7	Target Counting.....	28
4.5	Network Configuration	29
4.5.1	TCP/IP.....	29
4.5.2	Port	30
4.5.3	Server Configuration	31
4.5.4	Onvif.....	31
4.5.5	DDNS.....	31
4.5.6	SNMP	32
4.5.7	802.1x	33
4.5.8	RTSP	33
4.5.9	RTMP.....	34
4.5.10	UPNP.....	34
4.5.11	Email	34
4.5.12	FTP	35
4.5.13	HTTPS.....	35
4.5.14	QoS.....	36
4.6	Security Configuration	37
4.6.1	User Admin	37
4.6.2	Online User	38

4.6.3	Block and Allow Lists.....	38
4.6.4	Security Management.....	39
4.7	MaintenanceConfiguration.....	40
4.7.1	Backup and Restore	40
4.7.2	Reboot	40
4.7.3	Upgrade	40
4.7.4	Operation Log	41
5	Search.....	42
5.1	Image Search	42
5.2	Video Search	44
5.2.1	Local Video Search	44
5.2.2	SD Card Video Search.....	45
Appendix	48
Appendix 1 Troubleshooting	48
Appendix 2 Specifications	49

1 Introduction

Welcome

Thank you for purchasing this network camera!



Please read this manual carefully before operating the unit and retain it for further reference.

Should you require any technical assistance, please contact Speco Technologies Technical Support at 1-800-645-5516.

Main Features

- Built-in PoE (Power over Ethernet)
- Integrated IR LEDs for clear vision in low light
- IP67 rated for outdoor installations
- Remote viewing support via web browser, mobile APP, and CMS/VMS

Applications

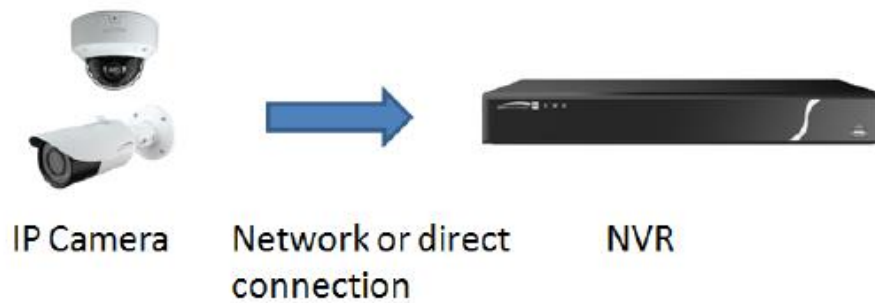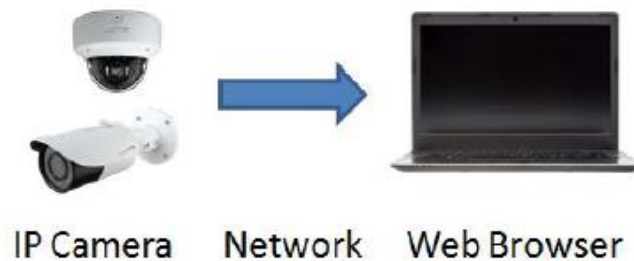

2 Web Access and Login

The IP camera settings can be accessed via a web browser through the LAN.

Available web browser: IE (plug-in required)/ Firefox/Edge/Safari/Google Chrome

It is recommended to use the latest version of these web browsers.

The menu display and operation of the camera may be slightly different by using the browser with plug-in or without plug-in. Installing plug-in will display more functions of the camera.

Connect IP-Cam via LAN or WAN. Here only take IE browser for example. The details are as follows:


- Access through IP Scanner

Network connection:




① Make sure the PC and IP-Cam are connected on the same local network. The camera is set to DHCP by default and will be assigned an IP address by the DHCP server. Make sure that the local network has a DHCP server. Routers typically have a DHCP server built in.

② Install IP Scanner from the CD and run it after installation. IP Scanner is the tool for discovering the IP cameras on the local network.

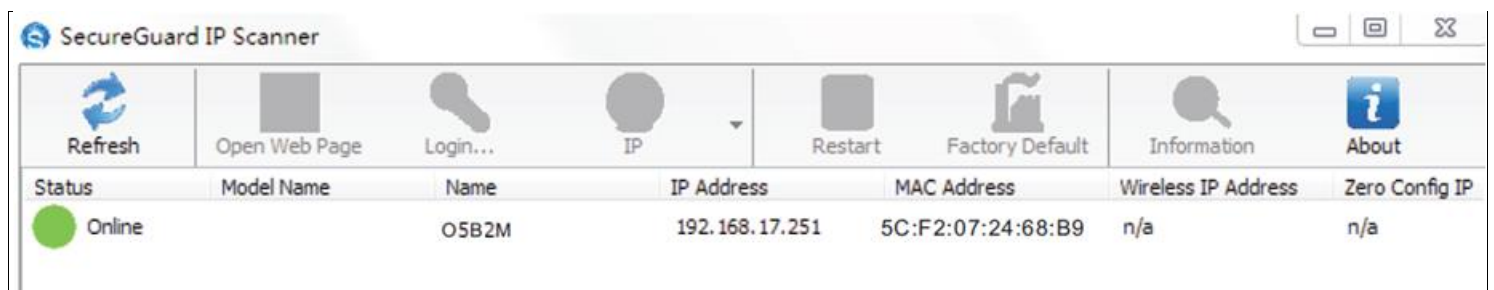


③ In the device list, the IP address, model number, and MAC address of each device will be listed. Select the applicable device and double click to open up the web viewer. You can also manually enter the IP address in the address bar of the web browser. Read the privacy statement and then check and click “Already Read” to enter the login interface.

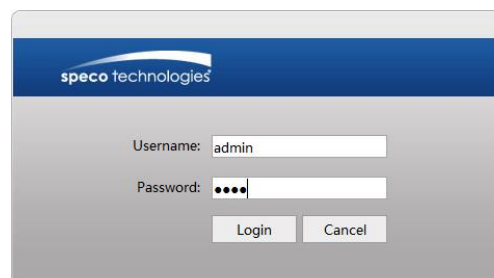

The login interface is shown above. Default username is **admin** and password is **1234**. After logging in, follow directions to install applicable plug-ins for viewing video if prompted.

3 Live View

The window below will be shown after logging in.

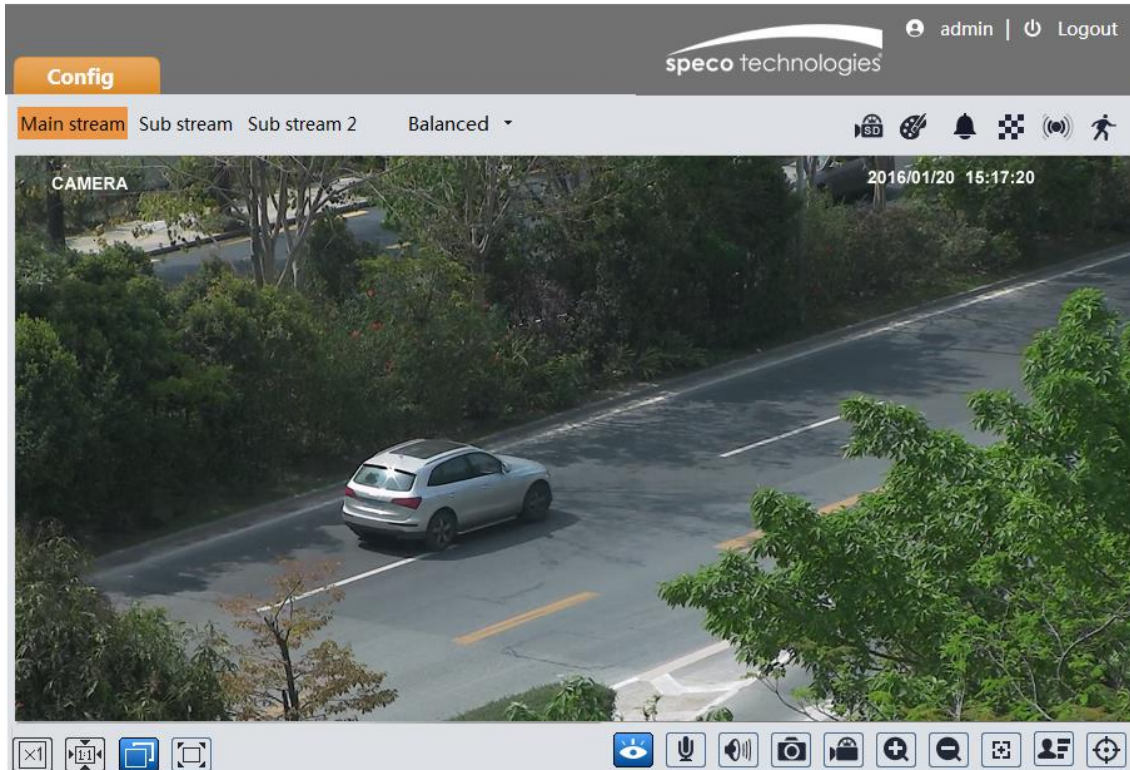






The following table describes the icons on the live view interface

Icon	Description	Icon	Description
	Original size of resolution		SD card recording indicator
	Fit (correct scale)		Abnormal color indicator
	Auto (fill the window)		Abnormal clarity indicator
	Full screen (show video only)		Scene change indicator
	Start/stop live view		Line crossing indicator
	Start/stop two-way audio		Region entrance indicator
	Enable/disable audio		Region exiting indicator
	Snapshot		Line Crossing Target counting indicator
	Start/stop local recording		Intrusion indicator
	Zoom in (for motorized models)		Sensor alarm indicator
	Zoom out (for motorized models)		Motion alarm indicator
	Zoom/Focus control (for motorized models)		Face detection indicator
	Rule information display		Face detection

*Plug-in free live view: PTZ control, two-way audio and local recording are not supported.


- All indicator icons above will flash in live view interface only when the corresponding events are enabled.
- In full screen mode, to exit, double click on the mouse or press the ESC key on the keyboard.


Click the zoom/focus control button to show the control panel. The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

Face Capture View

① Go to Config→Event→Face Detection interface. Check “Enable”.

② Return to the live view interface. Click  to go to the following interface. When there are faces detected, the face pictures will be listed on the right.

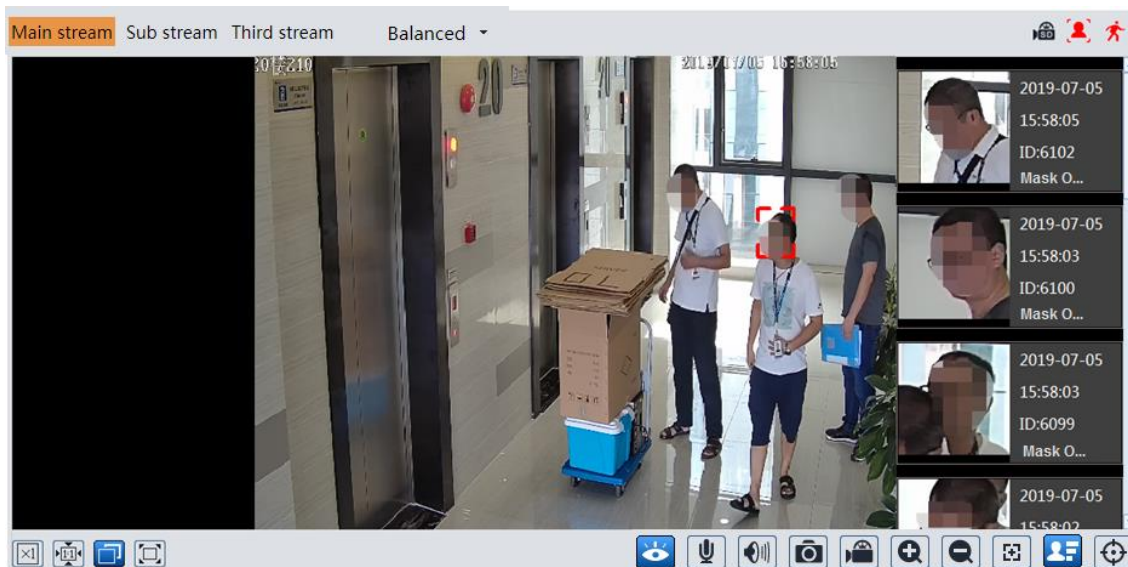

4 Camera Configuration

Press the “Setup” button to go to the configuration interface.

Note: Wherever applicable, click the “Save” button to save the settings.

4.1 System Configuration

4.1.1 System Information

In the “System Information” interface, the system information of the device is listed.

Device Name	<input type="text" value="O5D2M"/>
Product Model	<input type="text" value="O5D2M"/>
Brand	<input type="text" value="Speco"/>
Software Version	<input type="text" value="5.1.1.0(20697)"/>
Software Build Date	<input type="text" value="2021-06-23"/>
Onvif Version	<input type="text" value="20.12"/>
OCX Version	<input type="text" value="2.1.7.8"/>
MAC	<input type="text"/>
About this machine	Look Over
Privacy Statement	Look Over

4.1.2 Date and Time

To set the time and date, go to System→Date and Time. Please refer to the following interface.

Zone Date and Time

Zone

DST

Auto DST

Manual DST


Start Time Hour

End Time Hour

Time Offset


Select the applicable time zone and enable / disable DST as needed.

Click the “Date and Time” tab to set the time and date.

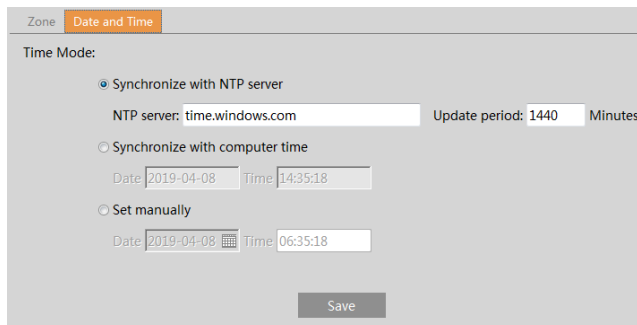

4.1.3 Local Recording

Go to System→Local Recording to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable the bitrate display in the recorded files.

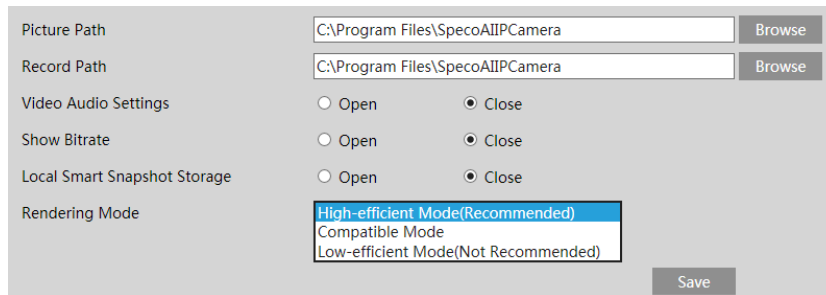


Additionally, the snapshots triggered by smart events (including face detection, line crossing detection and intrusion detection) can be selected to save to the local PC.

Rendering Mode: High-efficient mode, compatible mode or low-efficient mode can be optional.

If the performance of your computer is not compatible with the web client or your computer has no graphics card, low-efficient mode is suggested.

4.1.4 Storage

Go to System→Storage to go to the interface as shown below.

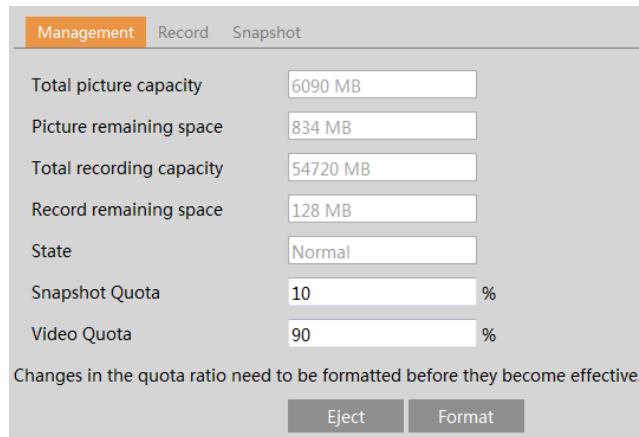

● SD Card Management

When the card is used for the first time, click the “Format” button to format the SD card. **All data on the card will be cleared by clicking this button.**

Click the “Eject” button to stop writing data to the SD card. Then the SD card can be ejected safely.

Snapshot Quota: Set the capacity proportion of captured pictures on the SD card.

Video Quota: Set the capacity proportion of record files on the SD card.

● Schedule Recording Settings

1. Go to Storage→Record to go to the interface as shown below.

Management **Record** Snapshot

Record Parameters

Record Stream: Main stream

Pre Record Time: No Pre Record (H264,H265,MJPEG)

Cycle Write: Yes

2. Set record stream, pre-record time and cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

Timing

Enable Schedule Record Erase Add

Week Schedule

Sun. 00:00-24:00 Manual Input

Mon. 00:00-24:00 Manual Input

Tue. 00:00-24:00 Manual Input

Wed. 00:00-24:00 Manual Input

Thu. 00:00-24:00 Manual Input

Fri. 00:00-24:00 Manual Input

Sat. 00:00-24:00 Manual Input

Holiday Schedule

Date: 04-08 Add Delete

00:00-24:00 Manual Input

Save

Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one-hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

Day schedule

Set the alarm time for alarm a special day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

● Snapshot Settings

Go to System→Storage→Snapshot to go to the interface as shown below.

Management	Record	Snapshot
Snapshot Parameters		
Image Format	JPEG	
Resolution	704x480	
Image Quality	Low	
Event Trigger		
Snapshot Interval	1	Second
Snapshot Quantity	5	

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.


Timing Snapshot: Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).

4.2 Video Configuration

Video Configuration includes Image Settings, Video/Audio Setup, OSD, Privacy Mask and Region of Interest.

4.2.1 Image Configuration

In the Image Settings interface as shown below, various settings can be adjusted, such as brightness, contrast, hue, and saturation and so on. The common mode and day and night mode can be set up separately. The image effect can be quickly viewed by switching the configuration file.

Camera Parameters	Profile Management
	
Config File: Common	
Brightness	50
Contrast	50
Hue	50
Saturation	50
Sharpness	128
Noise Reduction	128
Defog	128
Lens Distortion Correction	80
Auto Iris	<input checked="" type="checkbox"/> (disable without auto iris lens)
BLC	Off
HFR	Off
Antiflicker	Off
Smart IR	Off
White Balance	Auto
Day/Night Mode	Auto
Sensitivity	Mid
Delay Time(Second)	2
Gain Mode	Auto
Gain Limit	50
<input type="button" value="Default"/> <input type="button" value="Revoke"/>	

Brightness: Set the brightness level of the camera’s image.

Contrast: Set the color difference between the brightest and darkest parts.

Hue: Set the total color degree of the image.

Saturation: Set the degree of color purity. The purer the color, the brighter the image is.

Sharpness: Set the resolution level of the image plane and the sharpness level of the image edge.

Noise Reduction: Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Defog: Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy, or rainy environment to get clear images.

Lens Distortion Correction: When the image appears distortion to some extent, please enable this function and adjust the level according to the actual scene to correct the distortion.

Auto Iris: If your camera is auto Iris, please enable it.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function. It is the default mode.
- WDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area. Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.
- HLC: lowers the brightness of the entire image by suppressing the brightness of the image’s bright area and reducing the size of the halo area.
- BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.

HFR: High Frame Rate. If “ON” is selected, the system will restart and then the maximum value of the frame rate of the main stream can be set to 60 fps /50fps.

Antiflicker:

- Off: disables the anti-flicker function. This is used mostly in outdoor installations.
- 50Hz: reduces flicker in 50Hz lighting conditions.
- 60Hz: reduces flicker in 60Hz lighting conditions.

Smart IR: Choose “ON” or “OFF”. This function can effectively avoid image overexposure and underexposure by controlling the brightness of the IR lights according to the actual conditions to make the image more realistic. Please enable it as needed.

White Balance: Adjust the color temperature according to the environment automatically.

Frequency: 50Hz and 60Hz can be optional.

Day/Night Mode: Choose “Auto”, “Day”, “Night” or “Timing”.

Gain Mode: Choose “Auto” or “Manual”. If “Auto” is selected, the gain value will be automatically adjusted according to the actual situation. If “Manual” is selected, the gain value shall be set manually. The higher the value is, the brighter the image is.

Frequency: 50Hz and 60Hz can be optional.

Infra-red Mode: Choose “Auto”, “ON” or “OFF”.

Exposure Mode: Choose “Auto” or “Manual”. If manual is chosen, the digital shutter speed can be adjusted.

Corridor Pattern: Corridor viewing modes can be used for situations such as long hallways. 0, 90, 180 and 270 are available. The default value is 0. The video resolution should be 1080P or below if this function is used.

Image Mirror: Turn the current video image horizontally.

Image Flip: Turn the current video image vertically.


Schedule Settings of Image Parameters:

Click the “Profile Management” tab as shown below.

The screenshot shows a web interface for camera settings. At the top, there are two tabs: 'Camera Parameters' and 'Profile Management', with 'Profile Management' being the active tab. Below the tabs, there are two dropdown menus. The first is labeled 'Schedule' and has 'Full Time' selected. The second is labeled 'Config File' and has 'Common' selected. At the bottom right of the form, there is a 'Save' button.

Set full time schedule for common, day or night mode and specified time schedule for day and night. Choose “Timing” in the


drop-down box of schedule as shown below.

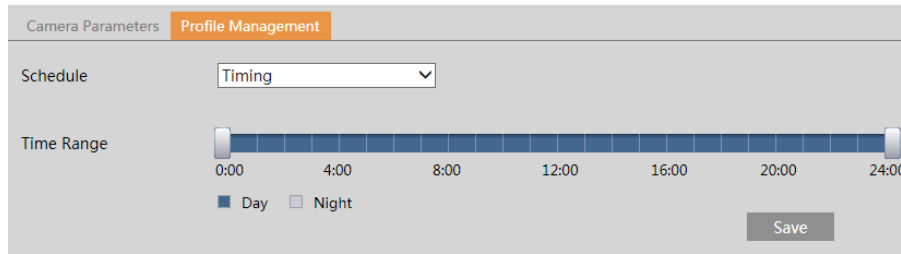


Drag “🕒” icons to set the time of day and night. Blue means daytime and blank means night time. If the current mode of camera parameters is set to “Timing”, the image configuration mode will automatically switch between day and night according to the schedule.

4.2.2 Video / Audio Configuration

Go to Image→Video / Audio interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

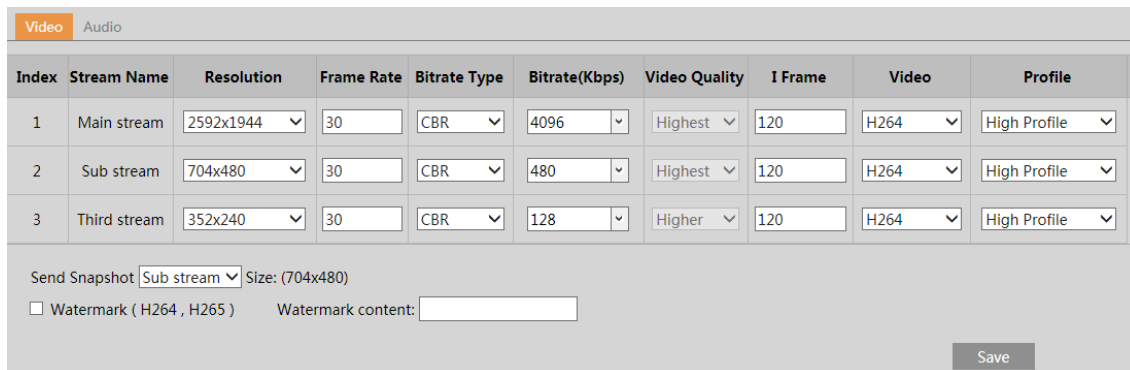

Click the “Audio” tab to go to the interface as shown below.

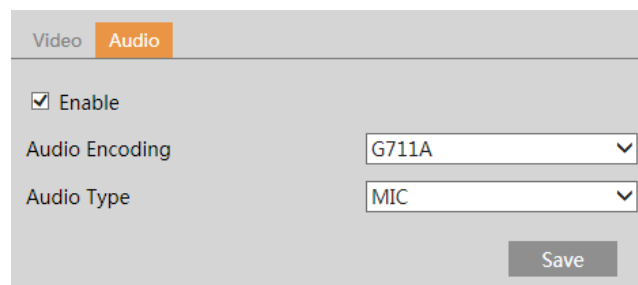

Three video streams can be adjustable.

Resolution: The size of image.

Frame rate: The higher the frame rate, the video is smoother.

Bitrate type: CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.

Bitrate: it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

Video Quality: It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.

I Frame interval: It determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth usage. However, if

the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

Video Compression: MJPEG, H264+, H264, H265 or H265+ can be optional. MJPEG is not available for main stream. If H.265/H.265+/H.265S is chosen, make sure the client system is able to decode H.265/H.265+. Compared to H.265, H.265+ saves more storage space with the same maximum bitrate in most scenes. Compared to H.264, H.265 reduces the transmission bitrate under the same resolution, frame rate and image quality.

Profile: For H.264. Baseline, main and high profiles are selectable.

Send Snapshot: Set the snapshot stream.

Video encode slice split: If this function is enabled, smooth image can be gotten even though using the low-performance PC.


Watermark: When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Audio Encoding: G711A and G711U are selectable.

Audio Type: LIN. Some models may support MIC type.

4.2.3 OSD Configuration

Go to Video→OSDinterface as shown below.

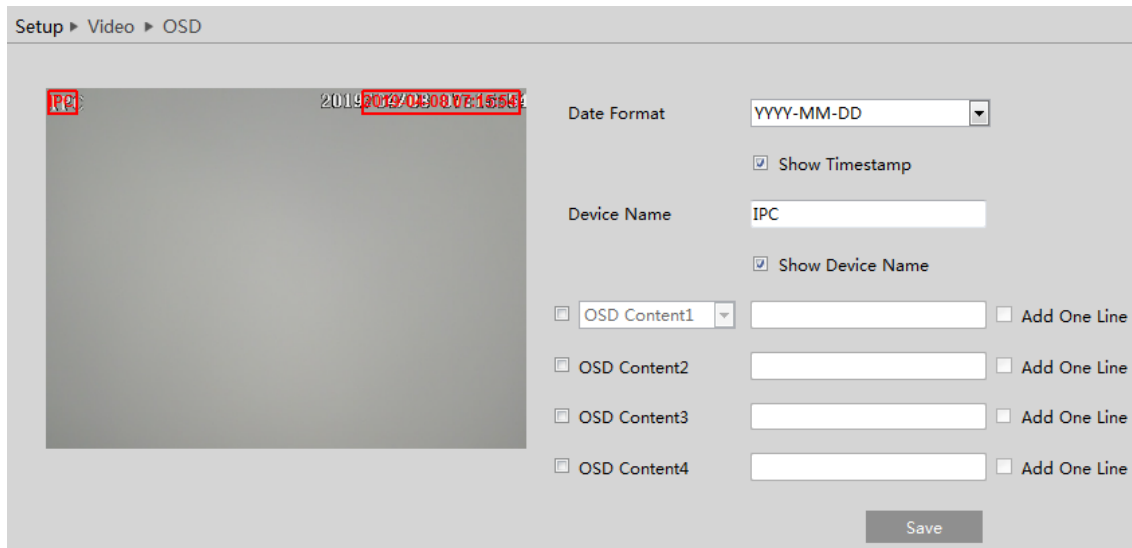


Set time stamp, device name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the “Save” button to save the settings.

Picture Overlap Settings:

Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlap picture. The pixel of the image shall not exceed 200*200, or it cannot be uploaded.

4.2.4 Video Mask

Go to Image→Video Mask interface as shown below. A maximum of 4 zones can be set up.

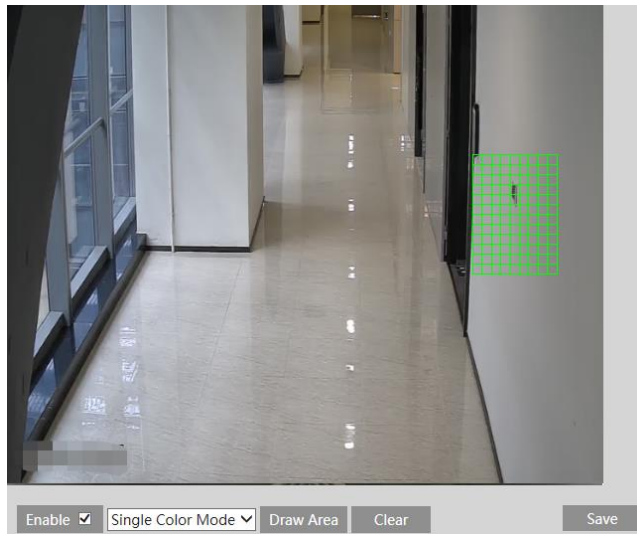

To set up video mask:

1. Enable video mask.
2. Click the “Draw Area” button and then drag the mouse to draw the video mask area.
3. Click the “Save” button to save the settings.
4. Return to the live to verify that the area have been drawn as shown as blocked out in the image.




To clear the video mask:

Click the “Clear” button to delete the current video mask area.

4.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

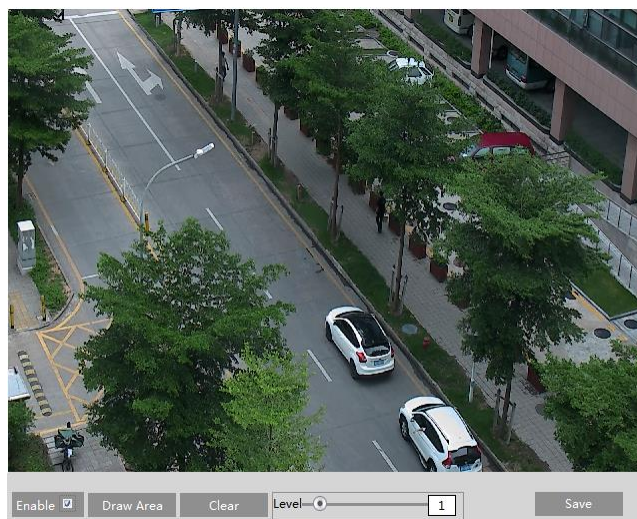


1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.



4.2.6 Zoom/Focus


This function is only available for the model with motorized zoom lens. Within this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically.

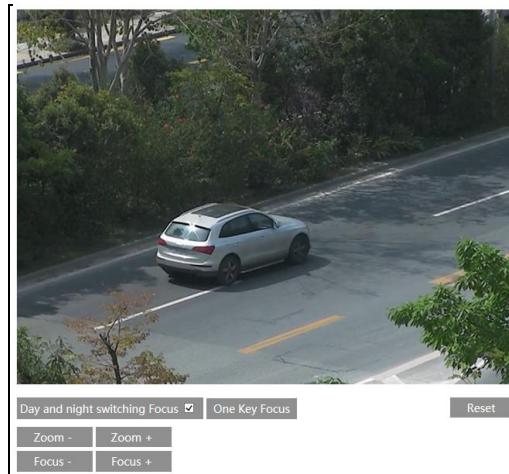

4.3 Event Setup

4.3.1 Motion Detection

Go to Alarm → Motion Detection to set motion detection alarm.

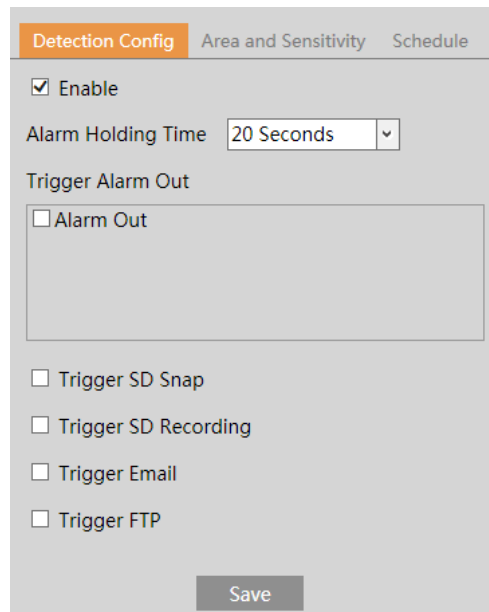

1. Check “Enable” check box to activate motion-based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.

Alarm Out: If selected, this would trigger an external relay output that is connected to the camera on detecting a motion-based alarm.


Trigger SD Snap: If selected, the system will capture images on motion detection and save the images on an SD card.

Trigger SD Recording: If selected, video will be recorded on an SD card on motion detection.

Trigger Email: If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

Trigger FTP: If “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

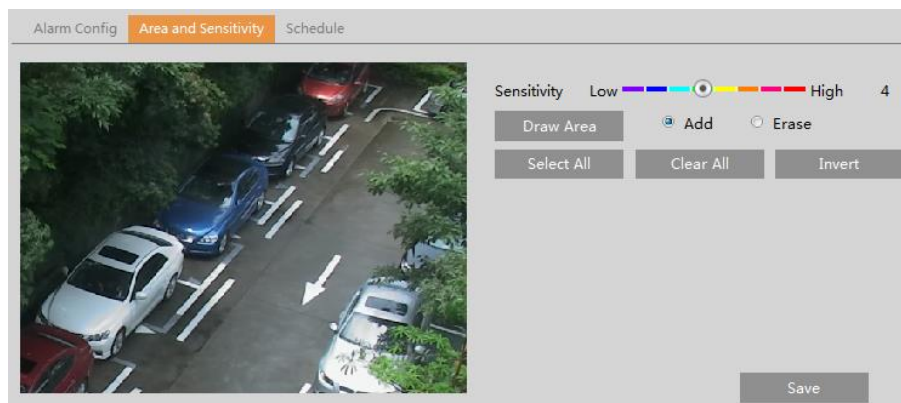

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily. Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” to save the settings. “Clear All” can be used to clear out the entire motion zone.

3. Set the schedule for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

4.3.2 Other Alarms

- **SD Card Full**

1. Go to Alarm→Anomaly→SD Card Full.

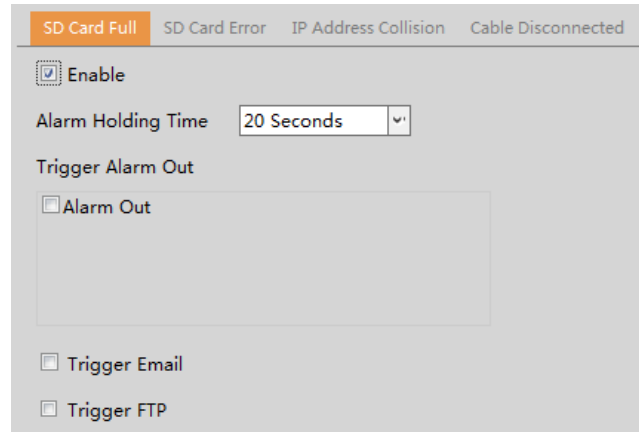


2. Click “Enable” and set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

- **SD Card Error**

When there are some errors in writing SD card, the corresponding alarms will be triggered.

1. Go to Alarm→Anomaly→SD Card Error as shown below.

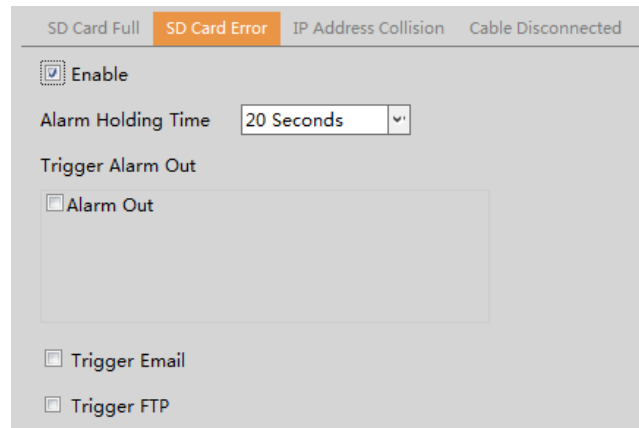

2. Click “Enable” and set the alarm holding time.

3. Set alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.

- **IP Address Conflict**

This function is only available for the models with Alarm Out interface.

1. Go to Alarm→Anomaly→IP Address Collision as shown below.

SD Card Full SD Card Error **IP Address Collision** Cable Disconnected

Enable

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the IP address of the camera conflicts with the IP address of other devices, the system will trigger the alarm out.

- **Cable Disconnection**

This function is only available for the models with Alarm Out interface.

1. Go to Alarm→Anomaly→Cable Disconnected as shown below.

SD Card Full SD Card Error IP Address Collision **Cable Disconnected**

Enable

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

4.3.3 Alarm In (Sensor Input)

This function is only available for some models. To set sensor alarm (alarm in):

Go to Alarm→Alarm In interface as shown below.

Detection Config Schedule

Enable

Alarm Type NO

Alarm Holding Time 20 Seconds

Sensor Name

Trigger Alarm Out

Alarm Out

Trigger SD Snap

Trigger SD Recording

Trigger Email

Trigger FTP

Save

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.
3. Click “Save” button to save the settings.
4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

4.3.4 Alarm Out

This function is only available for some models. Go to Alarm→Alarm Out.

The screenshot shows the configuration interface for the Alarm Out function in Alarm Linkage mode. It includes the following fields and controls:

- Alarm Out Mode:** A dropdown menu set to "Alarm Linkage".
- Alarm Out Name:** A text input field containing "alarmOut1".
- Alarm Holding Time:** A dropdown menu set to "20 Seconds".
- Alarm Type:** A dropdown menu set to "NC".
- Save:** A button located at the bottom right of the form.

Alarm Out Mode: Alarm linkage, manual operation, day/night switch linkage and schedule are optional.

Alarm Linkage: Having selected this mode, select alarm out name, alarm holding time at the “Alarm Holding Time” pull down list box and alarm type.

Manual Operation: Having selected this mode, select alarm type and click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.

The screenshot shows the configuration interface for the Alarm Out function in Manual Operation mode. It includes the following fields and controls:

- Alarm Out Mode:** A dropdown menu set to "Manual Operation".
- Alarm Type:** A dropdown menu set to "NC".
- Manual Operation:** Two buttons labeled "Open" and "Close".
- Save:** A button located at the bottom right of the form.

Day/Night Switch Linkage: Having selected this mode, select the alarm type and choose to open or close alarm out when the camera switches to day mode or night mode.

The screenshot shows the configuration interface for the Alarm Out function in Day/Night Switch Linkage mode. It includes the following fields and controls:

- Alarm Out Mode:** A dropdown menu set to "Day/night switch linkage".
- Alarm Type:** A dropdown menu set to "NC".
- Day:** A dropdown menu set to "Close".
- Night:** A dropdown menu set to "Close".
- Save:** A button located at the bottom right of the form.

Timing: Select the alarm type. Then click “Add” and drag the mouse on the timeline to set the schedule of alarm out; click “Erase” and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

Alarm Out Mode: Timing

Alarm Type: NC

Time Range: 05:30-14:00

Manual Input

Save

4.3.5 Alarm Server

Go to Alarm→Alarm Server interface as shown below.

Set the server address, port, heartbeat, and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

Setup ▶ Event Setup ▶ Alarm Server

Server Address: [Text Field]

Port: 0

Heartbeat: Disable

Heartbeat interval: 30 Second

OK

4.4 Analytics Configuration

This series of IP cameras supports certain smart functions, such as line crossing detection, region intrusion detection, etc. These events can be triggered as alarm events.


For more accuracy, here are some recommendations for installation.

- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.
- Avoid scenario where the object’s color is similar to the background color.
- At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.
- Ensure that the specific analytic enabled meet the minimum requirements for percentage of screen and/or distance.

4.4.1 Exception

This function can detect changes in the surveillance environment affected by the external factors.

Go to Event→Exception interface as shown below.

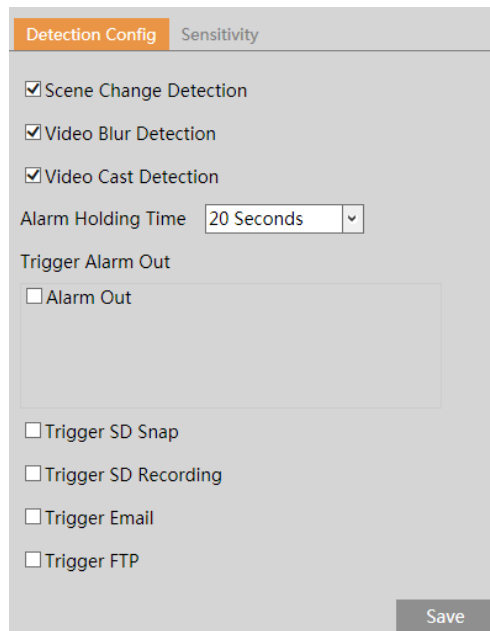

1. Enable the applicable detection that is desired.

Scene Change Detection: Alarms will be triggered if the scene of the video has changed.


Video Blur Detection: Alarms will be triggered if the video becomes blurry.

Video Cast Detection: Alarms will be triggered if the video becomes obscured.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

3. Click “Save” button to save the settings.

4. Set the sensitivity of the exception detection. Click “Sensitivity” tab to go to the interface as shown below.

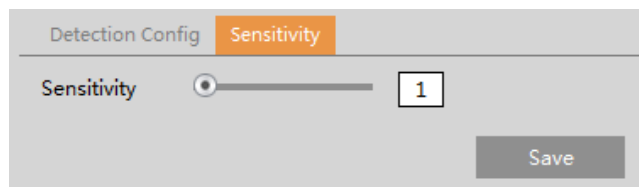

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click “Save” button to save the settings.

The sensitivity value of Scene Change Detection: The higher the value is, the more sensitive the system responds to the amplitude of the scene change.

The sensitivity value of Video Blur Detection: The higher the value is, the more sensitive the system responds to the blurriness of the image.

The sensitivity value of Video Cast Detection: The higher the value is, the more sensitive the system responds to the obscuring of the image.

※**The requirements of camera and surrounding area**

1. Auto-focusing function should not be enabled for exception detection.

2. Try not to enable exception detection when light changes greatly in the scene.

4.4.2 Line Crossing

Line Crossing: Alarms will be triggered if the target crosses the defined alarm lines.

Go to Event→Line Crossing interface as shown below.

The screenshot shows the 'Detection Config' window with the following settings:

- Enable:**
- Save Panoramic Picture To SD Card:**
- Save Target Cutout To SD Card:**
- Detection Target:**
 - Human:** Sensitivity: 50
 - Motor Vehicle:** Sensitivity: 50
 - Non-motor Vehicle:** Sensitivity: 50
- Alarm Holding Time:** 20 Seconds
- Trigger Alarm Out:**
 - Alarm Out:**
 - Trigger SD Snap:**
 - Trigger SD Recording:**
 - Trigger Email:**
 - Trigger FTP:**
- Save:** Button at the bottom.

1. Enable line crossing alarm and select the snapshot type and the detection target.

Save Panoramic Picture: If it is enabled, the detected panoramic pictures will be captured and saved to the SD card when there are targets detected.

Save Target Cutout: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when there are targets detected.

Note: To save images to a local PC, please enable the local smart snapshot storage first (System→Local Recording). To save images to an SD card, please install an SD card first.

Detection Target:

Human: Select it and then alarms will be triggered if someone crosses the pre-defined alarm line.

Motor Vehicle: Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm line.

Non-motor Vehicle: Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) crosses the pre-defined alarm line.


All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.

4. Click “Save” button to save the settings.

5. Set area and sensitivity of the line crossing alarm. Click the “Area and Sensitivity” tab to go to the interface as shown below.

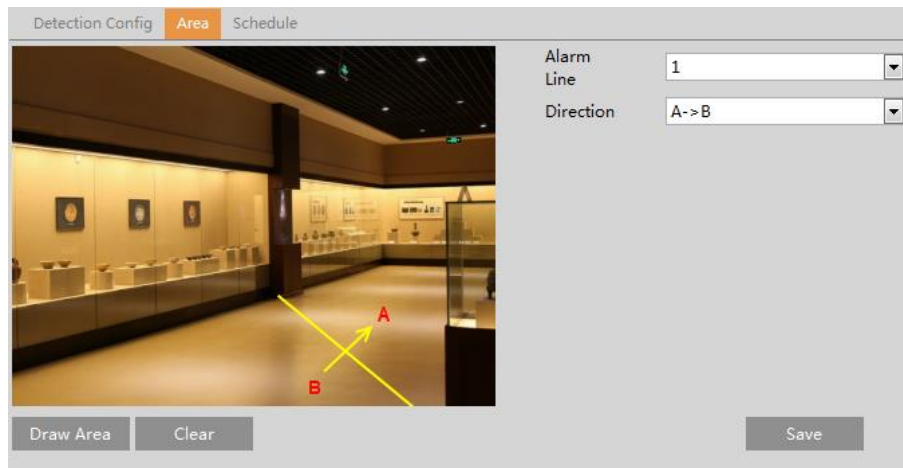

Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

Direction: A<->B, A->B and A<-B optional. This indicates the direction of the intruder who crosses over the alarm line that would trigger the alarm.

A<->B: The alarm will be triggered when the intruder crosses over the alarm line from B to A or from A to B.

A->B: The alarm will be triggered when the intruder crosses over the alarm line from A to B.

A<-B: The alarm will be triggered when the intruder crosses over the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.

6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup (See [Schedule Recording](#)).


※ Configuration of camera and surrounding area

1. Auto-focusing function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 10ft or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image. This analytic relies on the percentage of the detected objects relative to the entire image and not distance.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial for line crossing detection.


4.4.3 Intrusion

Intrusion: Alarms will be triggered if the target intrudes into the defined areas.

Go to Event→Intrusion interface as shown below.

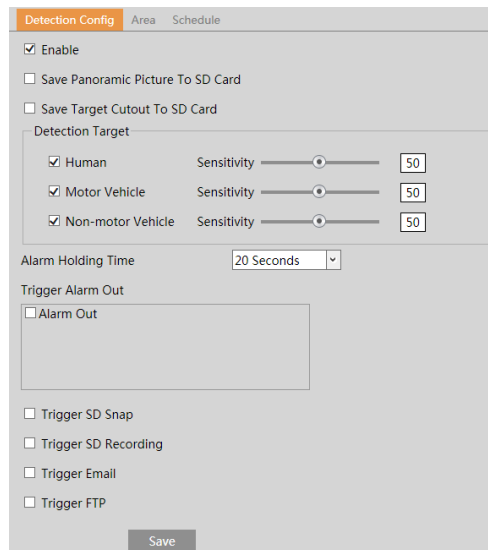

1. Enable intrusion alarm and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Click the “Save” button to save the settings.
4. Set the alarm area of the intrusion detection. Click the “Area” tab to go to the interface as shown below.

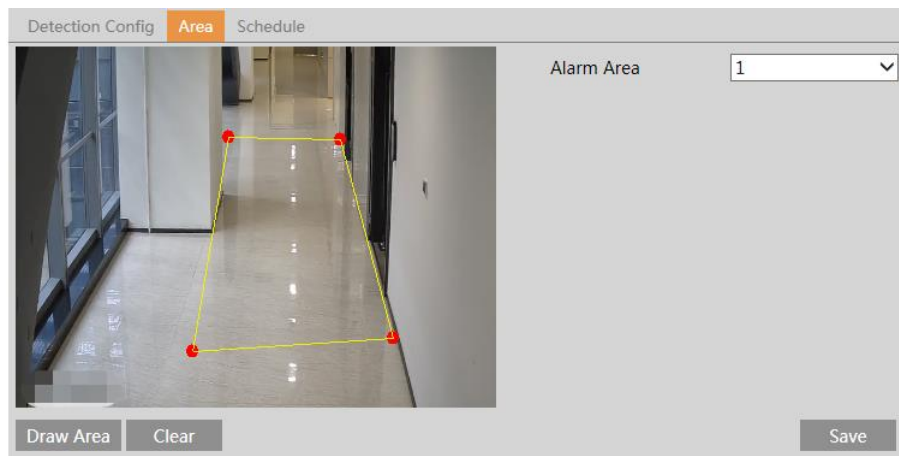

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

5. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).


※ **Configuration requirements of camera and surrounding area**

1. Auto-focusing function should not be enabled for intrusion detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 10ft or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image. This analytic relies on the percentage of the detected objects relative to the entire image and not distance.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial to line crossing detection.

4.4.4 Face Detection

Face detection function is to detect the face appearing in the surveillance scene. Alarms will be triggered when a face is detected. The setting steps are as follows:

1. Go to Event→Face Detection as shown below.

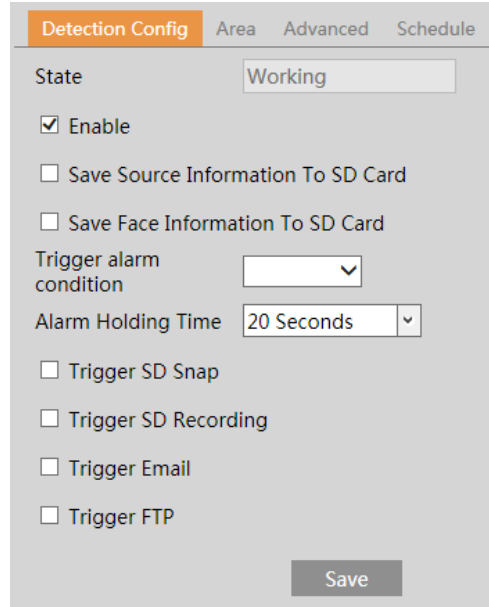

2. Enable the face detection function.


Save Source Information: if checked, the whole picture will be saved to an SD card when detecting a face.

Save Face Information: if checked, the captured face picture will be saved to an SD card when detecting a face.

Note: To save images to a local PC, please enable the local smart snapshot storage first (System→Local Recording). To save images to an SD card, please install an SD card first.

3. Set alarm holding time and alarm trigger options. The alarm trigger setup steps are the same as motion detection setup. Please refer to [motion detection](#) chapter for details.

4. Set alarm detection area.

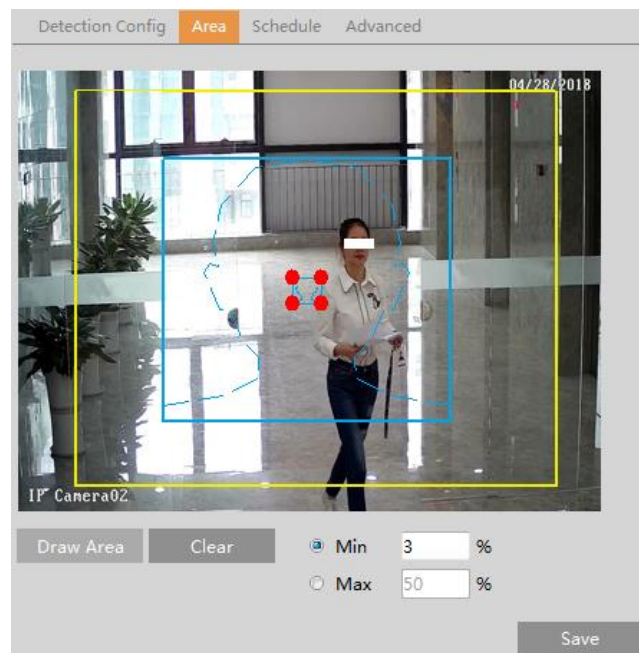


Use this to draw the approximate size of the face that you want the camera to capture. This is useful when there are multiple faces

in the background or foreground that are not needed to be captured. To enable, Click “Draw Area” and drag the border lines of the rectangle to modify its size. Move the rectangle to change its position. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area. Then set the detectable face size by defining the maximum value and the minimum value(The default size range of a single face image occupies from 3% to 50% of the entire image). This analytic relies on the percentage of the face to the entire image as well as distance.

5. Set the schedule of the face detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

6. Advanced configuration. Choose the snapshot interval and number as needed to avoid capturing multiple similar pictures in a very short period of time.

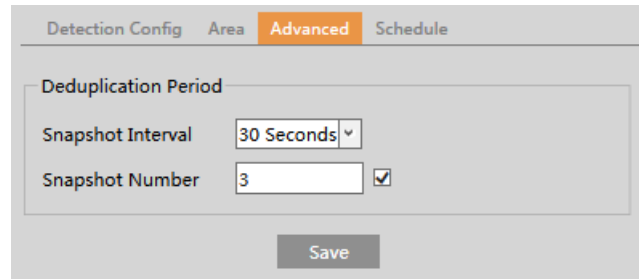


Snapshot Interval: If 5 seconds is selected, the camera will capture the same target once every 5 seconds during its continuous tracking period.

Snapshot Number: If the snapshot number is enabled and set (eg. 3), the camera will capture the same target once every 5 seconds and it will capture this target 3 times at most during its continuous tracking period. If the snapshot number is disabled, the camera will capture the same target once every 5 seconds until the target disappears in the detected area.

※ **Configuration requirements of camera and surrounding area**

1. Cameras must be installed in the area with stable and adequate light sources.
2. The installation height ranges from 1.9m(6.2ft) to 2.5m(8.2ft), adjustable according to the focal-length of different lenses and object distances.
3. The depression angle (α) of the camera shall be less than or equal to 15°.

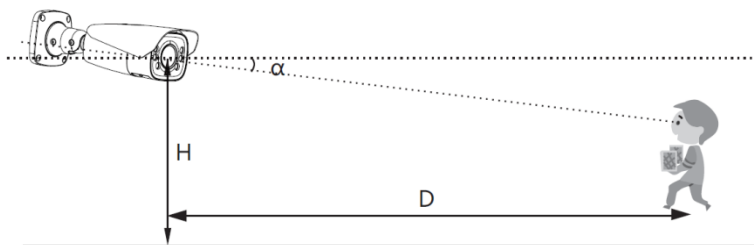


4. The object distance depends on the focal-length of the lens mounted in the camera.
5. In order to guarantee the captured face recognition rate, the requirement for face capture are: left or right face turn angle is less than about 30°; pitching angle is less than 20°.
6. Face illumination must be uniform, if the brightness is low or there is a large area of shadow, need to do the light filling.
7. When the capture scenario is backlight, the camera’s BLC/HLC/WDR need to be turned on, or fill the light.
8. The face recognition do not support black & white mode for now.


4.4.5 Region Entrance

Region Entrance: Alarms will be triggered if the target enters the pre-defined areas.

Go to Config→Event→Region Entrance interface as shown below.

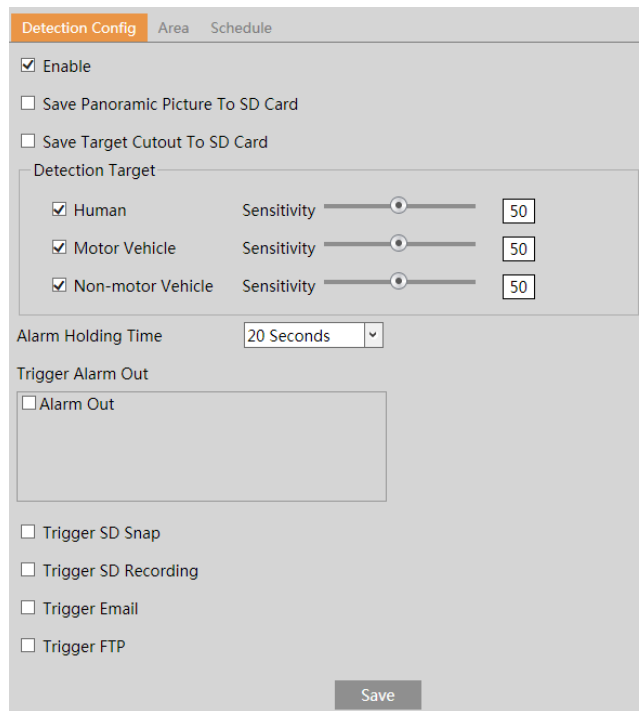

1. Enable region entrance detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region entrance detection. Click the “Area” tab to go to the interface as shown below.

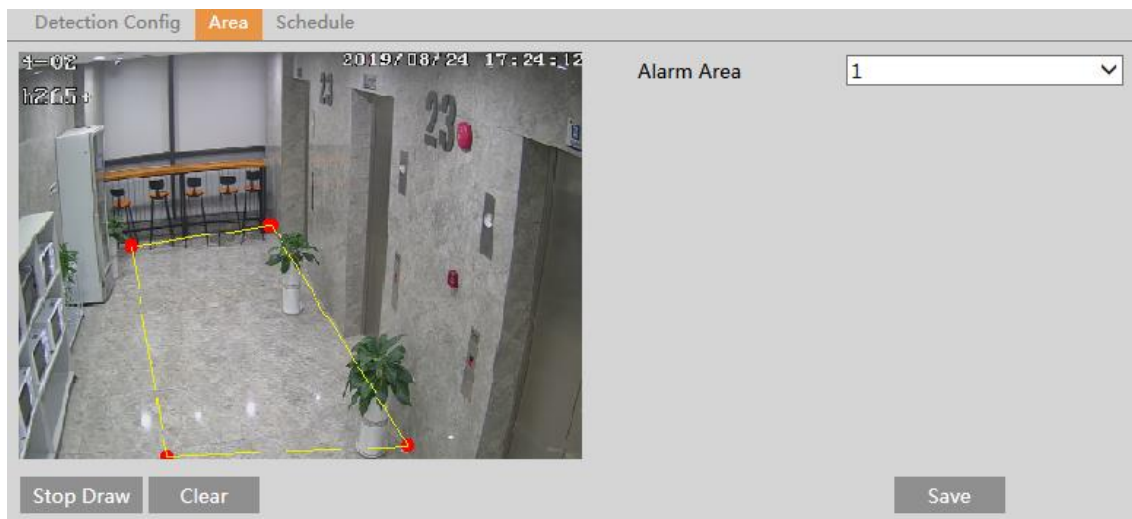

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the region entrance detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

* The configuration requirements of camera and surrounding area are the same as intrusion detection.

4.4.6 Region Exiting

Region Exiting: Alarms will be triggered if the target exits from the pre-defined areas.

Go to Config→Event→Region Exiting interface as shown below.

Detection Config Area Schedule

Enable

Save Panoramic Picture To SD Card

Save Target Cutout To SD Card

Detection Target

Human Sensitivity 50

Motor Vehicle Sensitivity 50

Non-motor Vehicle Sensitivity 50

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

Trigger SD Snap

Trigger SD Recording

Trigger Email

Trigger FTP

Save

1. Enable region exiting detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region exiting detection. Click the “Area” tab to go to the interface as shown below.

Detection Config Area Schedule

4-02 2019/08/24 17:24:12

1215

Alarm Area 1

Stop Draw Clear Save

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the region exiting detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

* The configuration requirements of camera and surrounding area are the same as intrusion detection

4.4.7 Target Counting

This function is to calculate the number of the people or vehicles crossing the alarm line through detecting, tracking and counting the shapes of the people or vehicles.

1. Go to Config→Event→Target Counting as shown below.

The screenshot shows the 'Detection Config' window with three tabs: 'Detection Config', 'Area', and 'Schedule'. The 'Detection Config' tab is active. It contains the following settings:

- Enable
- Save Panoramic Picture To SD Card
- Save Target Cutout To SD Card
- Detection Target**
 - Human Sensitivity: 50 Staying Threshold: 0
 - Motor Vehicle Sensitivity: 50 Staying Threshold: 0
 - Non-motor Vehicle Sensitivity: 50 Staying Threshold: 0
- Counting Reset**
 - Timing: Off (dropdown)
 - Manual: Reset (button)
- Alarm Holding Time: 20 Seconds (dropdown)
- Trigger Alarm Out**
 - Alarm Out (checkbox)
- Trigger SD Snap
- Trigger SD Recording
- Trigger Email
- Trigger FTP

2. Enable target counting and select the snapshot type and the detection target.

Detection Target: Select the target to calculate. Human, motor vehicle and motorcycle/bicycle can be selected.

Staying Threshold: When the targets (human/vehicle) staying in the specified area exceed the threshold, alarms will be triggered.

Counting Reset: The current number of the target counting can be reset. You can choose to reset the counting daily, weekly or monthly. Click "Reset" to manually reset the current number of crossing line people/car/bike counting.

3. Set the area of the target counting. Click the "Area" tab to go to the interface as shown below.

The screenshot shows the 'Area' configuration window. It features a video feed on the left and configuration options on the right.

Video Feed: Shows a street scene with a car and a person on a motorcycle. A red box highlights the text: "Entry: Human# Car# Bike#", "Exit: Human# Car# Bike#", and "Stay: Human# Car# Bike#". Yellow arrows labeled 'A' and 'B' indicate the direction of traffic flow across a crosswalk.

Configuration Options:

- Alarm Line: 1 (dropdown)
- Direction: A->B (dropdown)
- Statistics
- OSD**
 - Entrance: Entry (text input)
 - Exit: Exit (text input)
 - Stay: Stay (text input)
 - Human: human (text input)
 - Car: car (text input)
 - Bike: bike (text input)
 - Under Threshold: Welcome (text input)
 - Over Threshold: Please wait (text input)

Buttons: Draw Area, Clear, Save.

Set the alarm line number and direction. Only one alarm line can be added.

Direction: A->B and A<-B can be optional. The direction of the arrow is entrance.


Statistics: If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface.

The statistical OSD information can be customized as needed.

Click the "Draw Area" button and then drag the mouse to draw a line in the image. Check "Statistics" and then move the red box to change the position of the statistical information displayed on the screen. Click the "Stop Draw" button to stop drawing. Click the "Clear" button to delete the lines.

4. Set the schedule of the target counting. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

5. View the statistical information in the live view interface.

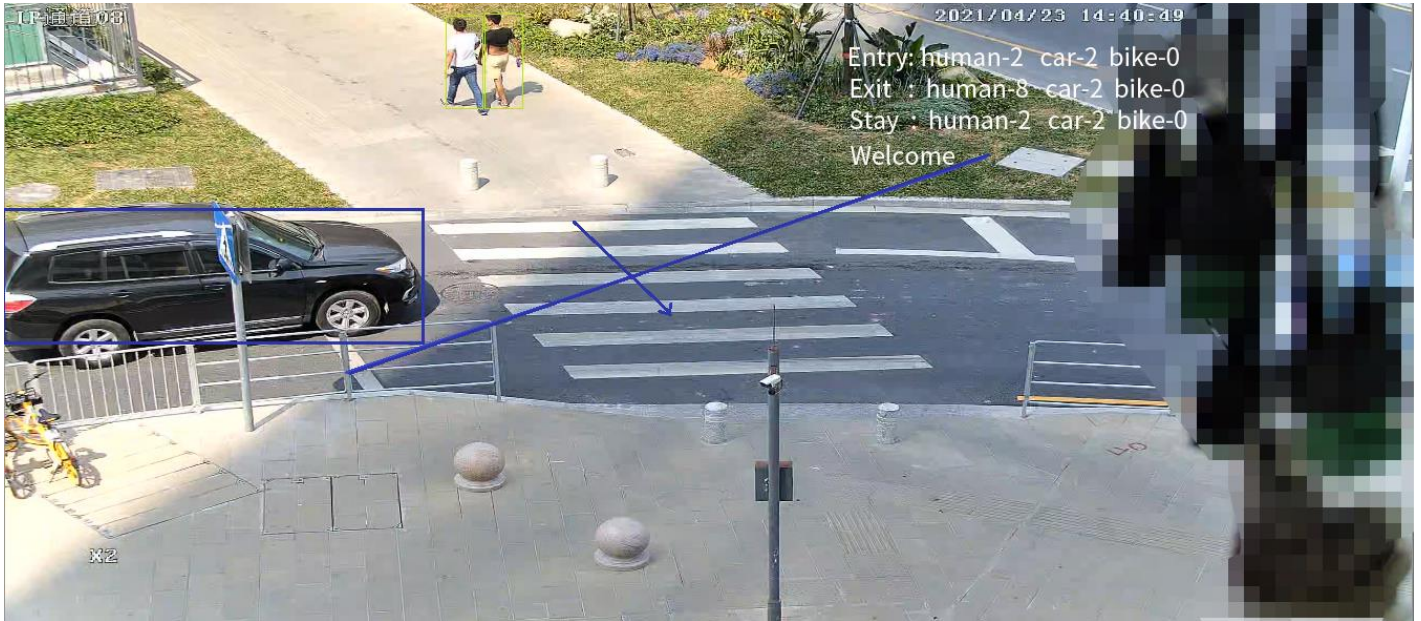

4.5 Network Configuration


4.5.1 TCP/IP

Go to Network→TCP/IP interface as shown below. There are two ways for network connection.

Screenshot of the TCP/IP configuration interface. The IPv4 tab is selected. The "Obtain an IP address automatically" option is selected. The "Use the following IP address" option is unselected. The IP Address field is set to 192.168.226.201, Subnet Mask to 255.255.255.0, Gateway to 192.168.226.1, Preferred DNS Server to 192.168.226.1, and Alternate DNS Server to 8.8.8.8. A "Save" button is at the bottom.

Use IP address (take IPv4 for example)-obtain a local IP address automatically through DHCP. A typical router has a DHCP server built in, and therefore is able to assign an IP address to the camera.

Use PPPoE-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

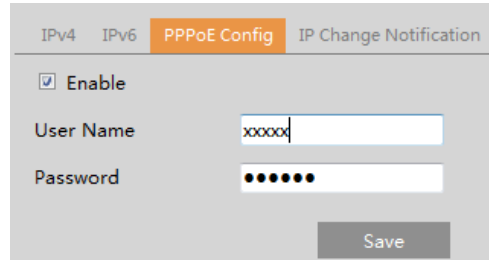

IPv4 IPv6 **PPPoE Config** IP Change Notification

Enable


User Name

Password

Save

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

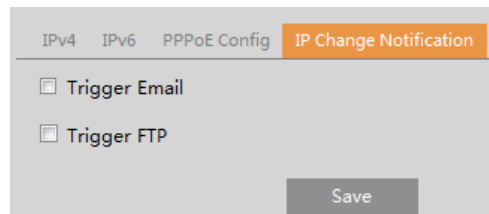

IPv4 IPv6 PPPoE Config **IP Change Notification**

Trigger Email

Trigger FTP


Save

Trigger Email: when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

4.5.2 Port

Go to **Network** → **Port** interface as shown below. HTTP port, Data port and RTSP port can be set.

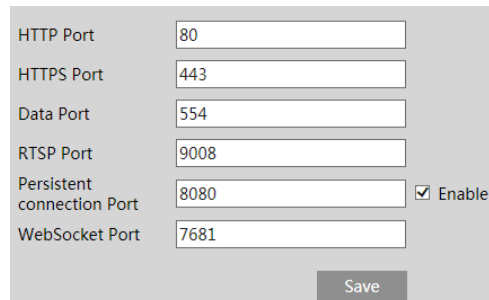

HTTP Port

HTTPS Port

Data Port

RTSP Port

Persistent connection Port Enable

WebSocket Port

Save

HTTP Port: The default HTTP port is 80. It can be changed to any port which is not occupied.

HTTPS Port: The default HTTPS port is 443. It can be changed to any port which is not occupied.

Data Port: The default data port is 9008. Please change it as necessary.


RTSP Port: The default port is 554. Please change it as necessary.

Persistent Connection Port: The port is used for a persistent connection of the third-party platform to push smart data, like face pictures.

WebSocket Port: Communication protocol port for plug-in free preview.

4.5.3 Server Configuration


This function is mainly used for connecting network video management system.

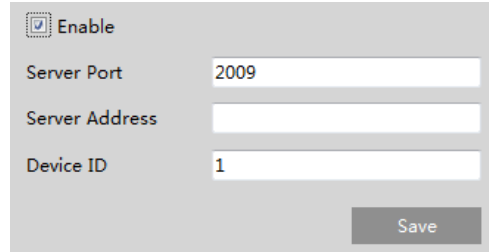

1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the VMS. Then enable the auto report in the VMS when adding a new device. Next, enter the remaining information of the device in the VMS. After that, the system will automatically allot a device ID. Please check it in the VMS.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the “Save” button to save the settings.

4.5.4 Onvif

The camera can be searched and connected to the third-party platform via ONVIF/RTSP protocol.

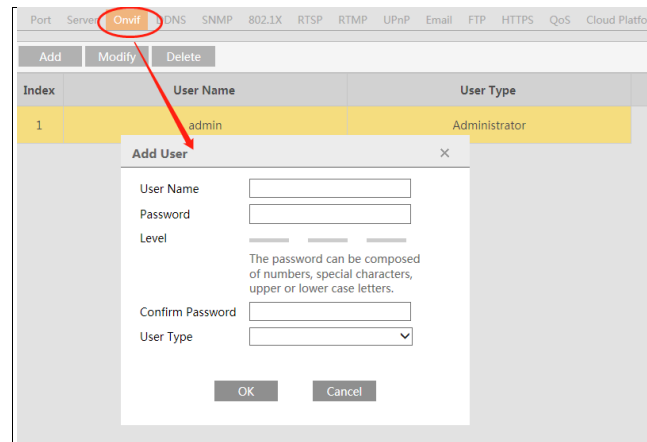


Note: when adding the device to the third-party platform with ONVIF/RTSP protocol, please enter the username and password created in the above interface.

4.5.5 DDNS

If the camera is set up with a DHCP connection, DDNS should be set for accessing the camera from the internet.

1. Go to Network → DDNS.

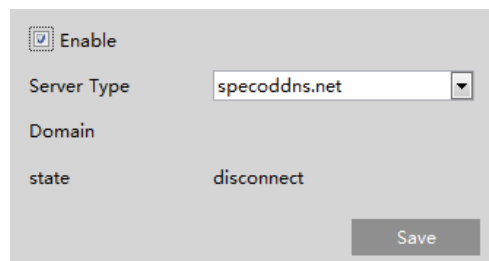

2. Enable, save and use DDNS to log in.

<input checked="" type="checkbox"/> Enable	
Server Type	specoddns.net
Domain	speco008954.specoddns.net
State	connect(210.21.229.138)
	<input type="button" value="Save"/>

4.5.6 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

1. Go to Network→SNMP.


SNMP v1/v2	
<input type="checkbox"/> Enable SNMPv1	
<input type="checkbox"/> Enable SNMPv2	
Read SNMP Community	public
Write SNMP Community	private
Trap Address	192.168.226.201
Trap Port	162
Trap community	public
SNMP v3	
<input type="checkbox"/> Enable SNMPv3	
Read User Name	public
Security Level	auth_priv
Authentication Algorithm	<input checked="" type="radio"/> MDS <input type="radio"/> SHA
Authentication Password	••••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••••
Write User Name	private
Security Level	auth_priv
Authentication Algorithm	<input checked="" type="radio"/> MDS <input type="radio"/> SHA
Authentication Password	••••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••••
Other Settings	
SNMP Port	161
	<input type="button" value="Save"/>

2. Check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.

3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

4.5.7 802.1x

If it is enabled, the camera's data can be protected. When the camera is connected to the network protected by the IEEE802.1x, user authentication is needed.

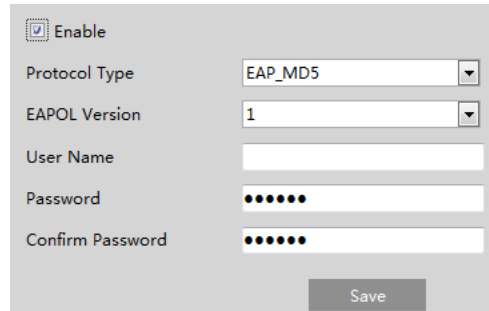


To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

4.5.8 RTSP

Go to Network → RTSP.

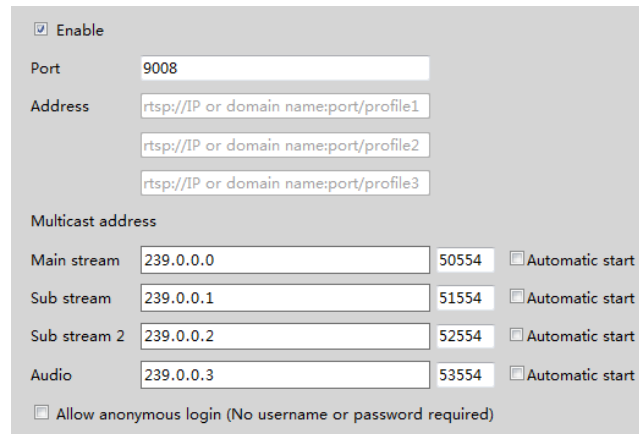

Select "Enable" to enable the RTSP function.

Port: Access port of the streaming media. The default number is 554.

RTSP Address: The RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: The address format is

"rtsp://IP address: rtsp port/profile1?transportmode=mcast".

Sub stream: The address format is

"rtsp://IP address: rtsp port/profile2?transportmode=mcast".

Third stream: The address format is

"rtsp://IP address: rtsp port/profile3?transportmode=mcast".


Audio: Having entered the main/sub stream in a media player (like VLC), the video and audio will play automatically.

If "Allow anonymous login..." is checked, there is no need to enter the username and password to view the video.

If "auto start" is enabled, the multicast received data should be added into a VLC player to play the video.

4.5.9 RTMP

You can access the third-party (like YouTube) to realize video live view through RTMP protocol.
Go to Config→Network→RTMP.

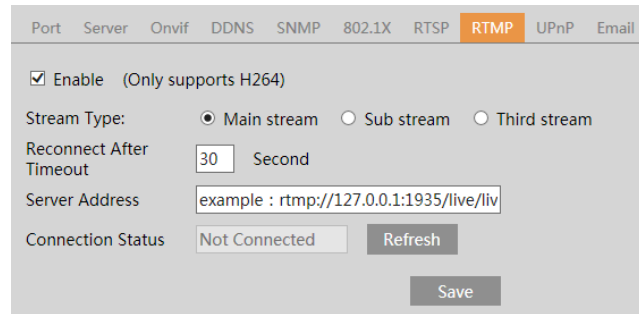

Check “Enable”, select stream type, set the reconnection time after timeout and server address as needed.
Server address: Enter the server address allocated by the third party server.
After that, click “Save” to save the settings. Then click “Refresh” to view the connection status.


4.5.10 UPnP

If this function is enabled, the camera can be quickly accessed through the LAN.
Go to Network→UPnP. Enable UPnP and then enter UPnP name.



4.5.11 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.
Go to Network→Email.

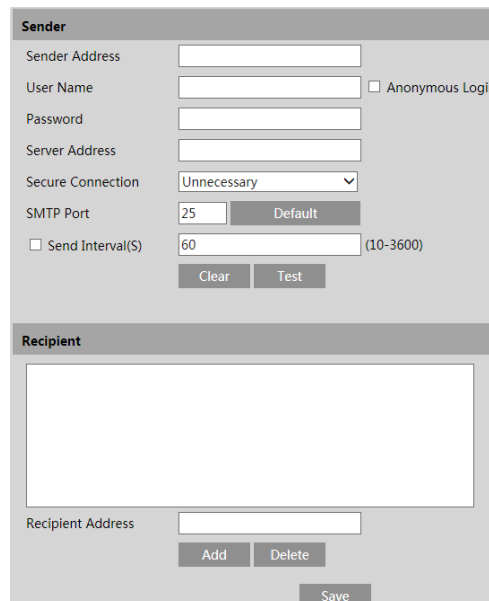

Sender Address: sender’s e-mail address.

User name and password: sender’s user name and password (you don’t have to enter the username and password if “Anonymous Login” is enabled).

Server Address: The SMTP IP address or host name.

Select the secure connection type at the “Secure Connection” pull-down list according to what’s required.

SMTP Port: The SMTP port.

Send Interval(S): The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.

Click the “Test” button to test the connection of the account.

Recipient Address: receiver’s e-mail address.

4.5.12 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

Go to Network→FTP.

Server Name: The name of the FTP server.

Server Address: The IP address or domain name of the FTP.

Upload Path: The directory where files will be uploaded to.

Port: The port of the FTP server.

Use Name and Password: The username and password that are used to login to the FTP server.

4.5.13 HTTPS

HTTPS provides authentication of the web site and protects user privacy.

Go to Network→HTTPS as shown below.

There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via the web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don’t want to use the default one. Click “Delete” to cancel the default certificate. Then

the following interface will be displayed.

Enable

Installation type

- Have signed certificate, install directly
- Create a private certificate
- Create a certificate request

Install certificate

* If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.

* Click “Create a private certificate” to enter the following creation interface.

Enable

Installation type

- Have signed certificate, install directly
- Create a private certificate
- Create a certificate request

Create a private certificate

Click the “Create” button to create a private certificate. Enter the country (only two letters available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.

* Click “Create a certificate request” to enter the following interface.

Enable

Installation type

- Have signed certificate, install directly
- Create a private certificate
- Create a certificate request

Create a certificate request

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

4.5.14 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to Network→QoS.

Video/Audio DSCP

Alarm DSCP

Manager DSCP

Video/Audio DSCP: The range is from 0 to 63.


Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.
Generally speaking, the larger the number is, the higher the priority is.

4.6 Security Configuration

4.6.1 User Admin

Go to Security→User Admin interface as shown below.

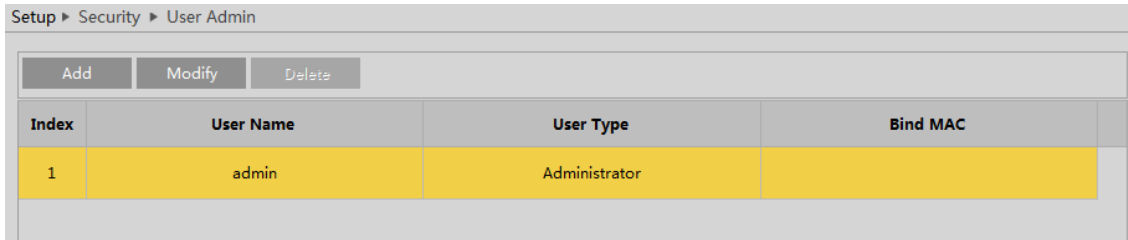


The screenshot shows the 'User Admin' interface with a table containing one user entry. The table has columns for Index, User Name, User Type, and Bind MAC. The 'admin' user is listed with index 1 and user type Administrator.

Index	User Name	User Type	Bind MAC
1	admin	Administrator	

Add user:

1. Click “Add” to pop up the following textbox.

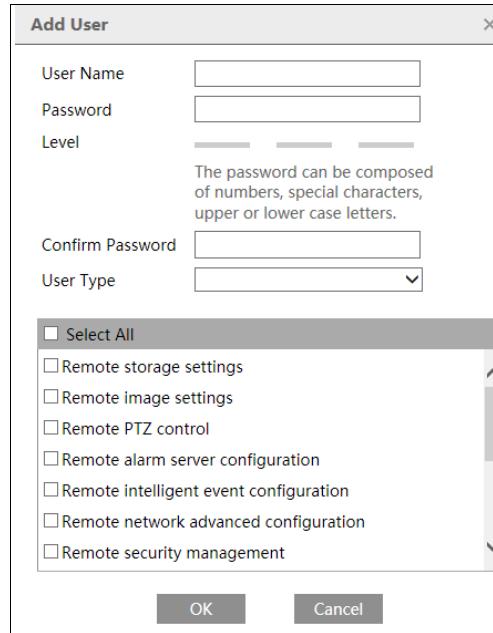

The 'Add User' dialog box contains the following fields and options:

- User Name:
- Password:
- Level:
- Confirm Password:
- User Type:
- Select All
- Remote storage settings
- Remote image settings
- Remote PTZ control
- Remote alarm server configuration
- Remote intelligent event configuration
- Remote network advanced configuration
- Remote security management

Buttons: OK, Cancel

2. Enter user name in “User Name” textbox.

3. Enter letters or numbers in “Password” and “Confirm Password” textbox. Please set the password according to the requirement of the password security level (Go to Setup→Security→Security Management→Password Security interface to set the security level).

4. Choose the user type and select the permission.

6. Click the “OK” button and then the newly added user will be displayed in the user list.

Modify user:

1. Select a user to modify password and MAC address if necessary in the user configuration list box.

2. The “Edit user” dialog box pops up by clicking the “Modify” button.

3. Enter the old password of the user in the “Old Password” text box.
4. Enter the new password in the “New password” and “Confirm Password” text box.
5. Modify the permission as necessary.
6. Click the “OK” button to save the settings.

Note: To change the access level of a user, the user must be deleted and added again with the new access level.

Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

Note: The default administrator account cannot be deleted.

4.6.2 Online User

Go to Security→Online User to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	Kick Out

An administrator user can kick out all the other users (including other administrators).

4.6.3 Block and Allow Lists

Go to Security→Block and Allow Lists as shown below.

The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6 and then enter IP address in the address box and click the “Add” button.

4.6.4 Security Management

Go to Security→Security Management as shown below.

In order to prevent against malicious password unlocking, “locking once illegal login” function can be enabled here. If this function is enabled, login failure after trying six times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

Trigger Email: if enabled, e-mail will be sent when logging in/out or illegal login lock occurs.

Logout time: Set the logout time as needed. For example: 3600s, you will be automatically logged out after 3600s and then you need to enter the username and password again to log in.

- **Password Security**

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.

Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 8~16 characters, including at least two of the following categories: numbers, special characters, upper case letters, lower case letters.

Strong Level: 8~16 characters. Numbers, special characters, upper case letters and lower case letters must be included.


For your account security, it is recommended to set a strong password and change your password regularly.

HTTP Authentication: Basic or Token is selectable.

4.7 Maintenance Configuration

4.7.1 Backup and Restore

Go to Maintenance→Backup & Restore.

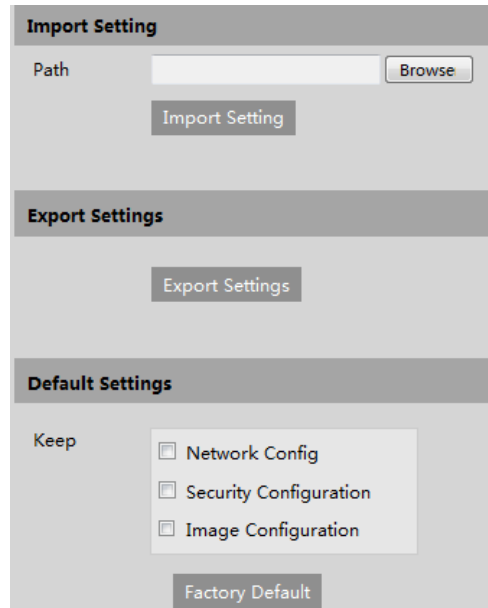

The screenshot shows a web interface for configuration management, divided into three sections:

- Import Setting:** Contains a text input field labeled "Path" with a "Browse" button to its right, and an "Import Setting" button below it.
- Export Settings:** Contains an "Export Settings" button.
- Default Settings:** Features a "Keep" label followed by a list of checkboxes: "Network Config", "Security Configuration", and "Image Configuration". Below this list is a "Factory Default" button.

- **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click "Browse" to select the save path for import or export information on the PC.
2. Click the "Import Setting" or "Export Setting" button.

- **Default Settings**

Click the "Load Default" button to restore all system settings to the default factory settings except those you want to keep.

4.7.2 Reboot

Go to Maintenance→Reboot.


Click the "Reboot" button to reboot the device.

Timed Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable "Time Settings", set the date and time and then click the "Save" button to save the settings.

4.7.3 Upgrade

Go to Maintenance→Upgrade. In this interface, the camera firmware can be updated.

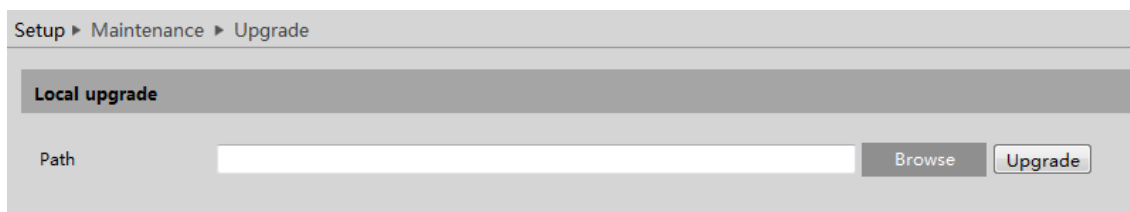

The screenshot shows the "Local upgrade" section of the maintenance configuration interface. It includes a breadcrumb trail at the top: "Setup ▶ Maintenance ▶ Upgrade". Below this, the section is titled "Local upgrade". There is a text input field labeled "Path" with a "Browse" button to its right, and an "Upgrade" button to the right of the "Browse" button.


1. Click the "Browse" button to select the save path of the upgrade file
2. Click the "Upgrade" button to start upgrading the firmware.
3. The device will restart automatically

Caution! Do not close the browser or disconnect the camera from the network during the upgrade.

4.7.4 Operation Log

To query and export log:

1. Go to Maintenance → Operation Log.

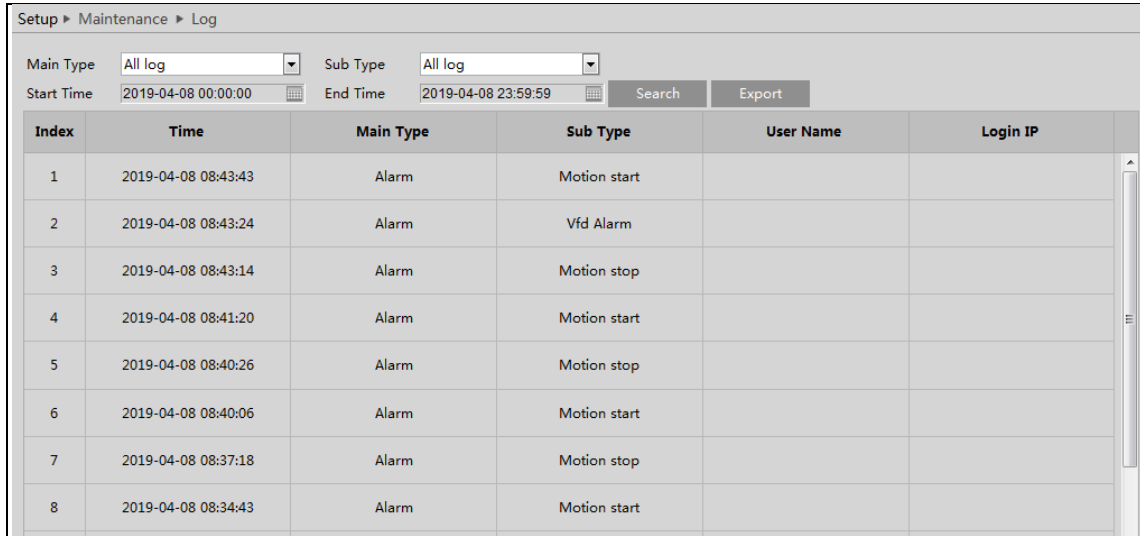

Setup ▶ Maintenance ▶ Log

Main Type: All log Sub Type: All log

Start Time: 2019-04-08 00:00:00 End Time: 2019-04-08 23:59:59 Search Export


Index	Time	Main Type	Sub Type	User Name	Login IP
1	2019-04-08 08:43:43	Alarm	Motion start		
2	2019-04-08 08:43:24	Alarm	Vfd Alarm		
3	2019-04-08 08:43:14	Alarm	Motion stop		
4	2019-04-08 08:41:20	Alarm	Motion start		
5	2019-04-08 08:40:26	Alarm	Motion stop		
6	2019-04-08 08:40:06	Alarm	Motion start		
7	2019-04-08 08:37:18	Alarm	Motion stop		
8	2019-04-08 08:34:43	Alarm	Motion start		

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.


5 Search


5.1 Image Search


In the Setup interface, click Search to go to the interface as shown below. Images that are saved on the PC or SD card can be found here.

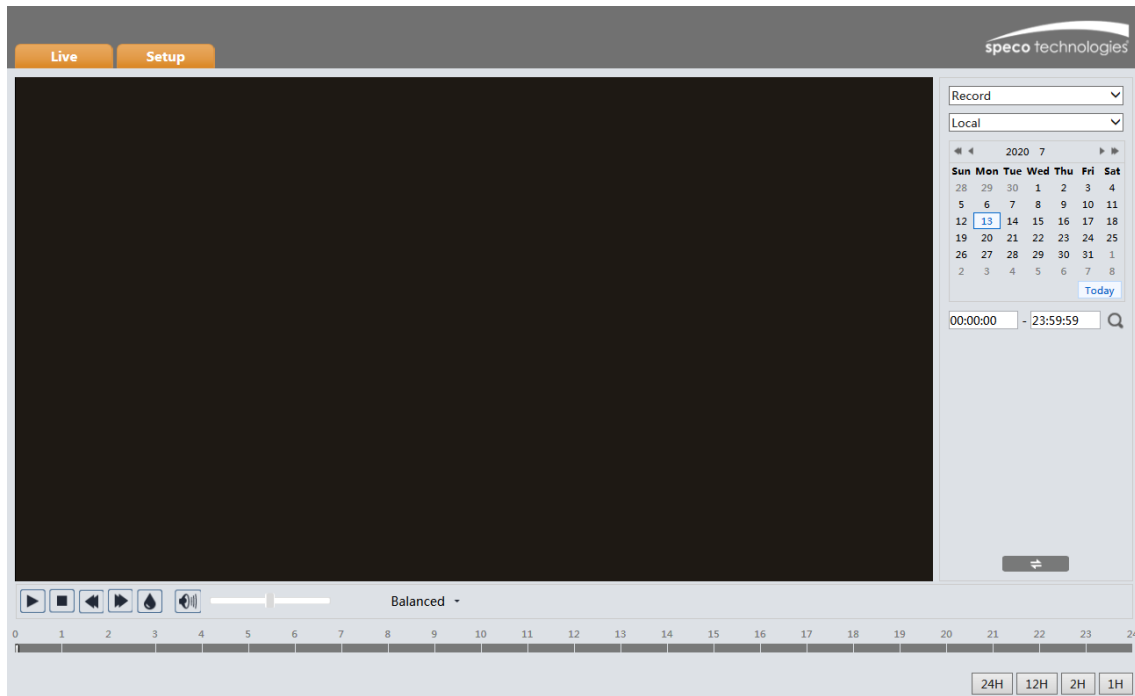

● Local Image Search


1. Choose "Picture"—"Local".
2. Set time: Select date and choose the start and end time.
3. Click  to search the images.
4. Double click a file name in the list to view the captured photos as shown above.

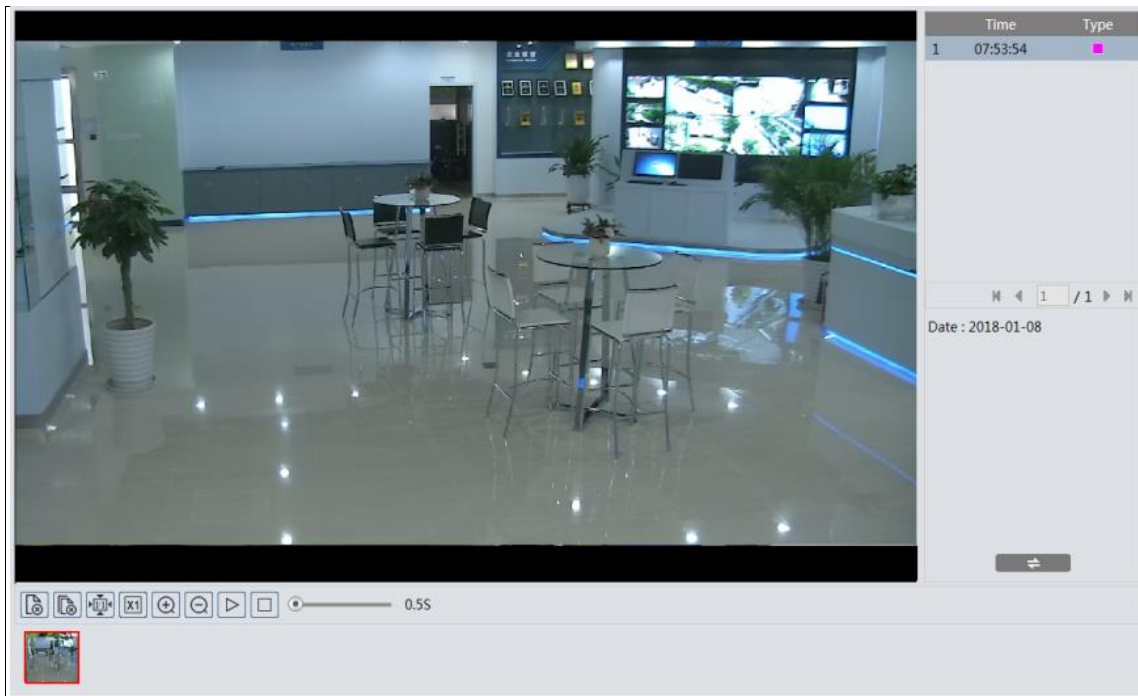



Click  to return to the previous interface.



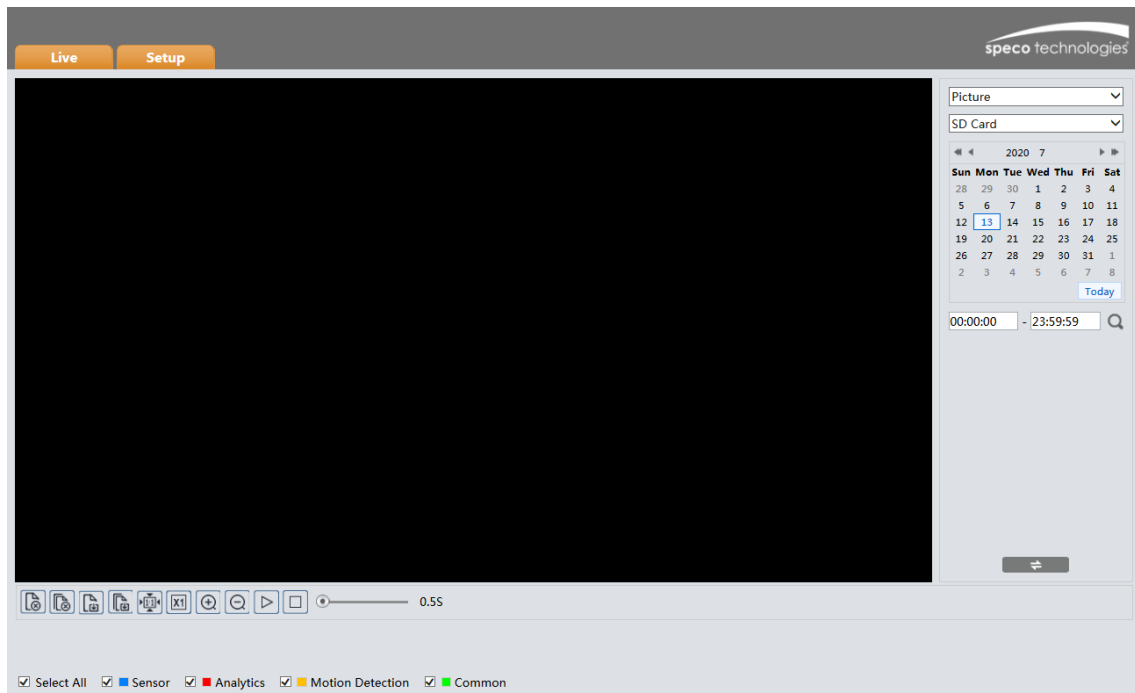








● SD Card Image Search

1. Choose “Picture”—“SD Card”.



2. Set time: Select date and choose the start and end time.
 3. Choose the alarm events at the bottom of the interface.
 4. Click  to search the images.
 5. Double click a file name in the list to view the captured photos.
- Click  to return to the previous interface.


The descriptions of the buttons are shown as follows.


Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		

5.2 Video Search





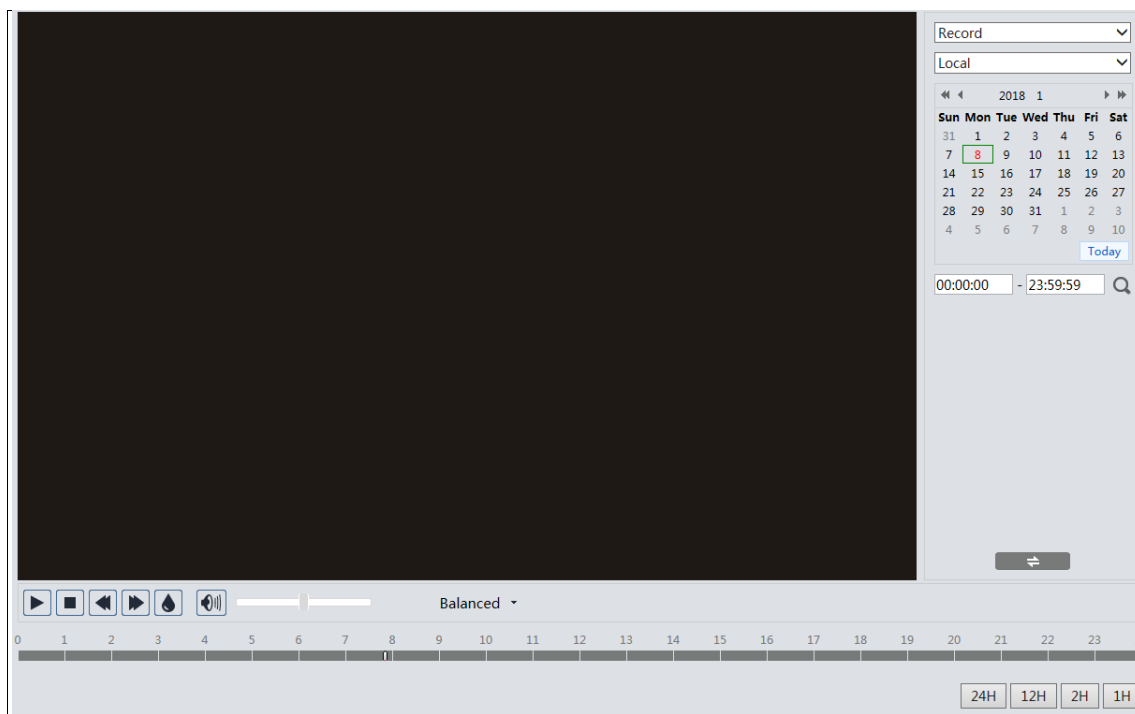


5.2.1 Local Video Search

Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.




1. Choose “Record”—“Local”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.
4. Double click on a file name in the list to start playback.




Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		


5.2.2 SD Card Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

1. Choose "Record"—"SD Card".
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.

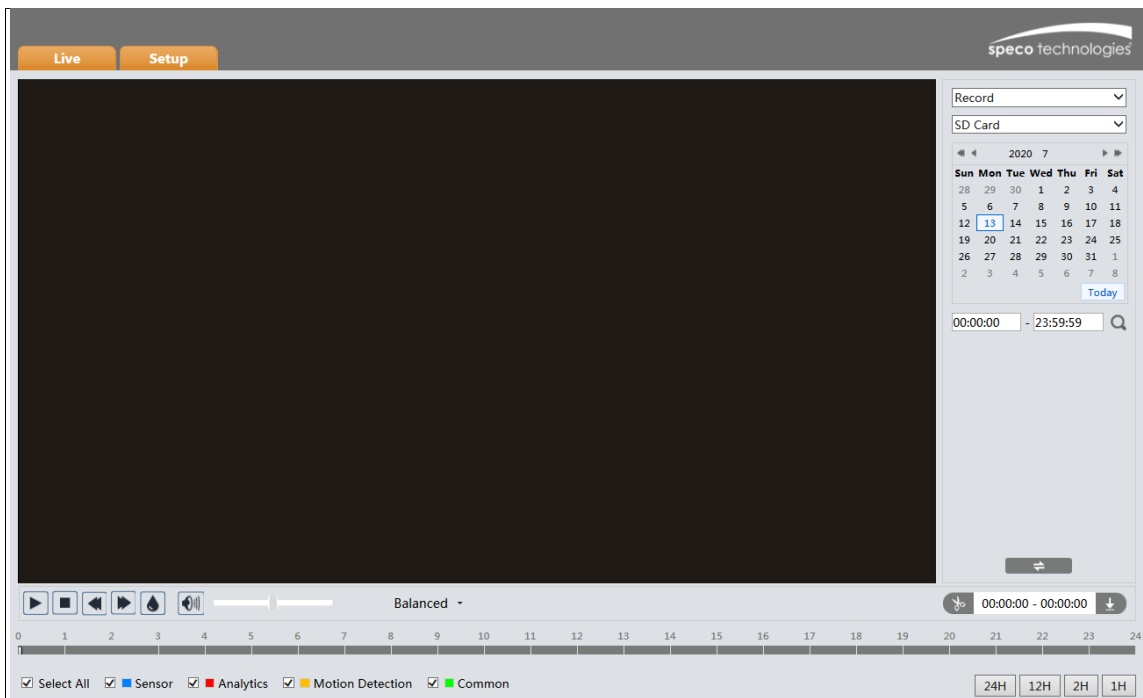

4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

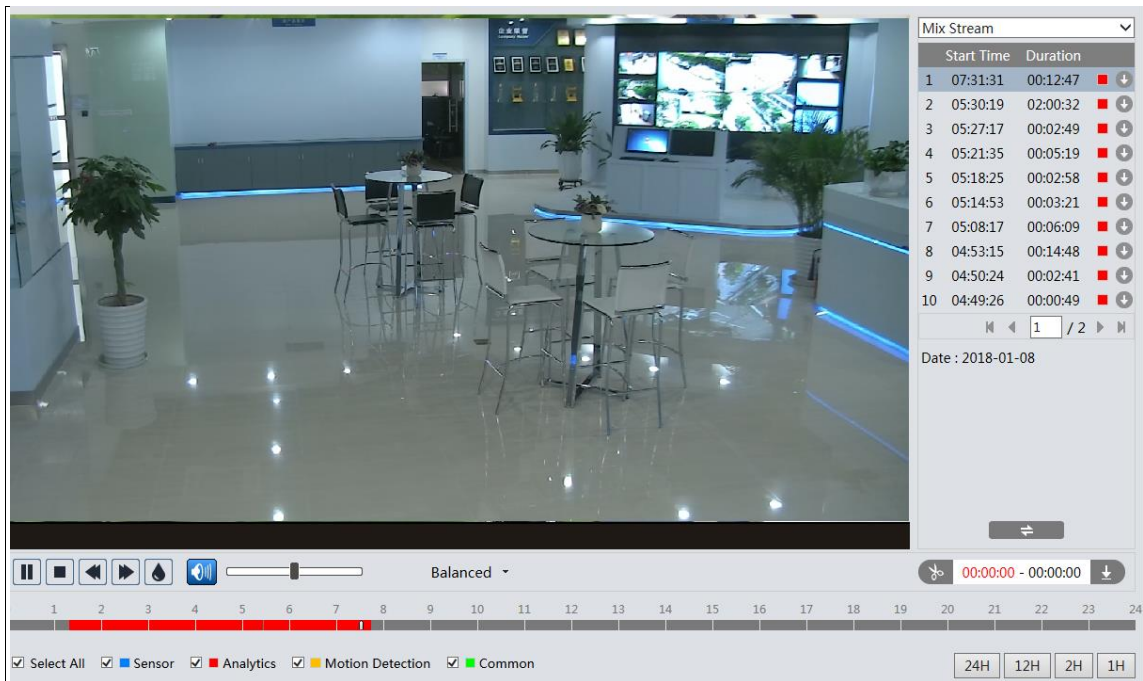

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the time table.
3. Click to set the start time and then this button turns blue ().
4. Select the end time by clicking on the time table. Then click to set the end time.
5. Click to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2018-01-16 01:1...	2018-01-16 01:1...	Favorites	Open

Set up D:\Favorites Clear List Close

Click "Set up" to set the storage directory of the video files.

Click "Open" to play the video.

Click "Clear List" to clear the downloading list.

Click "Close" to close the downloading window.

Appendix

Appendix 1 Troubleshooting


IP Scanner does not show any device.

Make sure that the PC that's running IP Scanner is on the same local network as the devices.

Internet Explorer cannot download ActiveX control.

IE browser may be set up to block ActiveX. Follow the steps below.


1. Open IE browser and then click Tools→Internet Options.

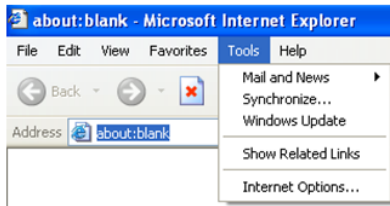

2. Select Security→Custom Level.

3. Enable all the options under “ActiveX controls and plug-ins”.

4. Click OK to finish setup.

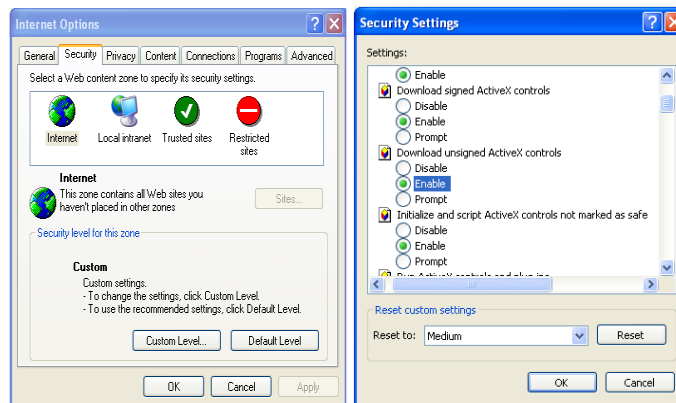

No sound can be heard.

1. Audio input device is not connected. Please connect and try again.

2. Audio function is not enabled at the corresponding channel. Please enable this function.

Appendix 2 Specifications

Specification /Model	O5B2	
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.02lux@F1.6, AGC ON; 0 lux with IR;
	Lens	2.8mm@F1.6, horizontal FoV:98.5°, vertical FoV:82.1°, diagonal FoV:110.9°
	Lens Mount	M12
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
	Angle Adjustment	Pan: 0°~360°; Tilt 0°~80°; Rotation:0°~360°
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Hue, Contrast, Wide Dynamic, Sharpness, NR, etc. adjustable through client or web browser
	ROI	Support
Interfaces	Network	RJ45
	Auido	1CH audio input
	Reset	Yes
	Storage	Built-in micro SD card slot; up to 256GB
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS
	Interface Protocol	ONVIF
	Smart Alarm	Network remote storage, micro SD card storage Motion detection, SD card Full, SD card error, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification),region entrance, region exiting detection, people/vehicle counting, face detection, face capture
Others	IR Distance	98ft
	Protection Grade	IP67
	Power	DC12V/PoE
	Power Consumption	< 7.5W
	Operating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	2.9"(W) ×2.9"(H)×6.7"(D)
	Weight (net)	Approx.0.9lbs
Installation	Wall mounting; ceiling mounting	

Specification /Model		O5B2M		
Camera	Image Sensor	1/2.7 " CMOS		
	Image Size	2592×1944		
	Electronic Shutter	1/30s~1/100000s		
	Iris Type	DC Iris		
	Min. Illumination	0.02 lux@F1.6,AGC ON; 0 lux with IR		
	Lens	2.8~12mm@F1.4, motorized	7~22mm@F1.6, motorized	
	Field of View	H: 95.1°~30°; V: 78.7°~22.8°; D: 107.6°~37.1°	H: 41°~16.8°; V: 31.3°~12.7°; D: 50°~21°	
	Lens Mount	Ø14		
	Day&Night	ICR		
	WDR	120dB		
	Digital NR	3D DNR		
	Angle Adjustment	Pan: 0°~360°; Tilt 0°~90°; Rotation:0°~360°		
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG		
	H.264 Type	Baseline profile/main profile/high profile		
	Video Bit Rate	64Kbps~8Mbps		
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240		
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);		
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)		
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)		
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser		
ROI	Support			
Interfaces	Network	RJ45		
	Auido	1CH audio input; 1CH audio output		
	Video	CVBS ouput (BNC×1)		
	Reset	Yes		
	Storage	Built-in micro SD card storage slot, up to 256GB		
	Alarm	1CH Alarm input; 1CH Alarm Ouput		
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue		
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission		
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS		
	Interface Protocol	ONVIF		
	Storage	Network remote storage, micro SD card storage		
	Smart Alarm	Motion detection, Sensor detection, SD card Full, SD card error, IP address conflict, cable disconneciton, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, region entrance, region exiting detection, face detection, face capture		
Others	IR Distance	229ft	328ft	
	Protection Grade	IP67		
	Power	DC12V/PoE		
	Power Consumptior	< 12.5W		
	Operatng Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)		
	Dimension (mm)	3.94"(W) ×3.5" (H)×11"(D)		
	Weight (net)	Approx. 2.29lbs		
	Installation	Wall mounting; ceiling mounting		

Specification /Model		O5D2
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.02lux@F1.6, AGC ON; 0 lux with IR
	Lens	2.8mm@F1.6, horizontal FoV:98.5°, vertical FoV:82.1°, diagonal FoV:110.9°
	Lens Mount	M12
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
	Angle Adjustment	Pan: 0°~355°; Tilt 0°~67°; Rotation:0°~355°
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Auido	1CH audio input; 1CH Built-in MIC
	Alarm	1CH alarm input; 1CH alarm output
	Reset	Yes
	Storage	Built-in micro SD card slot; up to 256GB
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion detection, Sensor detection, SD card Full, SD card error, IP address conflict, cable disconneciton, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, region entrance, region exiting detection, face detection, face capture
	IR Distance	98ft
	Protection Grade	IP67&IK10
	Power	DC12V/PoE
	Power Consumption	< 6W
	Operating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	Ø4.68"×3.45"
	Weight (net)	Approx. 1.43 lbs
	Installation	Ceiling mounting (Wall mounting available with the junction box and bracket)

Specification /Model		O5D2M
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	DC Iris
	Min. Illumination	0.01 lux@F1.4,AGC ON; 0 lux with IR
	Lens	2.8~12mm@F1.4, horizontal FoV: 95.1°~ 30°; vertical FoV: 78.7°~22.8°; Diagonal FoV: 107.6°~37.1°
	Lens Mount	Ø14
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
	Angle Adjustment	Pan: 0°~345°; Tilt 0°~77°; Rotation:0°~345°
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
	ROI	Support
Interfaces	Network	RJ45
	Auido	1CH audio input; 1CH audio output; 1CH built-in MIC
	Video	CVBS ouput (BNC×1)
	Reset	Yes
	Storage	Built-in micro SD card storage slot, up to 256GB
	Alarm	1CH Alarm input; 1CH Alarm Ouput
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion detection, Sensor detection, SD card Full, SD card error, IP address conflict, cable disconecton, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, region entrance, region exiting detection, face detection, face capture
	IR Distance	164ft
	Protection Grade	IP67&IK10
	Power	DC12V/PoE
	Power Consumption	< 9W
	Operating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	Ø5.55"×3.94"
	Weight (net)	Approx. 2.05 lbs
Installation	Ceiling mounting (Wall mounting available with the junction box and bracket)	

Specification /Model		O5T2
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.02lux@F1.6, AGC ON; 0 lux with IR
	Lens	2.8mm@F1.6, horizontal FoV:98.5°, vertical FoV:82.1°, diagonal FoV:110.9°
	Lens Mount	M12
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
	Angle Adjustment	Pan: 0°~360°; Tilt 0°~75°; Rotation:0°~360°
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Auido	1CH audio input; Built-in MIC×1
	Reset	Yes
	Storage	Built-in micro SD card slot; up to 256GB
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion detection, SD card Full, SD card error, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, face detection, face capture
	Protection Grade	IP67
	Power	DC12V/PoE
	Power Consumption	< 7W
	IR Distance	98ft
	Operating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	3.7" (∅) ×3.3"
	Weight (net)	Approx.1.0lbs
Installation	Ceiling mounting (Wall mounting available with the junction box and bracket)	

Specification /Model		O5T2M
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	DC Iris
	Min. Illumination	0.01 lux@F1.4,AGC ON; 0 lux with IR
	Lens	2.8~12mm@F1.4, horizontal FoV: 95.1°~ 30°; vertical FoV: 78.7°~22.8°; Diagonal FoV: 107.6°~37.1°
	Lens Mount	Ø14
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
Angle Adjustment	Pan: 0°~360°; Tilt 0°~80°; Rotation:0°~360°	
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Auido	1CH audio input; Built-in MIC×1
	Reset	Yes
	Storage	Built-in micro SD card slot; up to 256GB
Fuction	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPS, QoS
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion detection, SD card Full, SD card error, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, face detection, face capture
	Protection Grade	IP67
	Power	DC12V/PoE
	Power Consumption	< 9W
	IR Distance	164ft
	Opterating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	4.39" (Ø) ×3.92"
	Weight (net)	Approx. 1.45lbs
Installation	Ceiling mounting (Wall mounting available with the junction box and bracket)	

Specification /Model		O5P2
Camera	Image Sensor	1/2.7 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/30s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.02lux@F1.6, AGC ON; 0 lux with IR
	Lens	2.8mm@F1.6, horizontal FoV:98.5°, vertical FoV:82.1°, diagonal FoV:110.9°
	Lens Mount	M12
	Day&Night	ICR
	WDR	120dB
	Digital NR	3D DNR
Angle Adjustment	Pan: 0°~360°; Tilt 0°~75°; Rotation:0°~350°	
Image	Video Compression	H.265+/H.265/ H.264+/H.264/MJPEG
	H.264 Type	Baseline profile/main profile/high profile
	Video Bit Rate	64Kbps~8Mbps
	Resolution	5MP (2592×1944), 4MP (2592×1520), 2K(2560×1440), 3MP (2304×1296), 1080P (1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz:5MP/4MP/2K/3MP/1080P/720P(1~30fps); 50Hz: 4MP/2K/3MP/1080P/720P(1~25fps) HFR mode: 60Hz: 1080P/720P(1~60fps); 50Hz: 1080P/720P(1~50fps);
	Sub Stream	60Hz: 720P/D1/CIF(1~30fps); 50Hz: 720P/D1/CIF (1~25fps)
	Third Stream	60Hz: CIF/ D1/480×240 (1~30fps); 50Hz: CIF/D1/ 480×240 (1~25fps)
	Image Settings	BLC, HLC, Defog, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Auido	1CH audio input; Built-in MIC×1
	Reset	Yes
	Storage	Built-in micro SD card slot; up to 256GB
Fucntion	Remote Monitoring	Web browser, SecureGuard CMS/VMS, Apple TV, Amazon Fire TV, Speco Blue
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, ICMP, IGMP, PPPoE, DDNS, SMTP, FTP, SNMP,HTTP, 802.1x, UPnP, HTTPs, QoS
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion detection, SD card Full, SD card error, abnormal video signal detection, line crossing detection(human/vehicle classification), intrusion detection(human/vehicle classification), people/vehicle counting, face detection, face capture
	Protection Grade	IP66
	Power	DC12V/PoE
	Power Consumption	< 6W
	IR Distance	66ft
	Operating Environment	Temperature: -40°F~140°F; Relative Humidity: less than 95% (non-condensing)
	Dimension (mm)	4.33"(∅) × 2.28"
	Weight (net)	Approx.0.83lbs
Installation	Ceiling mounting (Wall mounting available with the junction box and bracket)	

Models: O5B2/ O5B2M/ O5D2/ O5D2M/ O5T2/ O5T2M/ O5P2

Federal Communications Commission (FCC) Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Responsible Party:

Speco Technologies
200 New Highway
Amityville, NY11701
www.specotech.com