100ft IR Illuminator for MEGApix® PANO™ and STAR-LIGHT™ HD over Coax™ Panoramic Bullet Camera

DWC-EXTIR100

WHAT'S IN THE BOX					
QSG Manual		1 Set	Screw		1 Set

NOTE To check if your camera supports the new Infra Red Extrernal Illuminator, check to see if it has an additional cables lebeled EX-LED in the bullet's cables.

**NOTE** Download All Your Support Materials and Tools in One Place
1. Go to: **http://www.digital-watchdog.com/support-download/**
2. Search your product by entering the part number in the '**Search by Product**' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click '**Search**'. All supported materials, including manuals, Quick Start Guides (QSG), software and firmware will appear in the results.

Attention: **This document is intended to serve as a quick reference for initial set-up.**
It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

PARTS & DIMENSIONS

Screw

IR LEDs

EX-LED Cable

DC12V / AC24V Cable

5.06"
(128.6mm)

6.28"
(159.6mm)

1.45"
(37mm)

1.09"
(27.9mm)
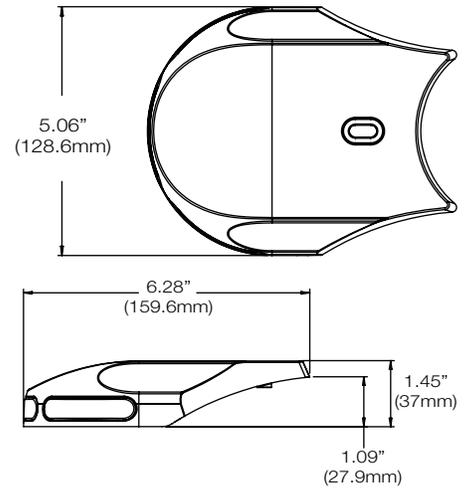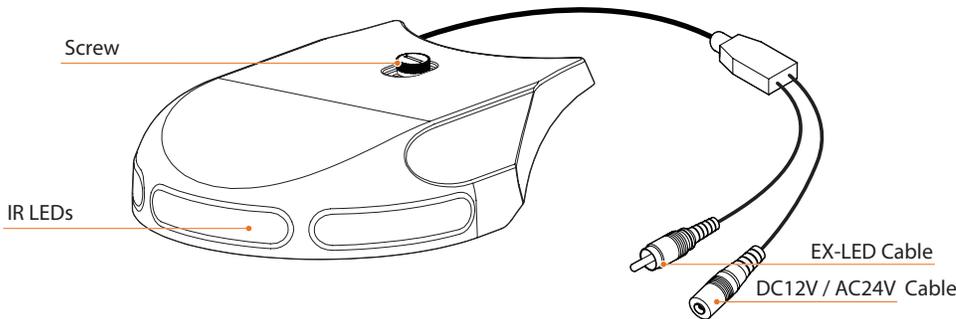
INSTALLING THE MOUNTING ACCESSORY

1. Connect the EXT-LED cable from the illuminator to the camera's cable labeled "EX-LED"

2. Connect the power cable to an adequate power supply.

- Power requirements: DC12V/AC24V Dual Voltage
- Power consumption: DC12V : Max 11.0W, AC24V : Max 11.0W

INSTALLATION ON AN IP CAMERA

12VDC / 24V AC

Power

DC12V

EX-LED   LED
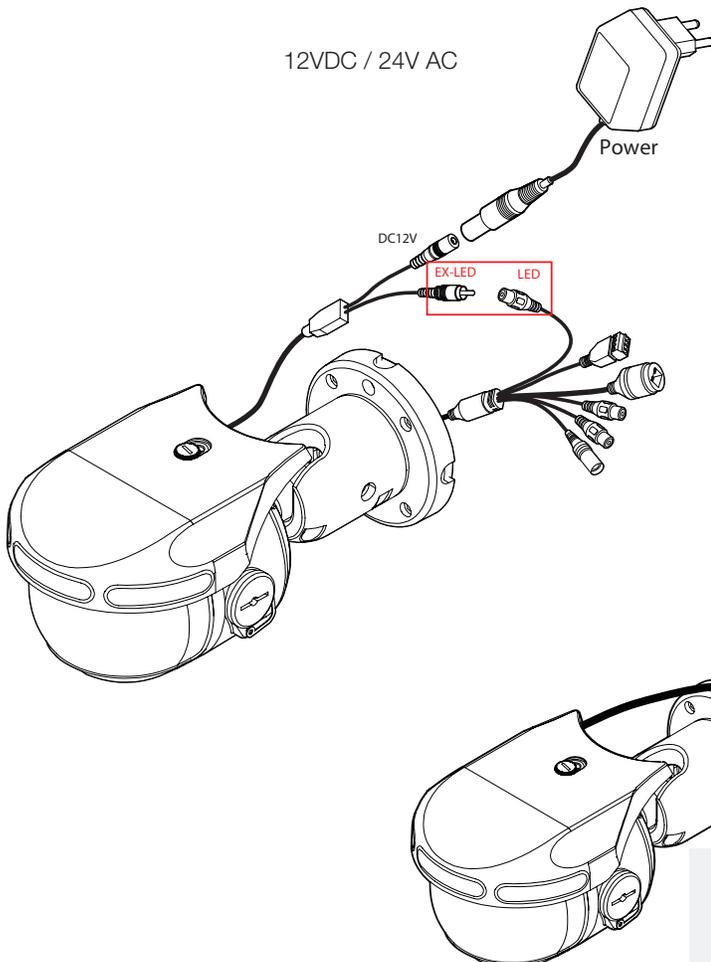
INSTALLATION ON AN ANALOG CAMERA

12VDC / 24V AC

Power

DC12V

EX-LED   LED

NOTE: Please check your hardware to see if it supports the IR illuminator connection.

NOTE: The illuminator's cables can be placed in any of the four holes in the camera's mounting bracket.