

Angled Dome/Reflector Kit for EPL-CM-21W-LED Explosion Proof LED Light Fixtures Instruction Manual

The EPL-CM-21W-LED-SP0114 is an angled dome/reflector kit for EPL-CM-21W-LED LED lights.


INSTALLATION

To install dome/reflector:

- 1. Loosen the 4 screws (A) at the top of the fixture holding the existing lens guard in place.
- 2. Rotate lens guard to the unlocked position and slip through screws to remove it from the fixture.
- 3. With the existing guard removed, slip the dome/reflector over the screws and rotate it to the locked position.
- 4. Then, slip the lens guard over the screws and rotate to the locked position.
- 5. Hold both in place and tighten screws firmly to secure lens guard and reflector to light fixture.





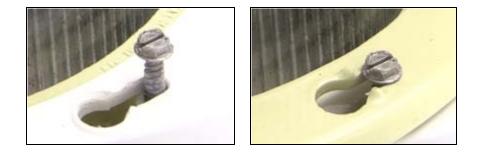

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT <u>SALES@LARSONELECTRONICS.COM</u> OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR WARRANTY AND RETURN INFORMATION.