


NEW!
more on reverse

TV BRIDGE™ II Kits

Pre-Wired, Pre-Assembled Box Kits for Flat Screen TV Installations

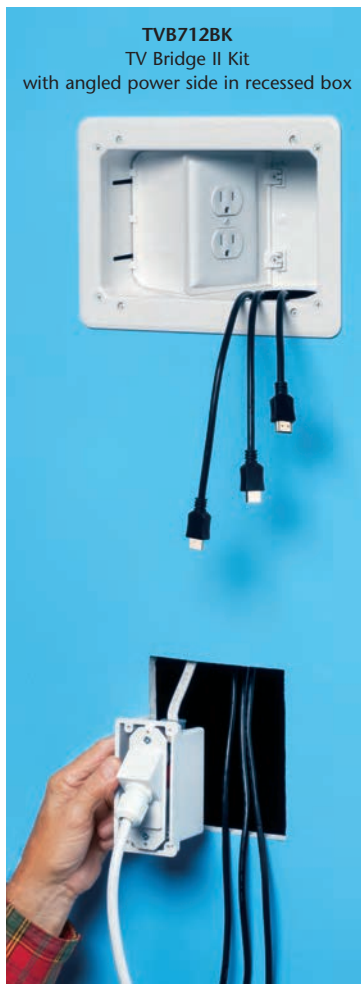


Arlington's new non-metallic **TV Bridge™ II** box kits are the easiest, fastest way to install a flat screen TV. They include *two* boxes and the necessary connections needed to install the TV and additional components.

Installation is *faster* because we've done the advance assembly work for you! You'll get a fully assembled, recessed box, with pre-wired receptacle, device, flexible cord and cord grip.

All you need to do is cut two openings in the wall, near a power source. There's no need to cut into your framing members or run power from a panel box.

- Mounting wing screws hold the boxes secure against the wall
- Plugs and connections stay inside the recessed boxes so TV mounts flush against the wall
- No mess! – wires stay hidden behind the wall
- **TV Bridge™ II** kits in four styles...

Pre-wired TV Bridge™ II Kits in four styles...

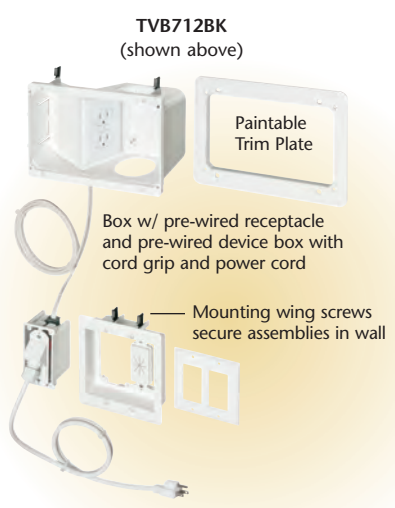

- **TVB712BK** power/low voltage box (power side angled)
- **TVBRA2K** power/low voltage box
- **TVBRA1K** Single-gang power box
- **TVBRA3K** power/low voltage box at top, single gang at bottom



Arlington

1 Stauffer Industrial Park
Scranton, PA 18517
800/233.4717
Fax 570/562.0646
www.aifittings.com

Patent pending

TV BRIDGE™ II Series **NEW!**

Pre-wired, Ready-to-use Box Kits for Existing Walls

UPPER Box installation (TVB712BK shown)



- 1 Cut *Top* hole in wall for the TV.
Cut *Lower* hole *directly* below the top hole, *close* to an existing outlet.



- 2 Drop the pre-wired device box assembly and cable through the top hole, feeding it *toward* the bottom hole.



- 3 Place box in *Top* hole.
Feed low voltage cables for TV through opening in box.
Tighten mounting wing screws to secure box to wall.

(continue with Lower Box installation below)


To complete the installation:
Energize TV Bridge II by plugging into power source (existing outlet) or (optional) surge protector.




LOWER Box installation



- 1 Pull pre-wired device assembly through *bottom* hole.

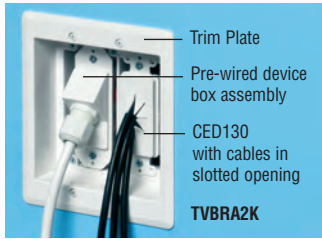

- 2 Attach device box to trim plate with screws provided. Secure trim plate to wall with mounting wing screws. Install CED130 in 2-gang boxes. Pull cables.

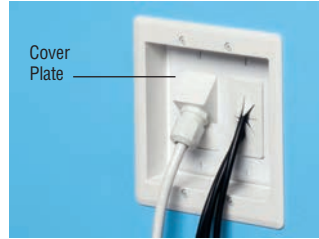

- 3 Attach cover plate to trim plate with screws provided.




Catalog Number	UPC/DEI/NAED Mfg. #018997	Description TV BRIDGE™ II Kit	Unit/Std Pkg
TVBRA1K	24180	w/ single-gang boxes	1
TVBRA1KGC	24182	w/ single-gang boxes - w/ ground clips for Canada	1
TVBRA2K	24181	w/ 2-gang power/low voltage box	1
TVBRA2KGC	24183	w/ 2-gang power/low voltage box - w/ ground clips for Canada	1
TVBRA3K	24195	2-gang power/low voltage upper box, single gang (lower)	1
TVBRA3KGC	24196	2-gang power/low voltage upper box, single gang (lower) - w/ ground clips for Canada	1
TVB712BK	12781	w/ 2-gang power/low voltage box (power w/ angled opening)	1
TVB712BKGC	12782	w/ 2-gang power/low voltage box (power angled) - w/ ground clips for Canada	1



1 Stauffer Industrial Park
Scranton, PA 18517
800/233.4717
Fax 570/562.0646
www.aifittings.com

TV BRIDGE II 0712/25M

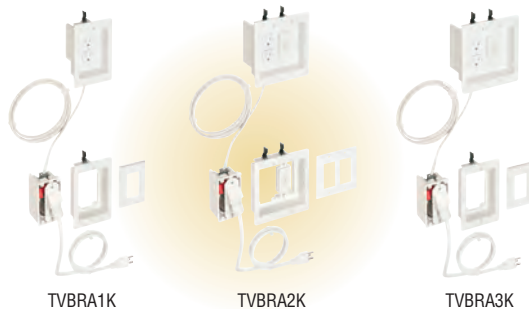

Distributed by