

Fix this template in position on the locker door to ensure holes are drilled accurately.

Use for vertical, right handed and left handed horizontal fitting.

700 SERIES MORTISE PREP

LOCK INSTALLATION TEMPLATE

HEIGHT LINE

3½" (89mm)

2" (51mm)

⅜" (10mm)

⅜" (10mm)

OUTLINE OF BACK PLATE

FOLD AROUND DOOR EDGE

⅝" (16mm)


2¾" (70mm)

2⅛" (54mm)

1" (25mm)

CENTRE LINE OF LATCH

⅜" (10mm)

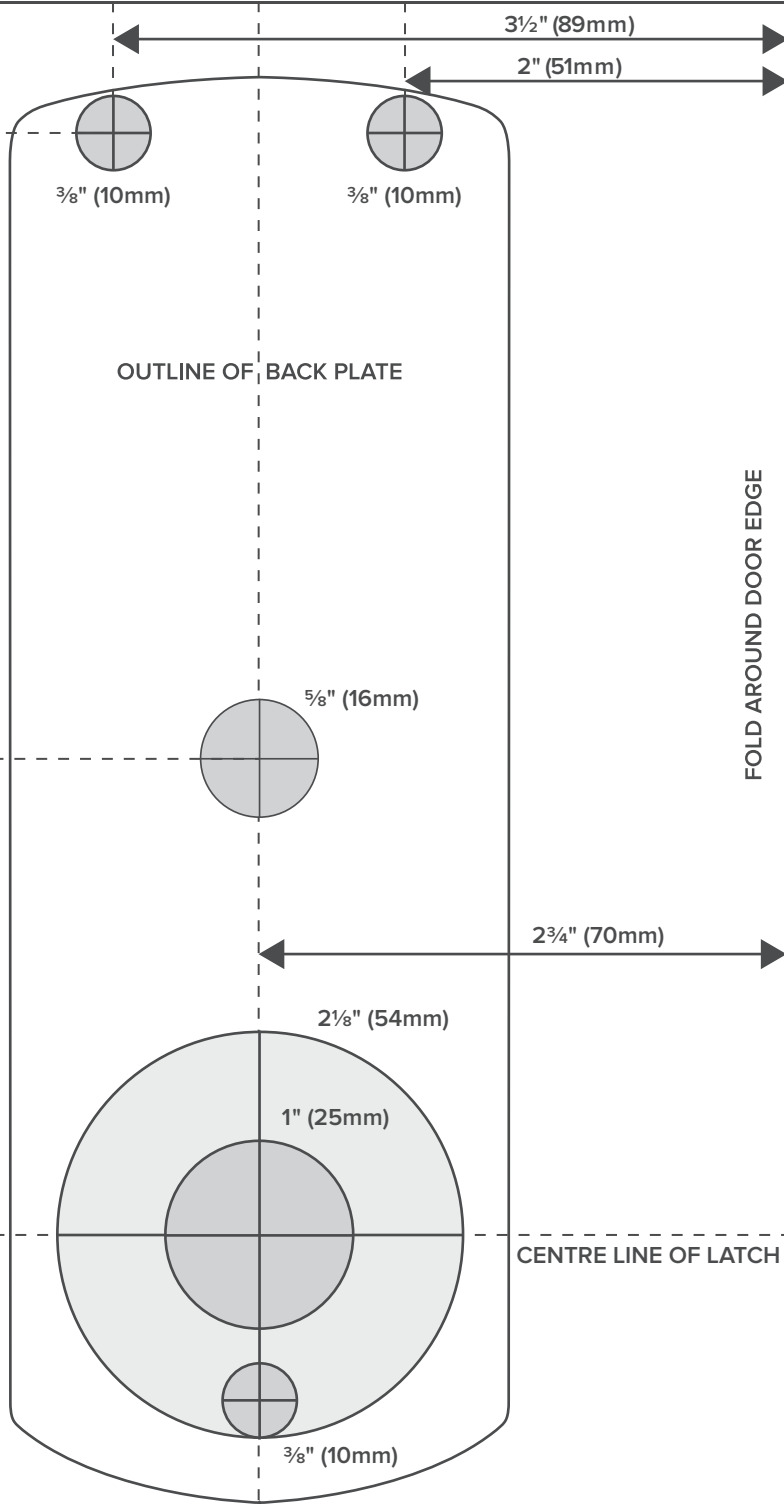

Fix this template in position on the locker door to ensure holes are drilled accurately.

Use for vertical, right handed and left handed horizontal fitting.

700 SERIES MORTISE PREP

LOCK INSTALLATION TEMPLATE