HEIGHT LINE

HEIGHT LINE

openEDGE

CENTER LINE OF DOOR EDGE

FOLD AROUND DOOR EDGE

OUTLINE OF BACKPLATE

2¾" (70mm)

⅜" (10mm)

⅜" (10mm)

1 ⅝" (41mm)

1" (25mm)

5 ⅜" (138mm)

1 ⅛" (29mm)

⅜" (10mm)

2 ⅝" (66mm)

⅛" (3mm)

³⁄₁₆" (4mm)

2 ¼" (57mm)

1 ⅝" (41mm)

2 ¾" (70mm)

CENTER LINE OF LATCH

2 ⅛" (54mm)

1" (25mm)

⅛" (3mm)

³⁄₁₆" (4mm)

⅜" (10mm)

2 ½" (63mm)

800 SERIES

LOCK INSTALLATION TEMPLATE

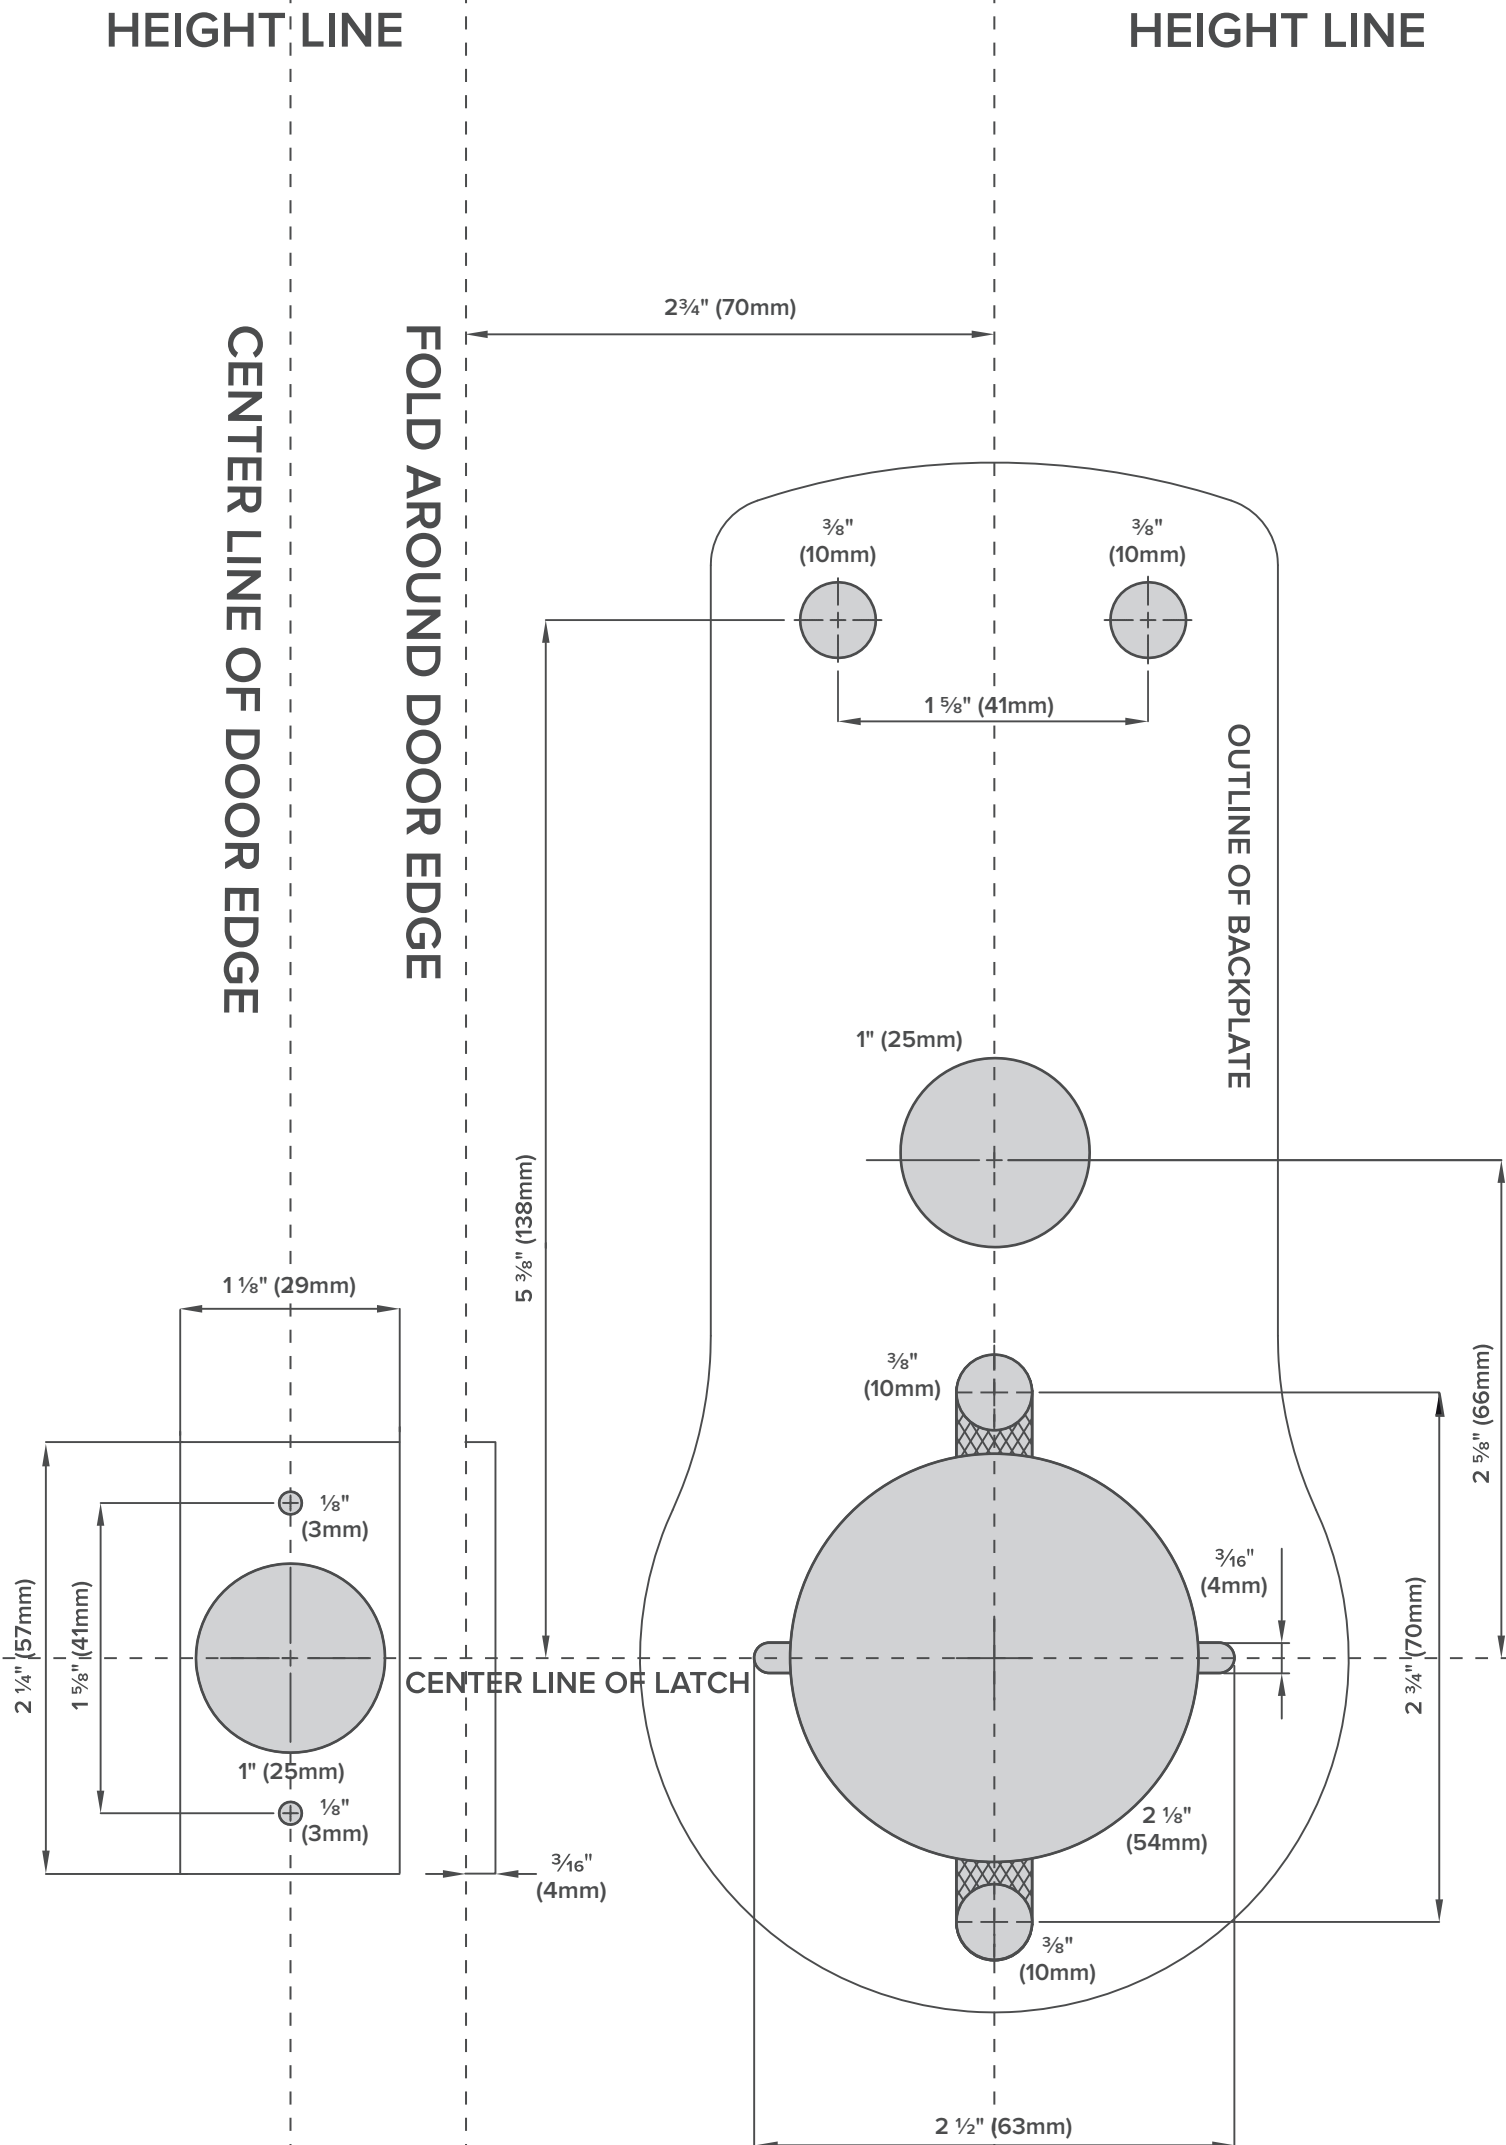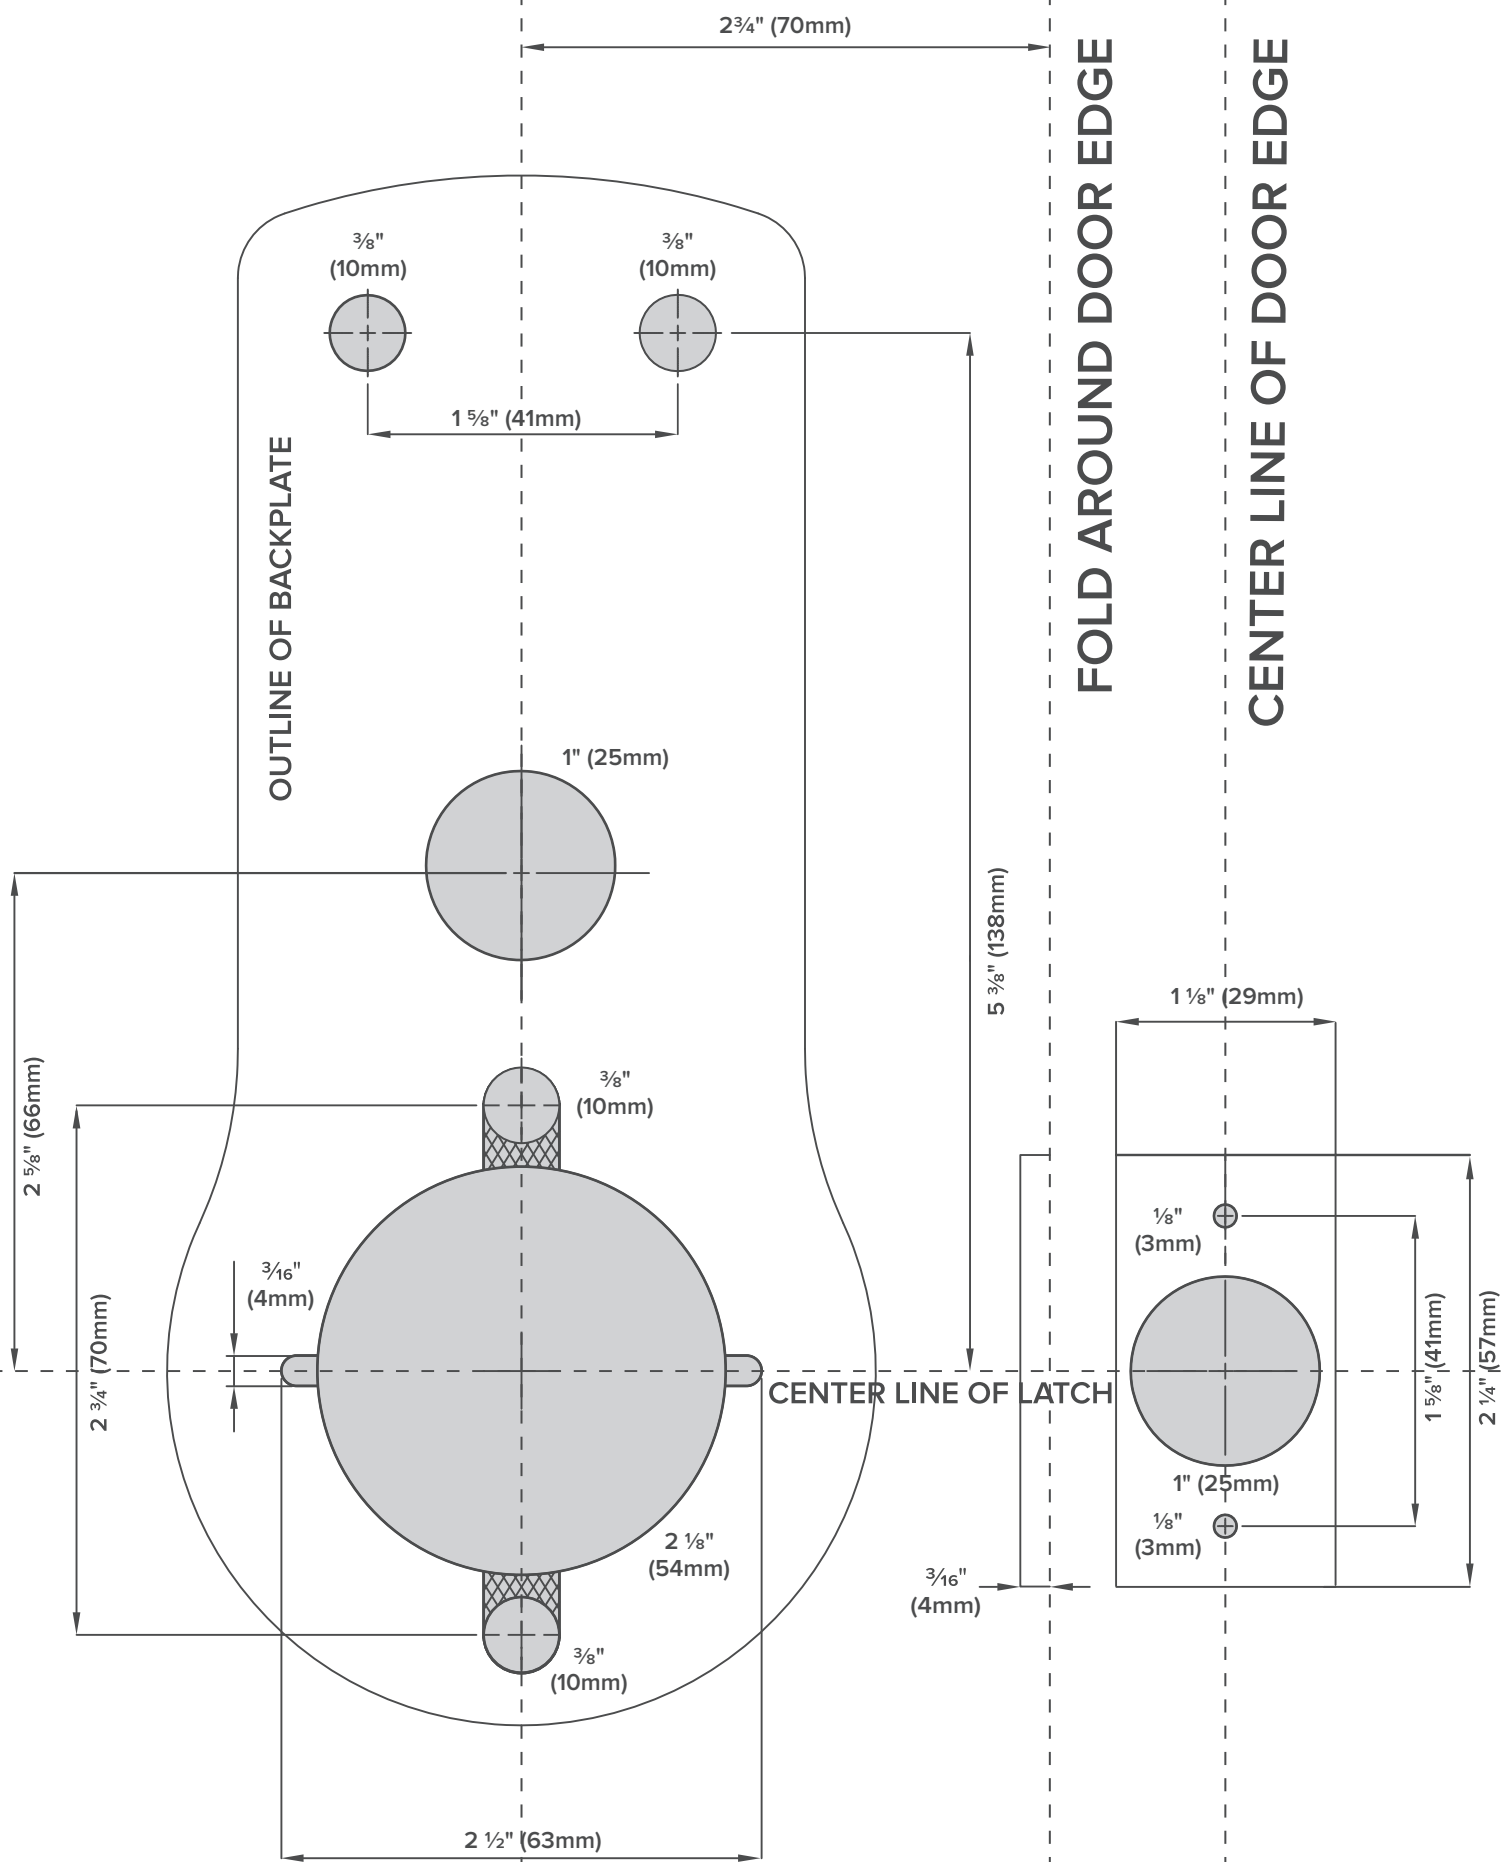HEIGHT LINE   HEIGHT LINE

Fix this template in position on the locker door to ensure holes are drilled accurately.

Use for vertical, right handed and left handed horizontal fitting.

2¾" (70mm)

FOLD AROUND DOOR EDGE

CENTER LINE OF DOOR EDGE

⅜" (10mm)   ⅜" (10mm)

OUTLINE OF BACKPLATE

1⅝" (41mm)

1" (25mm)

5 ⅜" (138mm)

2 ⅝" (66mm)

⅜" (10mm)

1 ⅛" (29mm)

⅛" (3mm)

3⁄16" (4mm)

2 ¾" (70mm)

1 ⅝" (41mm)

2 ¼" (57mm)

CENTER LINE OF LATCH

2 ⅛" (54mm)

1" (25mm)

⅛" (3mm)

⅜" (10mm)

3⁄16" (4mm)

2 ½" (63mm)

800 SERIES

LOCK INSTALLATION TEMPLATE