



# GV-Data Capture V3 Series

---

## *User's Manual*



Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.



© 2013 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision is not responsible for printing or clerical errors.

GeoVision, Inc.  
9F, No. 246, Sec. 1, Neihu Rd.,  
Neihu District, Taipei, Taiwan  
Tel: +886-2-8797-8377  
Fax: +886-2-8797-8335  
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

December 2013

# Preface

Welcome to the *GV-Data Capture V3 Series User's Manual*.

The GV-Data Capture V3 Series includes **GV-Data Capture V3**, **GV-Data Capture V3E** and **GV-Data Capture V3.1E**. This Manual is designed for the following models and firmware versions:

Model		Firmware Version
GV-Data Capture V3		V1.0
GV-Data Capture V3E (Ethernet Model)	V3E	V1.0
	V3.1E	V3.11 or later

The GV-Data Capture is designed for the **text-mode** POS system and cash register. For how to connect the **graphic-mode** POS system, please visit our website:

<http://www.geovision.com.tw/english/faq/POSflowchart/graphic/posflow-3.htm>

# Contents

<b>Preface</b> .....	<b>i</b>
<b>Naming and Definition</b> .....	<b>iv</b>
<b>1. Getting Started</b> .....	<b>1</b>
<b>1.1 Introduction</b> .....	<b>1</b>
<b>1.2 Unpacking</b> .....	<b>2</b>
<b>1.3 System Requirements</b> .....	<b>2</b>
<b>2. Overview</b> .....	<b>3</b>
<b>2.1 DIP Switch Setup</b> .....	<b>4</b>
<b>2.2 Baud Rate Setup</b> .....	<b>5</b>
<b>3. V3 Settings</b> .....	<b>6</b>
<b>3.1 Connections</b> .....	<b>6</b>
3.1.1 DB9 Serial Interface .....	6
3.1.2 DB25 Serial Interface .....	7
3.1.3 Parallel Interface .....	8
3.1.4 Extending Distance.....	9
<b>3.2 Configuring GV-System</b> .....	<b>10</b>
<b>4. V3E Settings</b> .....	<b>12</b>
<b>4.1 Configuring V3E</b> .....	<b>12</b>
4.1.1 Fixed IP .....	13
4.1.2 DHCP .....	15
4.1.2.1 Connection over LAN .....	15
4.1.2.2 Connection over Internet .....	18
<b>4.2 Configuring GV-System</b> .....	<b>22</b>
4.2.1 Fixed IP .....	22
4.2.2 DHCP .....	24
4.2.2.1 Connection over LAN .....	24
4.2.2.2 Connection over Internet .....	25
<b>4.3 Setup and Password</b> .....	<b>26</b>
4.3.1 System Setup .....	26
4.3.2 Updating Firmware .....	27
4.3.3 Changing Password .....	28

**5. Specifications .....29**

**6. Troubleshooting .....30**

## Naming and Definition

<b>POS System</b>	The GV-Data Capture V3 Series can work with both POS (Point of Sale) systems and cash registers. In this manual, we use POS systems to cover the two types of applications.
<b>GV-System</b>	GeoVision Analog and Digital Video Recording Software. The GV-System also refers to <b>Multicam System</b> , <b>GV-DVR System</b> , <b>GV-NVR System</b> and <b>GV-Hybrid DVR System</b> at the same time.

# 1. Getting Started

This section describes the features of the GV-Data Capture V3 Series, the inventory of the items that have supplied with GV-Data Capture, and the software version required for this application.

## 1.1 Introduction

The GV-Data Capture V3 Series can interface with POS systems and GV-System to overlay transaction data on video footage. This allows you to investigate a transaction data by either live view or playback.

The V3 Series comes in two models: V3 and V3E. The difference between the two models is the V3E features an Ethernet port, connecting POS systems to GV-System through LAN or Internet. The features of the V3 Series include:

- V3E of Ethernet model provides LAN / Internet connection.
- Supports both serial and parallel POS systems and cash registers.
- Connects up to 16 POS systems to a single GV-System.

For details on **V3 Settings**, see *Chapter 3*, and for details on **V3E Settings**, see *Chapter 4*.

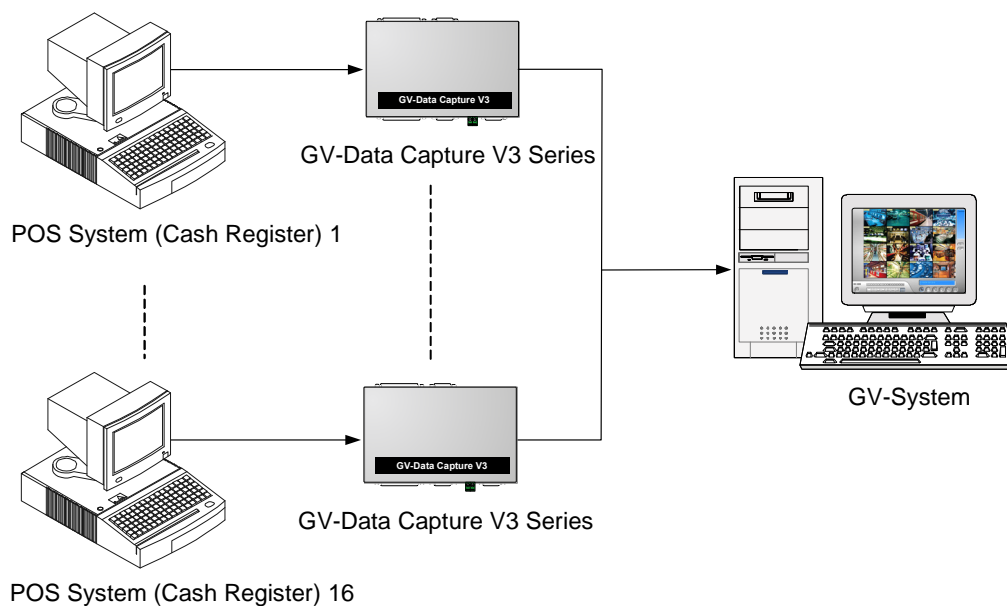


Figure 1

## 1.2 Unpacking

- GV-Data Capture V3 / V3E box x 1
- DB9 RS-232 cable (1.8 meters) x 1
- DB9 RS-232 cable (3 meters) x 1
- DB25 RS-232 cable (1.8 meters) x 1
- Power Adaptor DC 5V x 1
- DB25 Male Printer Terminator x 1
- Wall Hook x 2

## 1.3 System Requirements


- GV-Data Capture V3: GV-System version 6.0.2.0 or later
- GV-Data Capture V3E / V3.1E: GV-System version 8.0.4.0 or later




## 2. Overview

This section identifies the various components of GV-Data Capture V3 Series.


### Front Panel

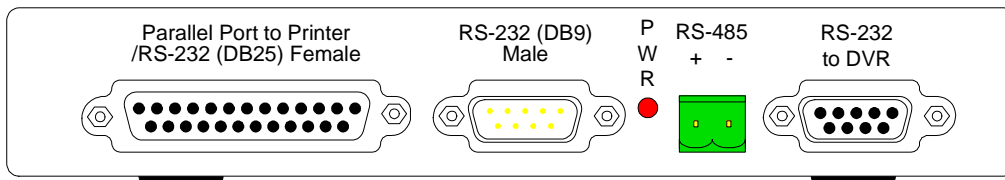

### Rear Panel

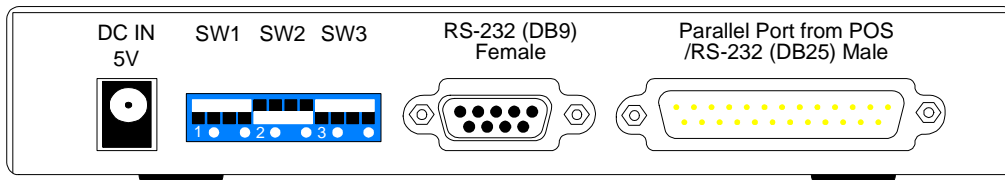

### V3 Side Panel

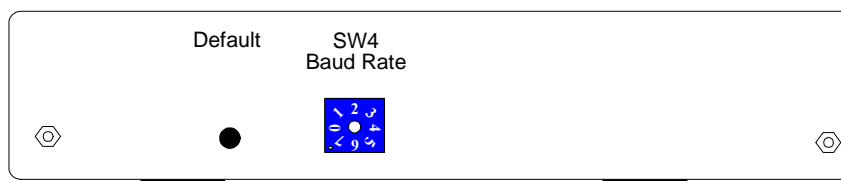

### V3E / V3.1E Side Panel

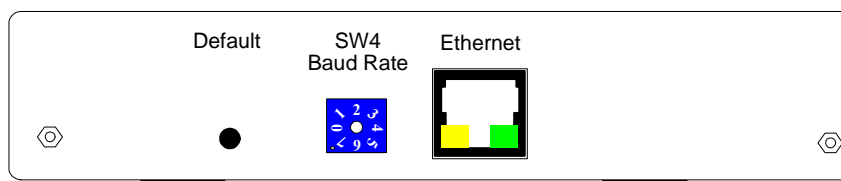
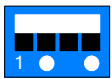
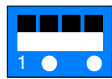
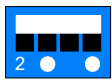
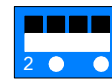




Figure 2

## 2.1 DIP Switch Setup

To adjust the DIP Switches, refer to the chart below.

- If your POS system is parallel type, set DIP Switch SW1 to Down; otherwise keep the default setting.
- If the output interface of your POS system is DB25, set DIP Switch SW2 to Up; otherwise keep the default setting.
- If the cable connecting your POS system to the GV-Data Capture is crossover, set DIP Switch SW3 to Down; otherwise keep the default setting.

SW1	Up: Serial (Default) Down: Parallel	 Up	 Down
SW2	Up: DB25 Mode Down: DB9 Mode (Default)	 Up	 Down
SW3	Up: Non-crossover (Default) Down: Crossover	 Up	 Down

## 2.2 Baud Rate Setup

To have the POS data transferred to the GV-System via the GV-Data Capture, you need to set the exact baud rate in each connected device, including the GV-Data Capture and POS systems.

On the side panel of the GV-Data Capture, there is a Baud Rate Switch. Each number (from 0 to 7) on the Switch represents a kind of baud rate. Set the baud rate to correspond to that of the POS system.

Switch Number	Baud Rate
0	115200 (default value)
1	57600
2	38400
3	19200
4	9600
5	4800
6	2400
7	1200

## 3. V3 Settings


The GV-Data Capture V3 Series supports both serial and parallel types of POS systems. This section introduces how to connect the two types of POS systems to the GV-Data Capture, and how to configure the GV-System to receive the data from the POS system.

### 3.1 Connections

Identify the interface on your POS system used to connect a receipt printer to the POS system. It should be one of the three interfaces: DB9 Serial, DB25 Serial and Parallel. Following illustrates the connections of the three interfaces.

#### 3.1.1 DB9 Serial Interface

The illustration below is an example of a **POS system using a DB9-DB25 cable**.

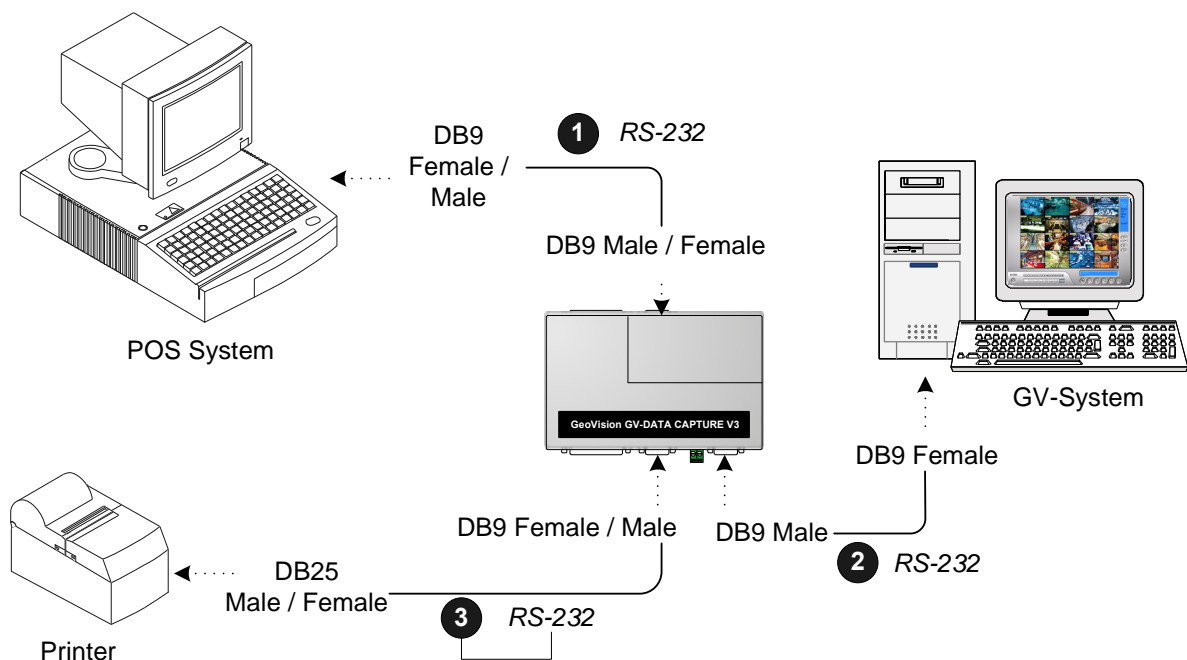


- The RS-232 cables (1) and (2) are supplied with the GV-Data Capture.
- The RS-232 cable (3) is supplied with the POS system.
- The physical distance between the POS system and GV-System should be less than 10 meters (32 ft).

Figure 3

### 3.1.2 DB25 Serial Interface

The illustration below is an example of a **POS system using an RJ45-DB25 cable**.

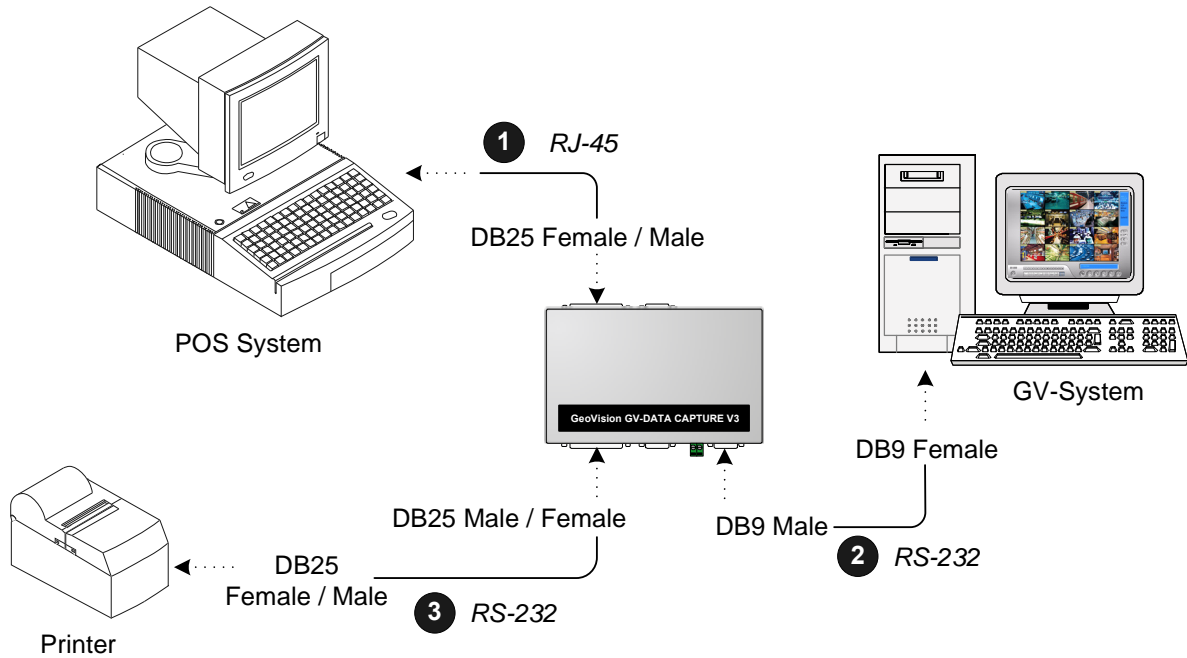


- The RJ-45 cable (1) is supplied with the POS system.
- The RS-232 cables (2) and (3) are supplied with the GV-Data Capture.
- The physical distance between the POS system and the GV-System should be less than 10 meters (32 ft).

Figure 4

### 3.1.3 Parallel Interface

To connect a parallel POS system, two precautions should be taken:

1. Set DIP Switch SW1 on the rear panel of the GV-Data Capture to **Down**. See 2.1 *DIP Switch Setup*.
2. If no receipt printer is attached, make sure to connect the supplied Terminator to the GV-Data Capture (as illustrated below), or the GV-System will not be able to receive any transaction data.

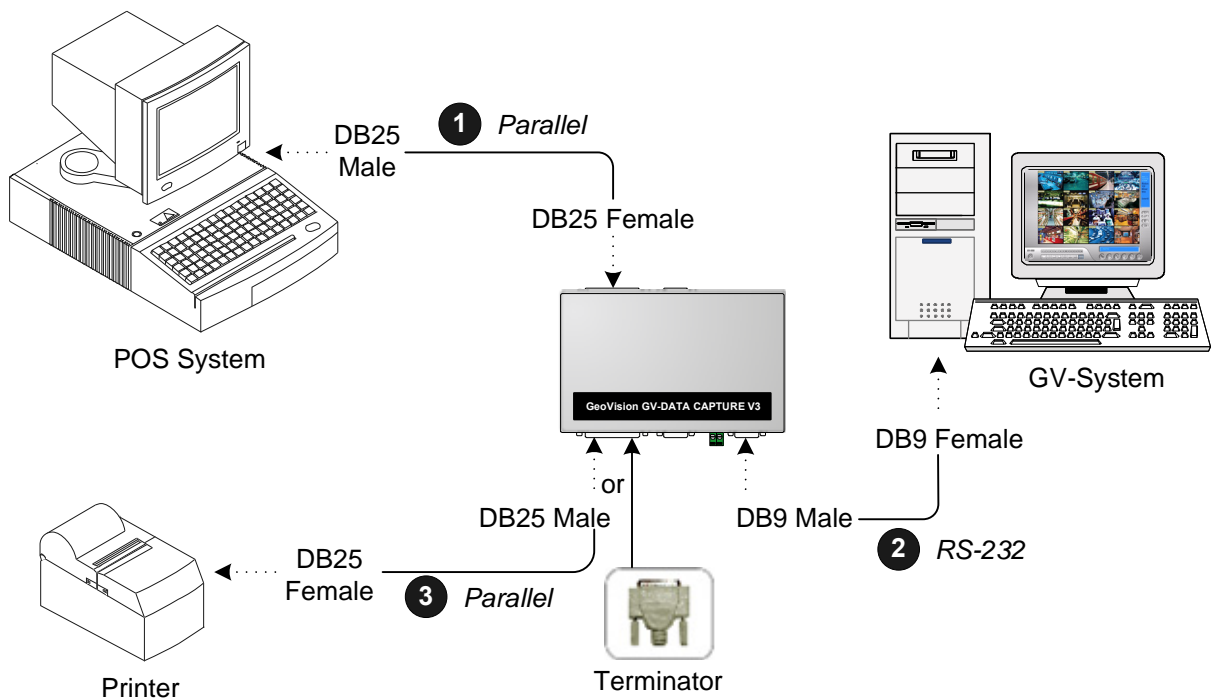


- The Parallel cables (1) and (3) are supplied with the POS system.
- The RS-232 cable and Terminator are supplied with the GV-Data Capture.

Figure 5

### 3.1.4 Extending Distance

The previous three diagrams assume the physical distance between the POS system and GV-System is within 10 meters (32 ft). If the distance between the two devices is greater than 10 meters, it is required to use GV-NET series, GV-HUB or GV-COM in the connection.

- Using GV-NET series in the connection

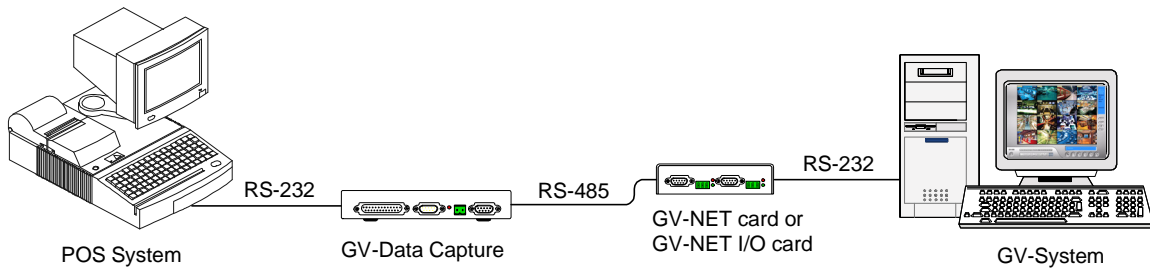

- Using GV-HUB / GV-COM in the connection

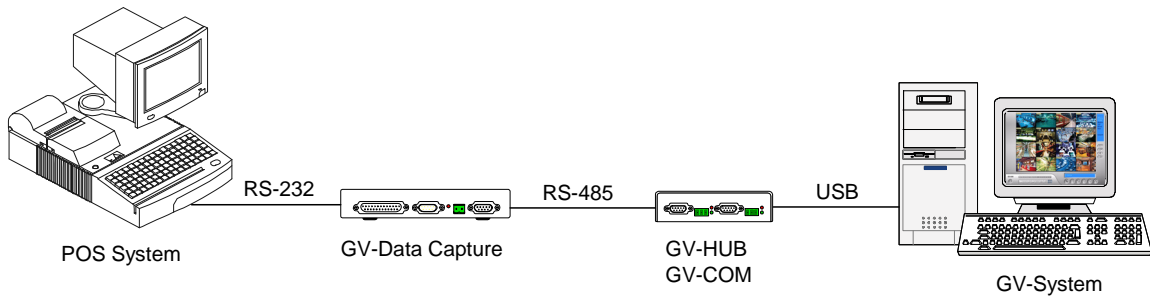


Figure 6

---

**Note:** The maximum distance of RS-485 is 600 meters (2000 ft).

---

## 3.2 Configuring GV-System

Configure the GV-System to receive the transaction data from the POS system.

1. Click the **Configure** button on the main screen, point to **POS Application Setting**, and then select **POS Device Setup**. The POS Server Setup dialog box appears.
2. Click the **New** tab. This dialog box appears.

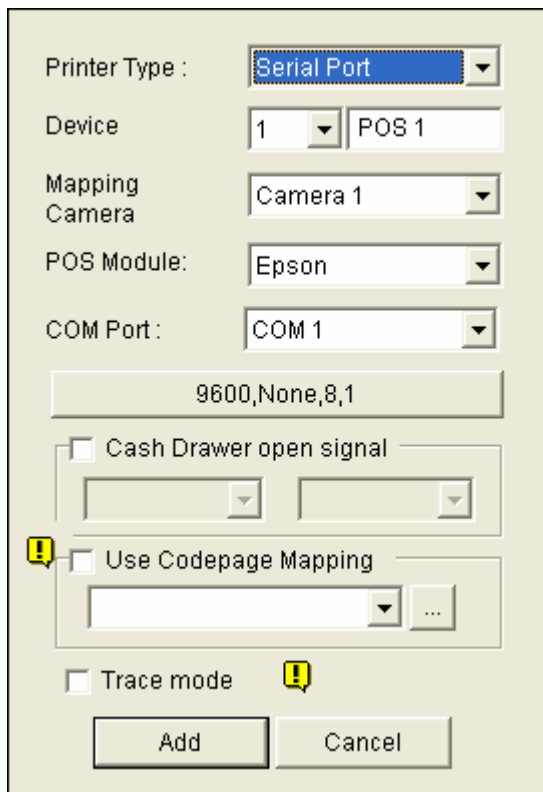


Figure 7

- **Printer Type:** Select **Serial** or **Parallel** from the drop-down list.
- **Device:** Select a number to specify how many POS device are connected, and rename the POS device if necessary.
- **Mapping Camera:** Specify a channel to display POS data of the selected device.
- **POS Module:** Select the printer connected to the POS system. If it's not Epson, select **General** for other brands.
- **The parameter button:** Click this button to configure the following parameters or keep default settings.

**Baud Rate:** Select the baud rate corresponding to that of the POS system.



**Data Bits:** Select the number of data bits corresponding to that of the printer.

**Parity:** Select **None** for the Serial POS system.

**Stop Bits:** Select the stop bit corresponding to that of the printer.

- **Cash Drawer Open Signal:** This option is only available when an input module is configured in the GV-System. Assign the input module connected to the cash drawer. Every time when the cash drawer is open, it will be recorded in System Log for later retrieval.
  - **Use Codepage Mapping:** This option is to support special character and symbol display. For details, see "Codepage Mapping", Chapter 3, *GV-DVR User's Manual* on the Surveillance System Software CD.
  - **Trace Mode:** Check this option only after getting the recommendation from our technical support staff.
3. After above settings, click **Add** to add the POS system to the GV-System.

## 4. V3E Settings

The GV-Data Capture V3E is the Ethernet version of the GV-Data Capture V3. The V3E allows you to connect POS systems to the GV-System through LAN or Internet, overcoming the distance limit of RS-232 or RS-485 cables.

This section introduces how to set up the V3E on the network, how to configure the GV-System to receive the transaction data from the POS system, and how to configure the system settings of the V3E.

### 4.1 Configuring V3E

The GV-Data Capture V3E is able to support two network environments:

- Fixed IP
- DHCP

Depending on your POS system's network, choose **Fixed IP** for static IP addresses, or **DHCP** for dynamic IP addresses such as those assigned by an ISP or other DHCP server.

### 4.1.1 Fixed IP

If your POS system supports a static IP address, the wiring is illustrated as below:

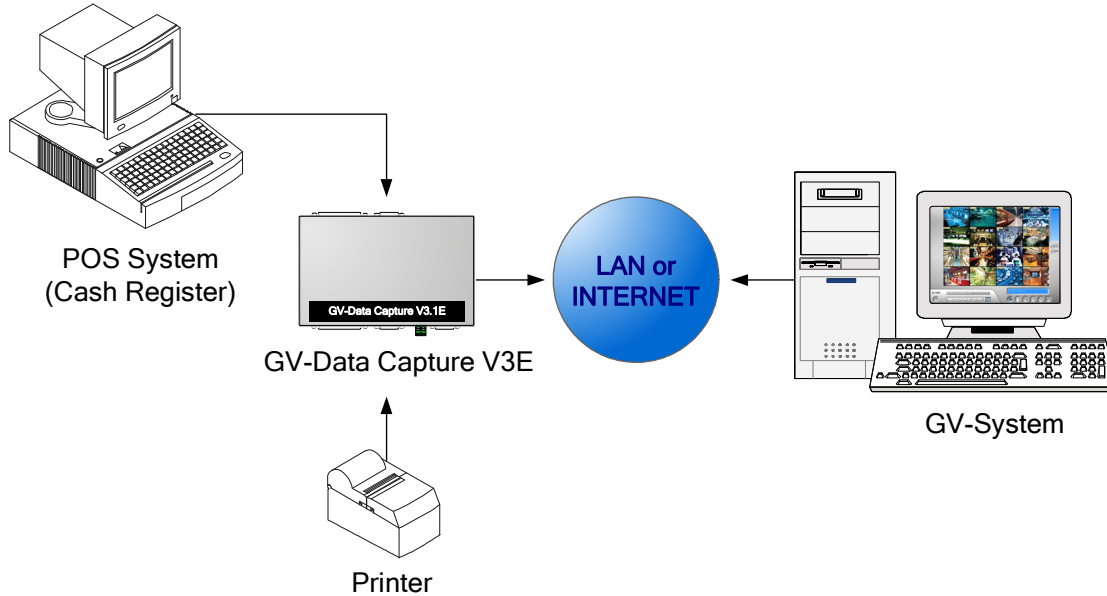


Figure 8

---

**Note:** For connections among the POS system, printer and GV-Data Capture V3E, see [3.1 Connections](#).

---

After wiring work is complete, configure the V3E to match your network requirements.

1. Open an Internet browser, and type the web address: <http://192.168.0.100> . This dialog box appears.

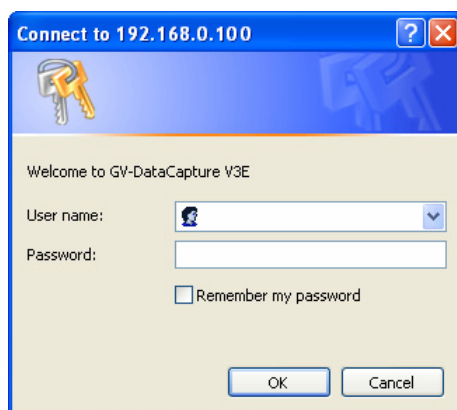


Figure 9

- In the User Name and Password fields, type default value **admin** and **1234** respectively, and then click **OK**. This page appears.

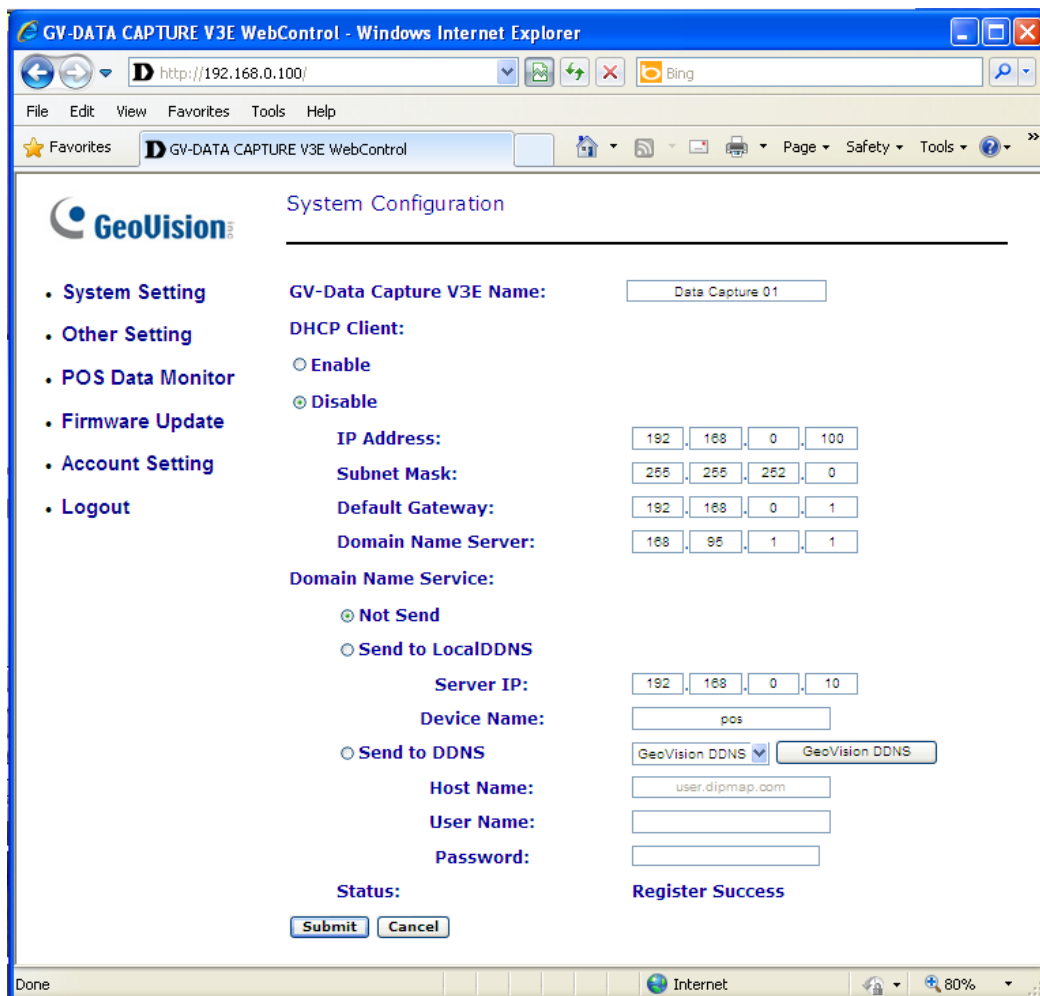


Figure 10

---

**Note:** User Name is fixed, but Password is changeable. See 4.3.3 Changing Password.

---

- In the GV-Data Capture V3E Name field, name the connected V3E.
- Click **Disable**. Type the static IP address information, including IP Address, Subnet Mask, Default Gateway and Domain Name Server.
- Click **Submit**. When the connection is established, the Status field indicates: *Register Success*.

---

**Note:** If you like to use the domain name instead of IP address, you may use Domain Name Service as well. For details on domain name service, refer to 4.1.2 DHCP.

---

### 4.1.2 DHCP

If your POS system is using a dynamic IP address from a DHCP server, two types of DDNS servers are provided to tie a dynamic IP address to a static domain name or device name. This allows the GV-System to access your POS system by name.

- For LAN connection, GV LocalDDNS Server is provided.
- For Internet connection, two DDNS servers are supported: GeoVision DDNS Server and Dynamic Network Services Inc. (DynDNS).

#### 4.1.2.1 Connection over LAN

The GV-developed “LocalDDNS Server” can map a device name to your POS system’s varying IP address, by which the GV-System can access your POS system by the device name.

The Local DDNS Server can be installed in either GV-System or a separate computer. The wiring of the LocalDDNS application is illustrated as below.

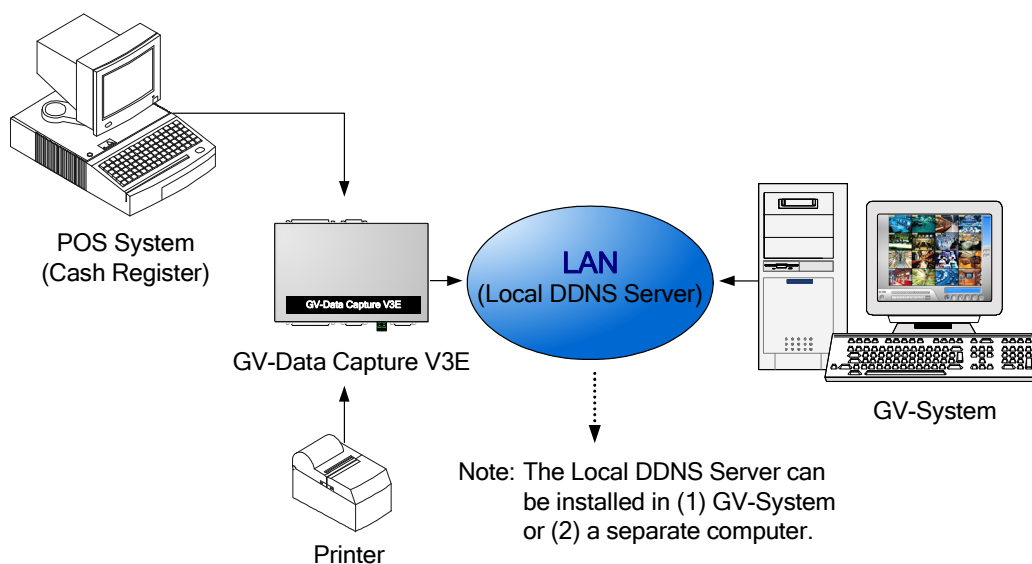


Figure 11

---

**Note:** For connections among the POS system, printer and GV-Data Capture V3E, see [3.1 Connections](#).

---

## Installing LocalDDNS Server

To install the LocalDDNS Server in a computer:

1. Insert the Surveillance System Software CD to your computer. It will run automatically and pop up a window.
2. Select **Install GeoVision System**.
3. Select **GeoVision LocalDDNS Server**, and then follow on-screen instructions.
4. Run **LocalDDNS.exe**.

The program will be minimized to the system tray.



*Figure 12*

## Configuring V3E for the Connection over LAN

After running the LocalDDNS Server, configure the V3E to match your network requirements.

1. Open an Internet browser, and type the web address: <http://192.168.0.100>. The login dialog box (see *Figure 9*) appears.
2. In the User Name and Password fields, type default value **admin** and **1234** respectively, and click **OK**. The GV-Data Capture V3E Web interface (see *Figure 10*) appears.

---

**Note:** User Name is fixed, but Password is changeable. See [4.3.3 Changing Password](#).

---

3. Click **Enable**, and select **Send to Local DDNS**.
4. In Server IP field, type the IP address of the LocalDDNS server.
5. In Device Name field, keep the default setting or change it to match that of the GV-System (see *Figure 20*).

**DHCP Client:**

**Enable**

**Disable**

**IP Address:**                    192 . 168 . 0 . 100

**Subnet Mask:**                    255 . 255 . 255 . 0

**Default Gateway:**                    192 . 168 . 0 . 1

**Domain Name Server:**                    168 . 95 . 1 . 1

**Domain Name Service:**

**Not Send**

**Send to LocalDDNS**

**Server IP:**                    192 . 168 . 0 . 10

**Device Name:**                    pos

**Send to DDNS**                    DynDNS.org    GeoVision DDNS

**Host Name:**                   

**User Name:**                   

**Password:**                   

**Status:**                    **Register Success**

Figure 13

---

**Note:** The default value of the device name is **pos**. If more than one POS system is connected to the GV-System, assign each device a different name.

---

6. Click **Submit** to send the information to the LocalDDNS Server. When the connection is established, the Status field indicates: *Register Success*.

#### 4.1.2.2 Connection over Internet

DDNS (Dynamic Domain Name System) provides another way of accessing the POS system when using a dynamic IP. DDNS assigns a domain name to your POS system, so the GV-System can always access the POS system by the domain name.

To enable the DDNS function, you should first apply for a domain name from the DDNS service provider's website. There are 2 providers listed in the GV-Data Capture V3E: GeoVision DDNS Server and DynDNS.org.

To register at the GeoVision DDNS Server, see the following section. For details on DynDNS, please consult them at [www.dyndns.org](http://www.dyndns.org).

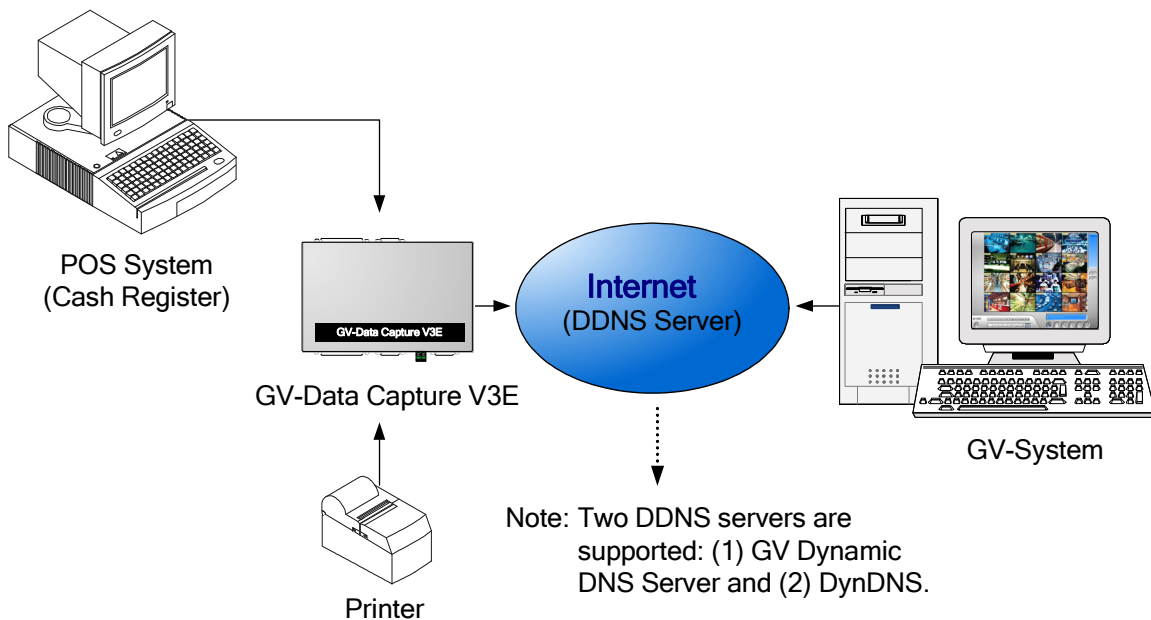


Figure 14



## Registering a DDNS Domain Name

To obtain a domain name from the GeoVision DDNS Server:

1. In the left menu pane, click **System Setting**, and then click the **GeoVision DDNS** button (see *Figure 10*). Or open an Internet browser, and type the web address <http://ns.dipmap.com/register.aspx>. This page appears.

**DynamicDNS01**

**Register**

Username:

Password:

Re-type Password:

**Username**  
Username is 16-character maximum; username may not start with spaces or minus signs ('-'). Username will be your hostname.

**Password**  
The password is case-sensitive.

Enter the characters as they are shown in the box below.

**Word Verification**  
This step helps us prevent automated registrations.

Figure 15

2. In the Username field, type a name. Username can be up to 16 characters with the choices of “a ~ z”, “0 ~9”, and “-”. Note that space or “-” cannot be used as the first character.
3. In the Password field, type a password. Passwords are case-sensitive and must be at least 6 characters. Type the password again in the Re-type Password field for confirmation.
4. In the Word Verification section, type the characters or numbers shown in the box. In the example, type i8UCY in the required field. Word Verification is not case-sensitive.

5. Click the **Send** button. When the registration is complete, this page appears.

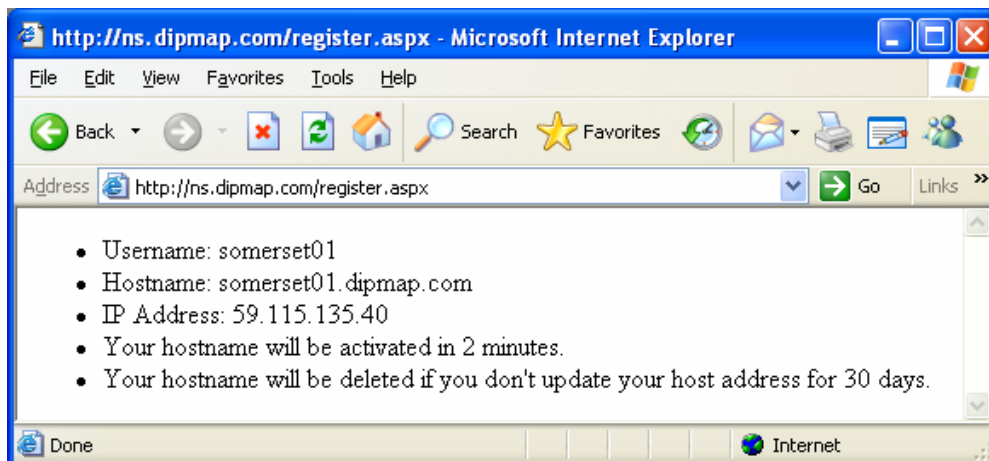


Figure 16

For details, see “Using Dynamic DNS”, Chapter 13, *GV-DVR User’s Manual* on the Surveillance System Software CD.

---

**Note:** The registered name will be invalid when it is not used for one month.

---

## Configuring V3E for the Connection over Internet

After registering a domain name on the DDNS Server, configure the V3E to meet your network requirements.

1. Follow the Steps 1 to 2 in *4.1.1 Fixed IP* above. The GV-Data Capture V3E Web interface (see *Figure 10*) appears.
2. Click **Enable**, and select **Send to DDNS**.
3. Type the information of **Host Name**, **User Name** and **Password** that are registered on the DDNS Server.

The screenshot shows the DHCP Client configuration window. The 'Enable' radio button is selected and highlighted with a red box. Below it, the network configuration fields are: IP Address (192, 168, 0, 100), Subnet Mask (255, 255, 255, 0), Default Gateway (192, 168, 0, 1), and Domain Name Server (168, 95, 1, 1). Under 'Domain Name Service', 'Send to LocalDDNS' is selected. The 'Server IP' is 192, 168, 0, 10 and the 'Device Name' is 'pos'. A red box highlights the 'Send to DDNS' section, which includes a dropdown menu set to 'GeoVision DDNS', a 'GeoVision DDNS' button, and input fields for 'Host Name' (user.dipmap.com), 'User Name' (dc013), and 'Password' (masked with dots). At the bottom, the 'Status' field shows 'Register Success' and there are 'Submit' and 'Cancel' buttons.

Figure 17

4. Click **Submit** to send the information. When the connection is established, the Status field indicates: *Register Success*.

## 4.2 Configuring GV-System

After configuring the GV-Data Capture V3E, you need to set the GV-System to match your POS system's network as well.

### 4.2.1 Fixed IP

To set the GV-System for a static IP address network:

1. Click the **Configure** button on the main screen, point to **POS Application Setting**, and then select **POS Device Setup**. The POS Server Setup dialog box appears.
2. Click the **New** tab. This dialog box appears.

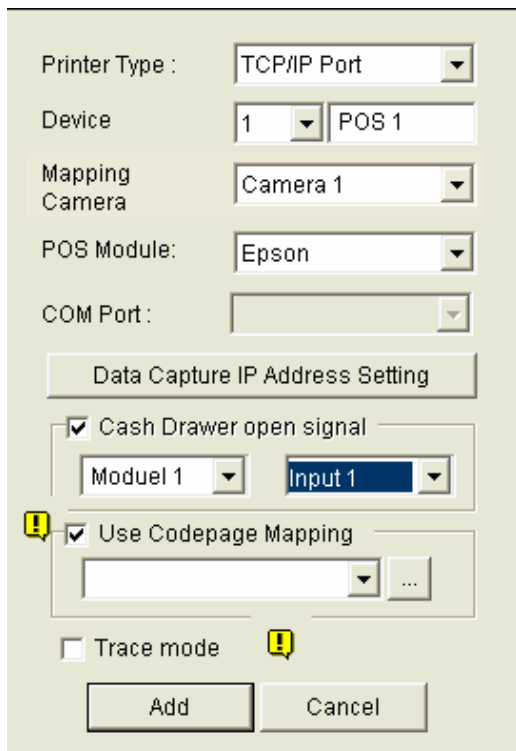


Figure 18

- **Printer Type:** Select **TCP/IP Port** from the drop-down list.
- **Device:** Use the drop-down list to select a number to specify how many POS device are connected, and rename the POS device in the next column if necessary.
- **Mapping Camera:** Specify a channel to display POS data of the selected device.

- **POS Module:** Select the printer connected to the POS system. If it's not Epson, select **General** for other brands.
- **Cash Drawer Open Signal:** This option is only available when an input module is configured in the GV-System. Assign the input module connected to the cash drawer. Every time when the cash drawer is open, it will be recorded in System Log for later retrieval.
- **Use Codepage Mapping:** This option is to support special character and symbol display. For details, see "Codepage Mapping", Chapter 3, *GV-DVR User's Manual* on the Surveillance System Software CD.
- **Trace Mode:** Check this option only after getting the recommendation from our technical support staff.

3. Click the **Data Capture IP Address Setting** tab. This dialog box appears.

The screenshot shows a dialog box titled "Data Capture Box IP Setting". It has three radio button options: "Fixed IP" (selected), "IP Info. in DDNS Server (\*\*\*.dipmap.com)", and "IP Info. in (GV-Data Capture) Local DDNS Server". Under "Fixed IP", the "IP Address" field contains "192 . 168 . 0 . 100". Under "IP Info. in DDNS Server", there is a "Domain Name" field with a warning icon. Under "IP Info. in (GV-Data Capture) Local DDNS Server", there is a "Device Name" field. Below these are two radio buttons: "In Host" (selected) and "In another PC". The "Local DDNS Server IP" field contains "127 . 0 . 0 . 1". At the bottom, there is a "Browse Device Setting" button, and fields for "Device Port" (4000), "ID" (admin), and "Password" (\*\*\*\*). "OK" and "Cancel" buttons are at the very bottom.

Figure 19

4. Select **Fixed IP**, and type the IP address of the POS system.
5. In the Device Port field, keep default value **4000**. Or modify it to match that of the POS system (see *Figure 22*).
6. In the Password field, type default value **1234**.
7. If you need to change or view the configurations of V3E, click the **Browse Device Setting** button. The GV-Data Capture V3E Web interface (see *Figure 10*) will appear.
8. Click **OK** to add the POS system to GV-System.

## 4.2.2 DHCP

To set the GV-System for a dynamic IP address network, first decide your connection network is LAN or Internet.

### 4.2.2.1 Connection over LAN

1. Follow Steps 1 to 3 described in 4.2.1 *Fixed IP*. The Data Capture Box IP Setting dialog box appears.

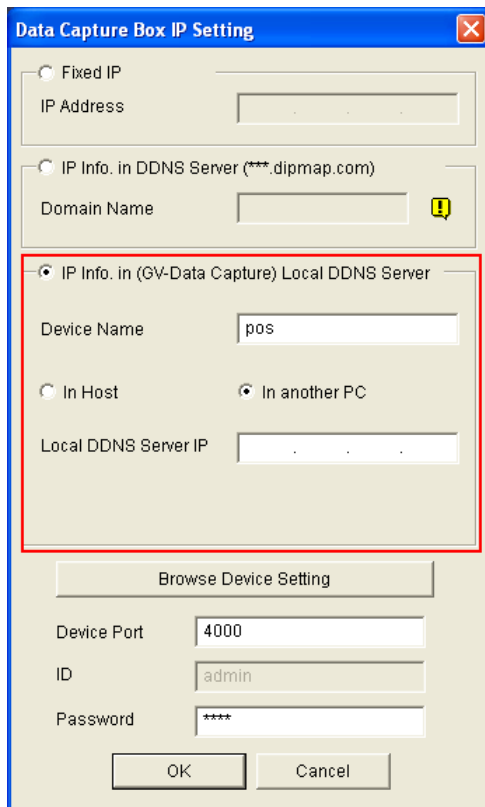


Figure 20

2. Select **IP Info. in (GV-Data Capture) Local DDNS Server**.
  - If the LocalDDNS Server is installed in the GV-System, select **In Host** and type default value **pos**. Or modify it to match that of the POS system.
  - If the LocalDDNS Server is installed in a separate computer, select **In another PC**, and type its IP address.
3. In the Device Port field, keep default value **4000**. Or modify it to match that of the POS system (see Figure 22).
4. In the Password field, type default value **1234**.
5. If you need to change or view the configurations of V3E, click the **Browse Device**

**Setting** button. The GV-Data Capture V3E Web interface (see Figure 10) will appear.

- Click **OK** to add the POS system to GV-System.

#### 4.2.2.2 Connection over Internet

- Follow the Steps 1 to 3 in 4.2.1 *Fixed IP*. The Data Capture Box IP Setting dialog box appears.

Figure 21

- Select **IP Info. in DDNS Server**, and type the domain name registered on the DDNS Server.
- In the Device Port field, keep default value **4000**. Or modify it to match that of the POS system (see Figure 22).
- In the Password field, type default value **1234**.
- If you need to change or view the configurations of the V3E, click **Browse Device Setting**. The GV-Data Capture V3E Web interface (see Figure 10) will appear.
- Click **OK** to add the POS system to GV-System.

## 4.3 Setup and Password

You can execute certain system operations, change login password and view the version information of the firmware.

### 4.3.1 System Setup

In the left menu pane, click **Other Setting**. This page appears.

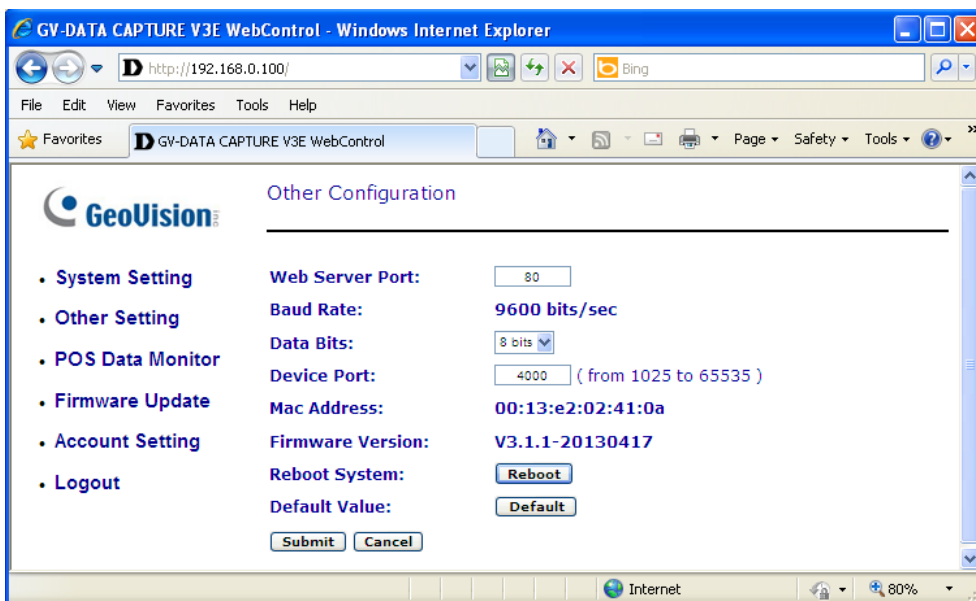


Figure 22

- **Web Server Port:** Keeps the default value 80. Or makes changes if necessary.
- **Baud Rate:** Displays the baud rate set in the GV-Data Capture V3E.
- **Data Bits:** Select **7 bits** or **8 bits** for data transmission. Note this option is only available for GV-Data Capture V3.1E.
- **Device Port:** Keeps the default value **4000**. Or modify it to match that of GV-System. See *Figure 19*.
- **Mac Address:** Indicates the MAC address of the network medium.
- **Reboot System:** Performs a warm boot of the GV-Data Capture V3E. This operation will keep the current configuration.
- **Default Value:** Resets all configuration parameters to their factory settings. This may take 5 seconds to complete.



### 4.3.2 Updating Firmware

To update the firmware of the GV-Data Capture V3E:

1. In the left menu pane, click **Firmware Update**. This page appears.

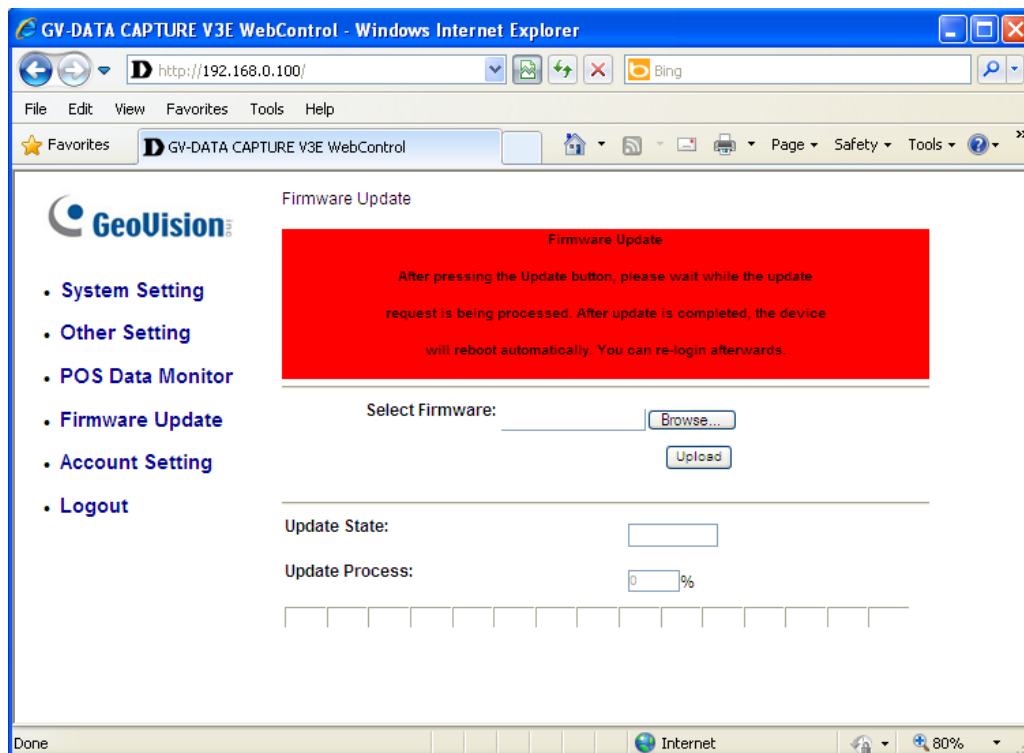


Figure 23

2. Click the **Browse...** button to open the firmware file (\*.bin)
3. Click the **Upload** button. This update procedure may take 60 seconds to complete.
4. When the Update is complete, a dialog box appears and asks you to reboot the system.

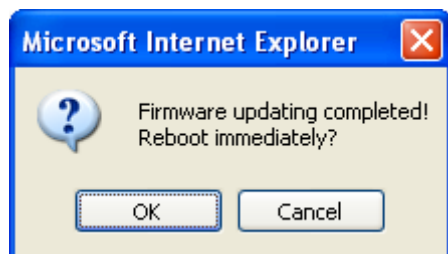


Figure 24

5. Click **OK**, and the V3E starts the Reboot operation.

---

**Note:** It is required to reboot the V3E after updating the firmware. Without rebooting, the firmware update is not complete.

---

### 4.3.3 Changing Password

To change the login password:

1. In the left menu pane, click **Password Setting**.
2. On the Password Change page, type a password of 4 characters with the choices of “a ~ z” and “0 ~ 9”. Note that the password setting is case sensitive.

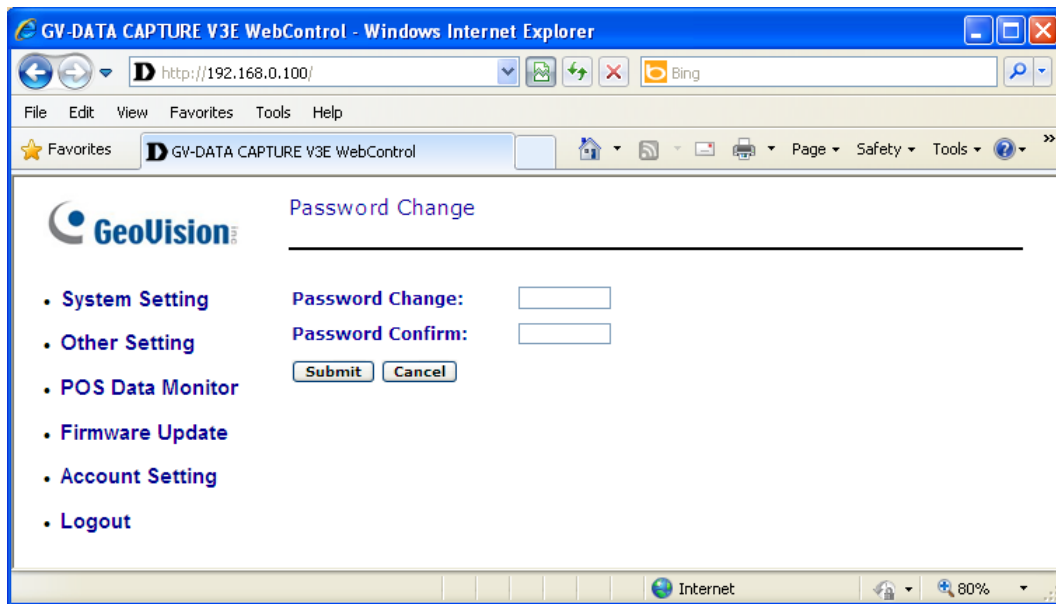


Figure 25

## 5. Specifications

Specifications		
<b>Input</b>	DB9 Female	RS-232 from POS
	DB25 Male / Parallel Port	RS-232 from POS / Parallel Port from POS
<b>Output</b>	DB9 Male	RS-232 to Printer
	DB25 Female / Parallel Port	RS-232 to Printer / Parallel Port to Printer
	DB9 Female	RS-232 to DVR
	RJ-45	RJ-45 to DVR
	RS-485+	Connect to GV-NET / GV-HUB / GV-COM RS-485+
	RS-485-	Connect to GV-NET / GV-HUB / GV-COM RS-485-
<b>Communication</b>	RS-232 from POS	1,200 bps~115,200 bps
	RJ-45 to DVR	10 / 100 Mbps
	RS-232 to DVR	1,200 bps~115,200 bps
	RS-485 to GV-NET Card / GV-NET I/O Card	1,200 bps~19,200 bps
	RS-485 to GV-HUB / GV-COM	600 bps~115,200 bps
<b>DC IN</b>	Power Adapter DC5V, 2A Inner Positive	
<b>Environmental Conditions</b>	Operating Temperature	0 °C ~ 50 °C (32 °F ~ 122 °F)
	Humidity	5%~95% (non-condensing)
<b>Dimensions (W x H x D)</b>	161 x 34 x 123 mm (6.33" x 1.33" x 4.84")	

**Note:** Specifications are subject to change without notice.

## 6. Troubleshooting

### Forgotten password or V3E's IP address.

Press the **Reset** button for 5 seconds. All the previous settings will be reset to defaults.

### Unable to configure when connecting more than one GV-Data Capture V3E to the same PC during first-time setup.

1. Complete the configuration of one V3E (see *4.1 Configuring V3E*).
2. After the settings are complete, go to Windows **Start**, point to **Programs**, select **Accessories**, and then click **Command Prompt**. This window appears.

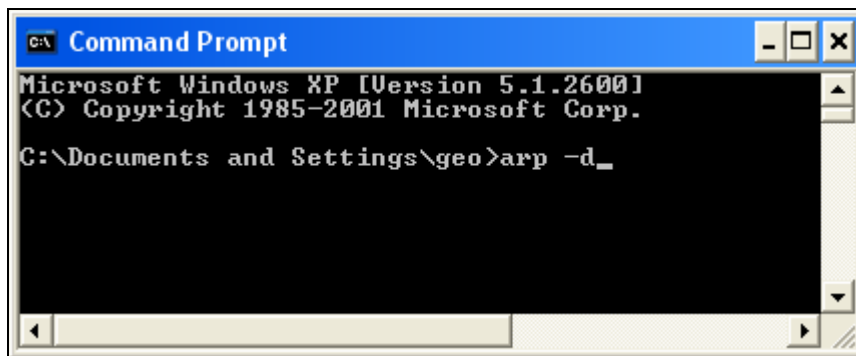


Figure 26

3. In the command line, type **arp -d** to clear ARP cache. This should help you avoid the IP address conflict in the next setup of V3E.
4. Return to the GV-Data Capture V3E Web interface (see *Figure 10*) to configure another V3E.
5. Repeat Steps 2 to 4 to complete all setups.

### No POS data is transferred to GV-System after the setup is complete.

1. At the GV-System, make sure the IP address, device port and password information are correctly typed (see *4.2 Configuring GV-System*).


2. Check if the baud rates of the GV-Data Capture, POS system and GV-System are the same. For the baud rate setting in the GV-Data Capture, see *2.2 Baud Rate Setup*. For the baud rate setting in the GV-System, see *3.2 Configuring GV-System*.
3. If the network environments of the GV-Data Capture and GV-System have implemented NAT or Firewall, open the **port 80** for the web connection and **port 4000** for data transmission.

### Find out the dynamic IP address of your POS system.

There are two ways to find out the dynamic IP address of your POS system:

1. Click the **Browse Device Setting** button (see *Figure 20*) to see the IP address on the IE browser.
2. Go to Windows **Start**, click **Run**, type the file name “**enpos.ini**” in the field, and press **OK**.

The “enpos.ini” file appears as shown below, and you will see the IP address of the POS system.

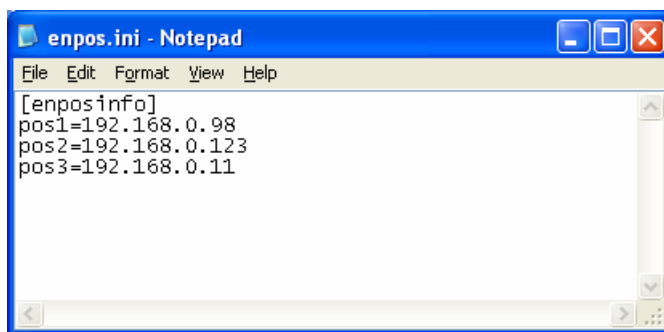

*Figure 27*

For more questions, please visit our website:

[http://www.geovision.com.tw/english/faq/POSflowchart/posflow-1\\_new.htm](http://www.geovision.com.tw/english/faq/POSflowchart/posflow-1_new.htm)