


# GV-PoE Switch

## *GV-POE0410-E-V2 User's Manual*



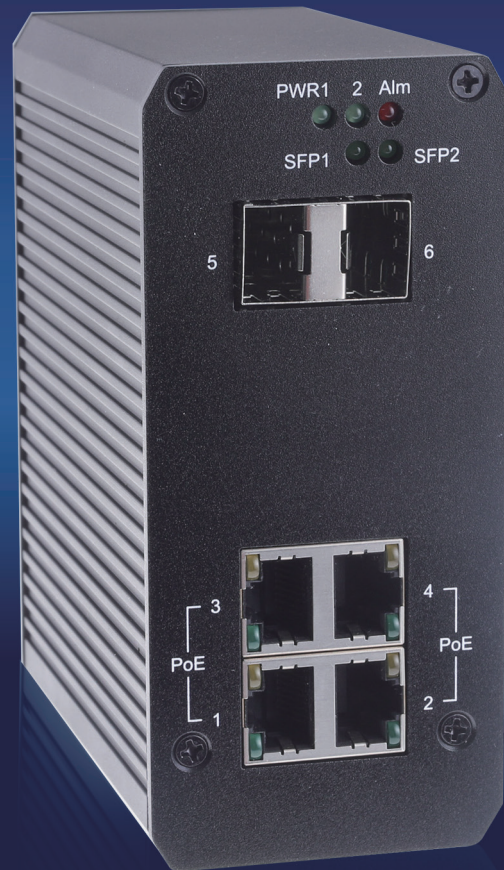

© 2019 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.

9F, No. 246, Sec. 1, Neihu Rd.,

Neihu District, Taipei, Taiwan

Tel: +886-2-8797-8377

Fax: +886-2-8797-8335

<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and GV series products are trademarks of GeoVision, Inc. *Windows* is the registered trademark of Microsoft Corporation.

November 2019

# Contents

Safety Precautions.....	ii
1. Introduction.....	1
1.1. Key Features .....	2
1.2. Packing List .....	2
1.3. Options .....	3
2. Hardware Description.....	4
3. DIN-Rail Mounting .....	7
4. Hardware Installation.....	8
4.1. Wiring the DC Power Inputs.....	8
4.2. Wiring the Alarm Relay .....	9
4.3. Wiring the Earth Grounding .....	9
4.4. Enable the Event Alarm Function .....	10
4.5. Cabling .....	11

## Safety Precautions

### **FCC Warning**

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

# 1. Introduction



## Product Overview

GV-POE0410-E-V2 is a 4-port PoE Switch with 4 PoE+ 10/100/1000 BaseT(X) port and 2 Gigabit SFP. The switch supports IEEE 802.3at Power over Ethernet standard with up to 30 W per port, with a maximum power consumption of 127 W. No special network cable is required for connecting to powered devices (PD), such as IP cameras. GV-POE0410-E-V2 is featured with a redundant power supply for automatic power backup and supports alarms alerting for power and connection failure. The switch is designed for small network environments in strengthening network connection stability and efficiency.

## Redundant Power Inputs

This switch provides two power inputs that can be connected simultaneously as its power supply. One of the power supplies provides backup to be automatically switched to when the other fails.

## Auto-Negotiation

Every port can automatically detect for and adjust accordingly if the connected network devices are running at 10Mbps, 100M, 1000Mbps and Half/Full-Duplex mode.

## Auto-MDI/MDI-X

Every port can automatically detect for the type of cable connected and avoid the need for crossover cables for connecting to another switch or to a computer.

## **Rugged Design**

This switch is designed for harsh environmental conditions. With its rigid aluminum enclosure and 6kV surge protection design, the switch not only protects the surge from the DC-in port, but also the RJ-45 ports. By using this switch, it will make your network more reliable regardless of the weather conditions.

## **Storm Control**

Equipped with an intelligent switch engine, the switch prevents Head-of-Line blocking problems on per-CoS basis for each port, thereby preventing transmitting packets from flooding into other parts of the network.

## **Energy Efficient Ethernet**

Energy Efficient Ethernet (EEE) provides a mechanism and standard for reducing energy consumption from redundant network traffic while maintaining the vital functions for keeping optimal network interface performance.

## **1.1. Key Features**

- 4-port PoE+ 10/100/1000 BaseT(X), 2 Gigabit SFP
- IEEE 802.3at Compliant (4 Ports at Full 30W)
- Max. 127 W power consumption
- Extreme temperature tolerance (-40 °C ~ 75 °C / -40 °F ~ 167 °F)
- Auto-MDI/MDI-X
- Auto-Negotiation
- Alarm control
- DIN-Rail Installation
- Redundant DC power
- 6 kV surge protection
- Up to 4 GV-IP Cameras support

## **1.2. Packing List**

1. GV-POE0410-E-V2
2. GV-POE0410-E-V2 Quick Installation Guide

### 1.3. Options

Optional devices can expand the capability and versatility of GV-POE0410-E-V2. Contact your dealer for more information.


<b>GV-LC and GV-LC10</b>	The SFP Transceiver is designed to plug into the SFP port of the GV-POE Switch and is the interface between the switch and optical fiber cables. This product complies with IEEE 802.3z 1000Base SX/LX standards. The SFP Transceiver is a hot swappable device; you can add or remove the device while maintaining power.
--------------------------	--

## 2. Hardware Description

This section mainly describes the hardware of this switch and provides its physical and functional overview.


### Dimensions

The dimensions of this switch are 120 x 55 x 108 mm (4.72" x 2.16" x 4.23").

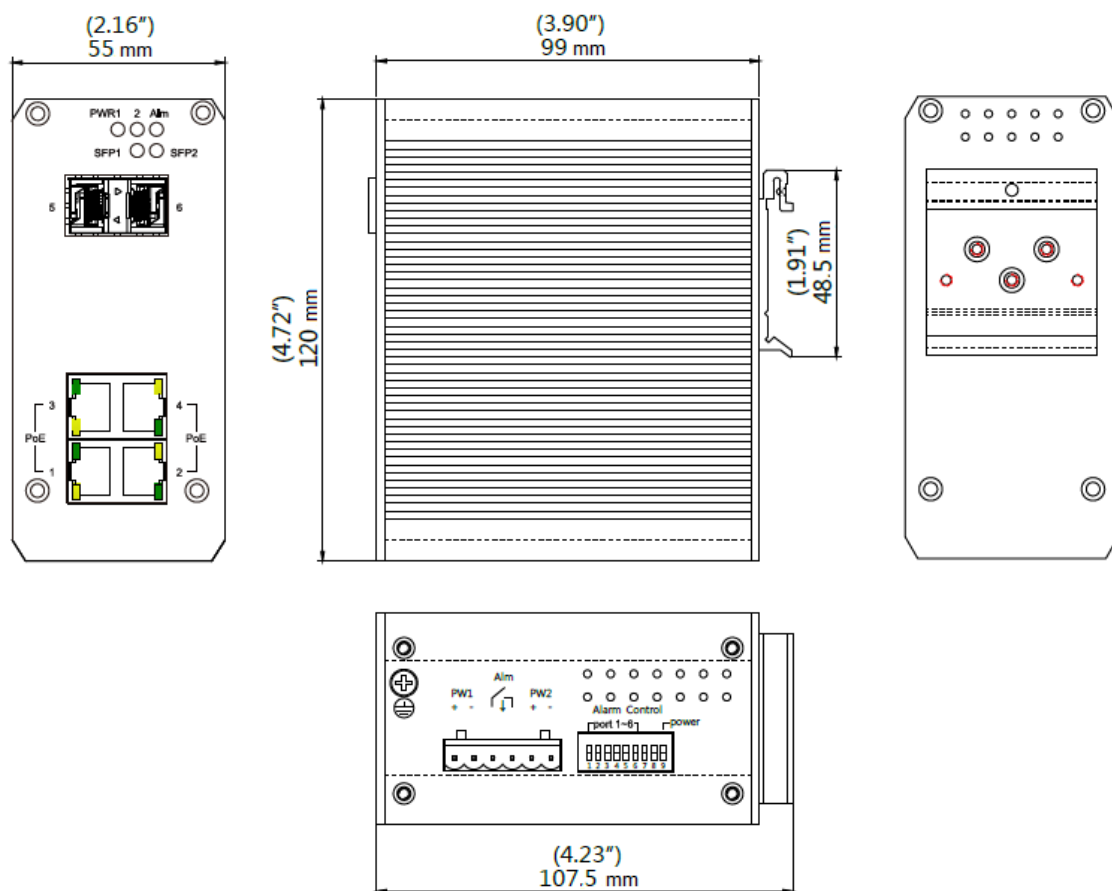




## Front Panel

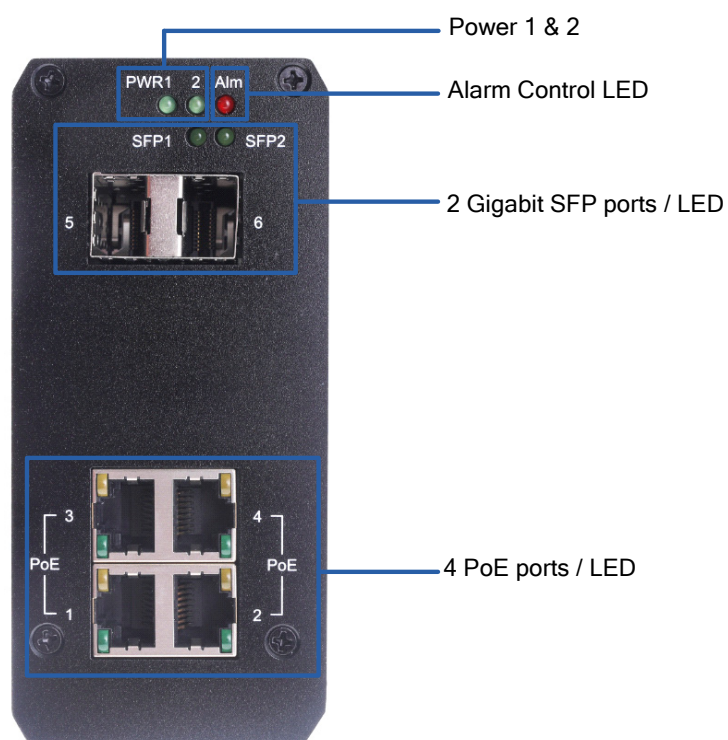

LED	Status	Description
PWR1	Green on	Power on
	Off	Power off
PWR2	Green on	Power on
	Off	Power off
Alm	Red on	Port link down or power failure
	Off	No event
Port 1~4	Green On	A network device is detected and links up
	Yellow On	A powered device is detected and links up
Port 5 & 6 (SFP)	Green on	The Gigabit SFP port links up

**Note:** If the power LEDs go off when the power cord is plugged in, a power failure might have occurred. Check the power output connection to see if there is any error at the power source. If you still cannot solve the problem, contact your local dealer for assistance.

## Bottom Panel

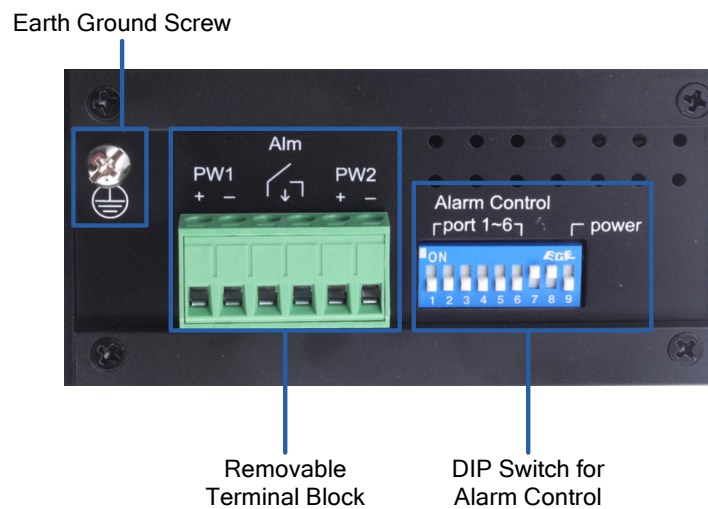

The GV-POE0410-E-V2 is featured with a redundant power supply for automatic power backup and supports alarms alerting for power and connection failure.

### Power Supply

With DC power cables wired to both **PW1** and **PW2** on the terminal block, one of the power supplies provides backup power to be automatically switched to when the other fails.

### Alarm Control

With an alarm device wired to **Alm** on the terminal block, when any of the power supplies fails or any of the port links fails, the alarm is triggered. Use the dip switch to enable or disable the alarm function.

<b>Terminal Block</b>	Power 1	Connect to DC power input
	Power 2	Connect to DC power input
	Alarm control	Connect to an alarm output
<b>Dip Switch</b>	Switch 1 ~ 6	Switch up/down to turn on/off the alarm of corresponding port links on the front panel.  Dip switch 1 ~ 4 corresponds to Port 1 ~ 4, and dip switch 5 & 6 correspond to SFP Ports 5 & 6 on the front panel.
	Switch 9	Switch up/down to enable/disable the alarm for power failure.

---



**Note:** 7 & 8 on the DIP Switch are currently non-functional.

---

### 3. DIN-Rail Mounting

A DIN-Rail clip is built into the rear body of the switch supporting EN 50022 standard DIN Rail. The dimensions of EN 50022 DIN Rail are included in the following diagram. Follow the steps below to mount the switch onto a DIN-Rail track.

1. Insert the upper end of the DIN-Rail clip into the back of the DIN-Rail track from its upper side
2. Lightly push the bottom of the DIN-Rail clip into the track.
3. Check if the DIN-Rail clip is tightly attached to the track.
4. To remove the switch from the track, reverse the steps above.

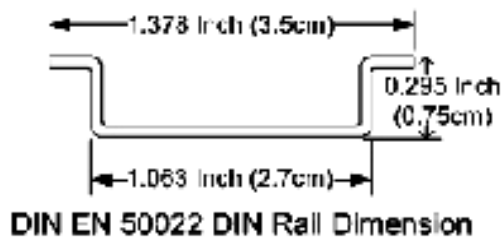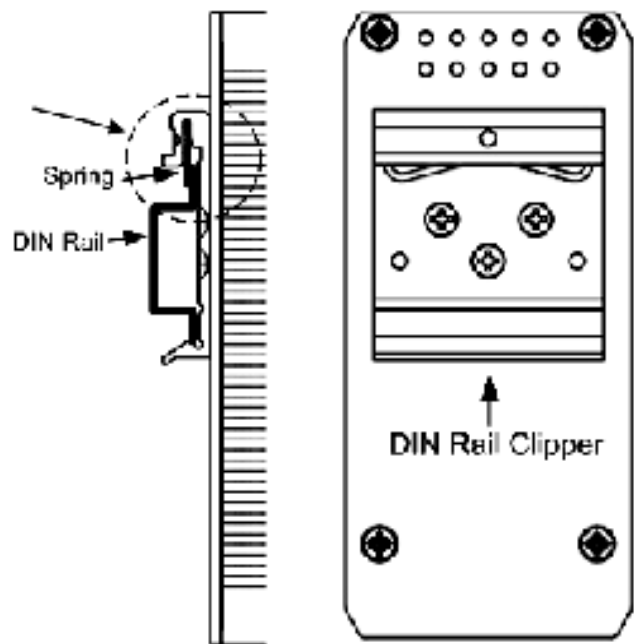


## 4. Hardware Installation

### 4.1. Wiring the DC Power Inputs


Before installing the power input, be sure the DC Power Supply is compliant with the standard power supply certification. The suggested power output voltage you can choose for IEEE 802.3af compliant PD is 48 V/DC, and 50 ~ 57 V/DC for IEEE 802.3at compliant PD.

#### Wire DC power cable to the connector

1. Insert the positive and negative wires respectively into the V+ and V- terminal block connectors.

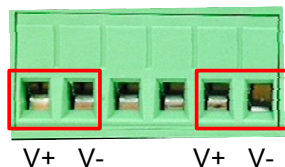

2. Tighten the wire-clamp screws to prevent the DC wires from being loosened.

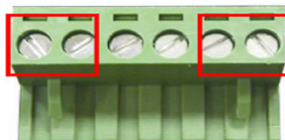



---

**Note:** The wire range of electric wire is 12 to 24 AWG.


---

#### Diagram of power input wiring

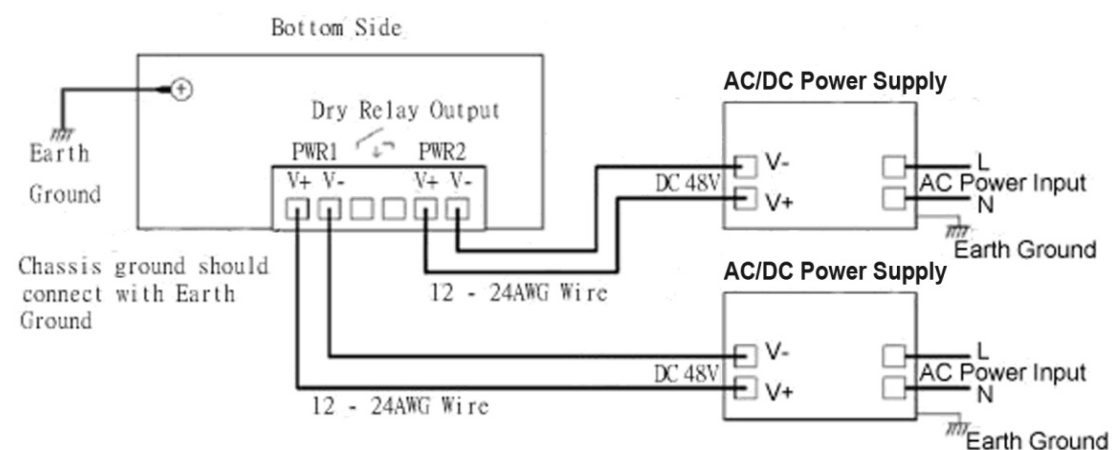


## 4.2. Wiring the Alarm Relay

The switch provides one dry relay output for power or port link event. The alarm relay is “open” by default and forms a close circuit upon event occurrence. The relay conductor has a maximum capability of 24 W. When it connects with a DC 24 V power source, the maximum current supported is 1 A. The following diagram shows how to create an alarm circuit.

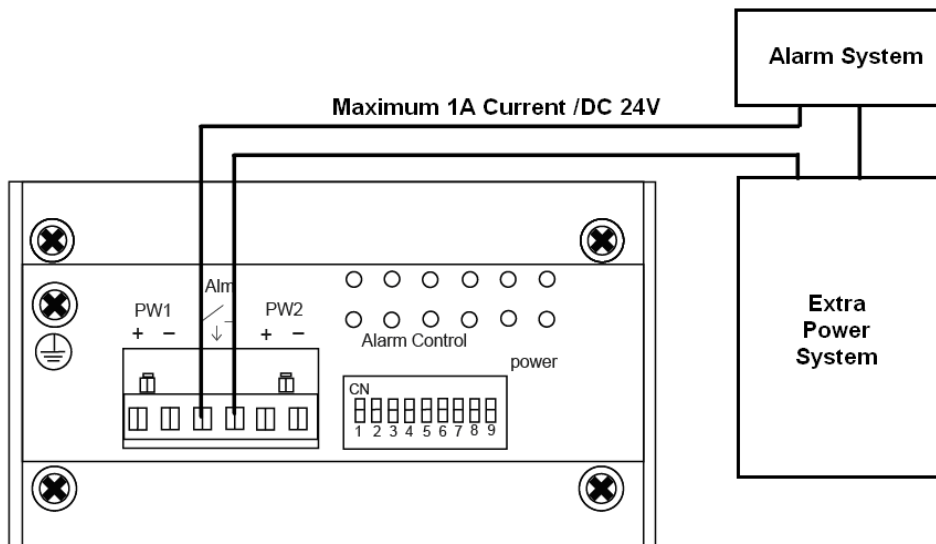

## 4.3. Wiring the Earth Grounding


In the real fields, there are a lot of automatic devices, such as AC motors, electric welding machines and power generators. Those devices will generate electromagnetic waves and interfere with communications of the switch. To prevent such interferences, the switch should be well earthed, as illustrated below.

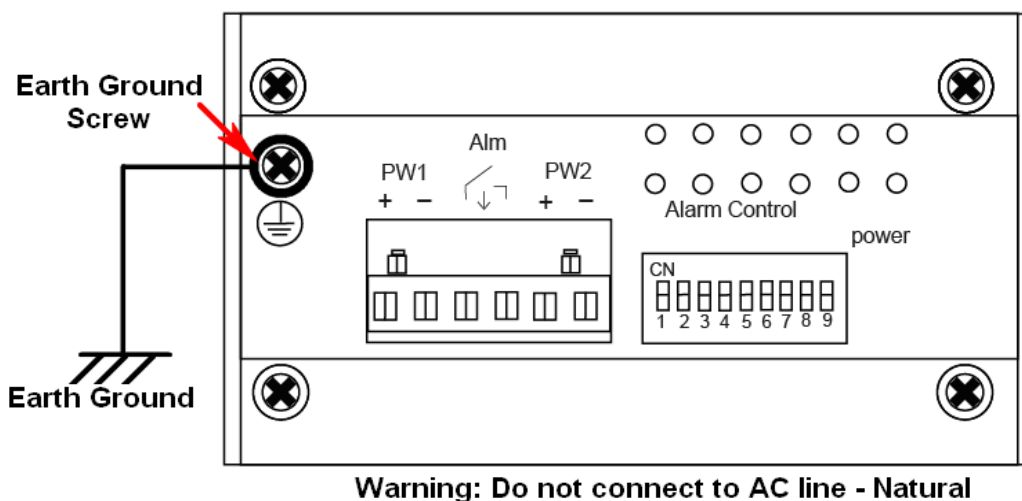

## 4.4. Enable the Event Alarm Function

The switch is equipped with one dry relay alarm output for alerting upon port link and/or power failures. This section introduces how to enable the event alarm DIP switch upon such events. The new configuration is activated immediately without system reset whenever the DIP SWITCH has been changed.

At the bottom of the switch, there is a 9-Pin DIP SWITCH for alarm control. By inserting the port and power wiring to set up the alarm, the DIP SWITCH of the intended Alarm is switched to “ON”. The relay output will form a short circuit for triggering the alarm upon port link and/or power failure events.

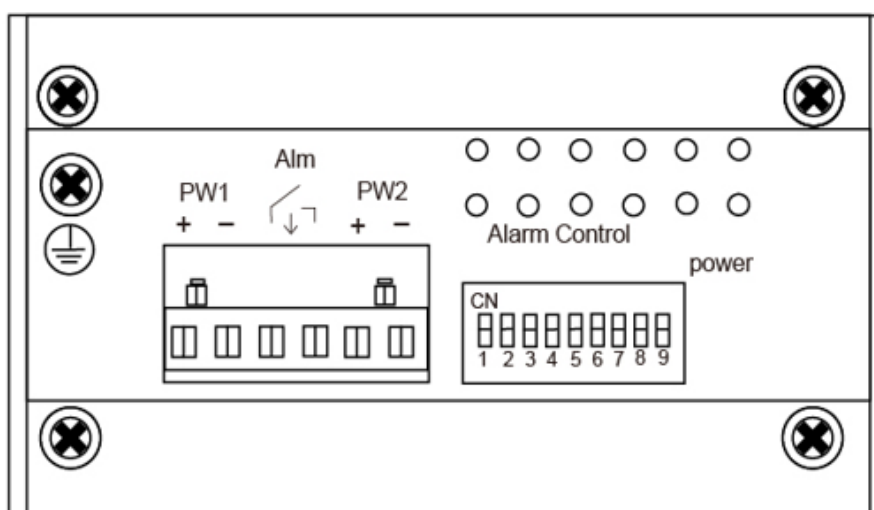

<b>Terminal Block</b>	Power 1	Connect to DC power input
	Power 2	Connect to DC power input
	Alarm control	Connect to an alarm output
<b>Dip Switch</b>	Switch 1 ~ 6	Switch up/down to turn on/off the alarm of corresponding port links on the front panel.  Dip switch 1 ~ 4 corresponds to Port 1 ~ 4, and dip switch 5 & 6 correspond to SFP Ports 5 & 6 on the front panel.
	Switch 9	Switch up/down to enable/disable the alarm for power failure.

---

**Note:** 7 & 8 on the DIP Switch are currently non-functional.

---

## 4.5. Cabling

UTP/STP cables are required for Port 1~4. Fiber transceiver is required for Port 5 & 6 (SFP).

### Ethernet cable Request

The wiring cable types for data transmission are as below.

- 10/100 BaseT(X) Cat. 5 UTP/STP
- 1000 BaseT Cat. 5e, 6 UTP/STP

The wiring cable types for data transmission and power delivery in any speed are Cat. 5 or above.

### SFP Installation

While installing the SFP transceiver, make sure the SFP type of the 2 ends are the same, with a transmission distance, wavelength and fiber cable meeting your request.

The way to connect the SFP transceiver is to Plug in SFP fiber transceiver first. The SFP transceiver has 2 plugs for fiber cable, one is TX (transmit) and the other is RX (receive). Cross-connect the transmit channel at each end to the receive channel at the opposite end.

---

**Note:** Select Ethernet cables with specifications suitable for your applications in setting up your systems. Ethernet cables are categorized into unshielded twisted-pair (UTP) and shielded twisted-pair (STP) cables. For systems with 100 Mbps transmission speed, Category 5, 6 Ethernet cables are the only ones with suitable specifications. You also need to make sure that the distance between each node cannot be longer than 100 meters (328 feet).

---